
## ADAPTEC, INC. AHA-1520, AHA-1522

Data bus: Size: Hard drives supported: Floppy drives supported:

16-bit, ISA Half-length, full-height card Up to seven SCSI devices Two 360KB, 720KB, 1.2MB or 1.44MB

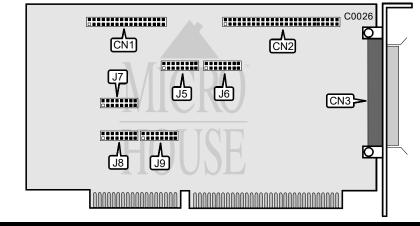

CONNECTIONS			
Function Location			
34-pin data cable connector-floppy drive	CN1		
50-pin SCSI cable connector-internal	CN2		
50-pin SCSI cable connector-external	CN3		

USER CONFIGURABLE SETTINGS				
Function	Location	Setting		
í Data transfer in DMA disabled	J5/jumper 1	open		
Data transfer in DMA enabled	J5/jumper 1	closed		
í Boot enabled (Intercept INT19 call)	J5/jumper 2	closed		
Boot disabled (INT19 normal)	J5/jumper 2	open		
í Synchronous negotiation enabled	J5/jumper 5	closed		
Synchronous negotiation disabled	J5/jumper 5	open		
í Disconnect by target / INT15 enabled	J5/jumper 6	closed		
Disconnect by target / INT15 disabled	J5/jumper 6	open		
í Factory configured - do not alter	J5/jumpers 7 & 8	open		

Continued on next page . . .

Copyright © 1991, 1992, 1993 by Micro House Int'l (800) 926-8299. Research Dept. (303) 443-389.

## Q2/92

## ADAPTEC, INC. AHA-1520, AHA-1522

... continued from previous page

USER CONFIGURABLE SETTINGS				
Function	Location	Setting		
í SCSI parity check enabled	J6/jumper 8	open		
SCSI parity check disabled	J6/jumper 8	closed		
í Floppy drive enabled	J7/jumper 1	closed		
Floppy drive disabled	J7/jumper 1	open		
í Floppy drive Interrupt is IRQ6	J7/jumper 6	closed		
Floppy drive Interrupt is IRQ10	J7/jumper 7	closed		
í Floppy drive-dual speed disabled	J7/jumper 8	open		
Floppy drive-dual speed enabled	J7/jumper 8	closed		
í I/O port address 340h	J9/jumper 5	open		
I/O port address 140h	J9/jumper 5	closed		

SCSI ADDRESS				
SCSI ID	J6/jumper 1	J6/jumper 2	J6/jumper 3	
0	open	open	open	
1	closed	open	open	
2	open	closed	open	
3	closed	closed	open	
4	open	open	closed	
5	closed	open	closed	
6	open	closed	closed	
í 7	closed	closed	closed	

		[	DMA CHANNE			
DMA	J6/6	J6/7	J8/1 & 5	J8/2 & 6	J8/3 & 7	J8/4 & 8
7	closed	closed	closed	open	open	open
6	open	closed	open	closed	open	open
5	closed	open	open	open	closed	open
íΟ	open	open	open	open	open	closed

	INTERRUPT REQUEST					
IRQ	J6/4	J6/5	J9/1	J9/2	J9/3	J9/4
IRQ9	open	open	open	open	open	closed
IRQ10	closed	open	open	open	closed	open
í IRQ11	open	closed	open	closed	open	open
IRQ12	closed	closed	closed	open	open	open

Continued on next page . . .

Copyright © 1991, 1992, 1993 by Micro House Int'I (800) 926-8299. BBS (303) 443-9957.

## ADAPTEC, INC. AHA-1520, AHA-1522

... continued from previous page

BIOS ADDRESS				
Address	J9/jumper 6	J9/jumper 7	J9/jumper 8	
í DC000h	closed	closed	closed	
C8000h	open	open	closed	
CC000h	open	closed	closed	
D8000h	closed	open	closed	
Disabled	N/A	N/A	open	

FLOPPY DRIVE DMA - J7					
	DRQ DACK				
DMA	Jumper 2	Jumper 3	Jumper 4	Jumper 5	
í DMA Channel 2	closed	open	closed	open	
DMA Channel 3	open	closed	open	closed	

MESSAGE SELECT Msg #0 - Adaptec Header Msg #1 - Jumper config. info. Msg #2 - SC il device info. Msg #3 - Boot Progress info. Msg #4 - Error messages					
Message	JP5/jumper 3	JP5/jumper 4			
í Msg #0 and #4	open				
Msg #0, #3 and #4	open	closed			
All messages displayed closed open					
Msg #4 only	closed	closed			

Copyright © 1991, 1992, 1993 by Micro House Int'I (800) 926-8299. Research Dept. (303) 443-389.