Device Type Mainboard

Processor Pentium Pro/Pentium II

Processor Speed 150/166/180/200/233/266/300MHz

Chip SetIntelVideo Chip SetNone

Maximum Onboard Memory 1GB (EDO supported)

Maximum Video Memory None

Cache 256/512KB (located on Pentium Pro/Pentium II CPU)


BIOS AMI, Award Dimensions 305mm x 244mm

I/O Options 32-bit PCI slots (5), floppy drive interface, IDE interfaces (2), parallel port, PS/2

mouse port, serial ports (2), IR connectors (2), USB connectors (2), ATX power

connector

NPU Options None

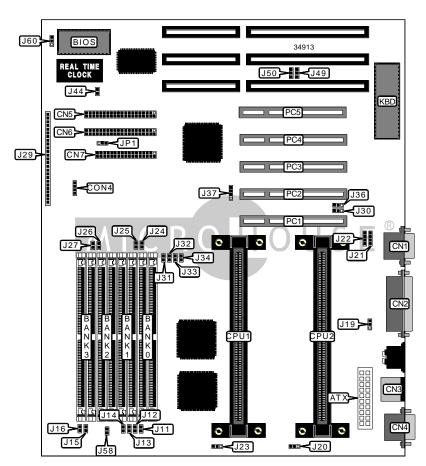

. . . continued from previous page

CONNECTIONS				
Purpose	Location	Purpose	Location	
ATX power connector	ATX	USB connector 1	J22	
Serial port 1	CN1	CPU fan power	J23	
Parallel port	CN2	Soft off power supply	J29/pins 1 & 2	
PS/2 mouse port	CN3	IR connector	J29/pins 6 - 11	
Serial port 2	CN4	IDE interface LED	J29/pins 13 - 16	
IDE interface 2	CN5	Power LED	J29/pins 18 - 20	
IDE interface 1	CN6	Reset switch	J29/pins 22 & 23	
Floppy drive interface	CN7	Speaker	J29/pins 24 - 27	
IR connector	CON4	Chassis fan power	J60	
Chassis fan power	J19	Wake on LAN connector	JP1	
CPU fan power	J20	32-bit PCI slots	PC1 – PC5	
USB connector 2	J21			

USER CONFIGURABLE SETTINGS				
Function	Label	Position		
í Factory configured - do not alter	J1	Unidentified		
í Factory configured - do not alter	J2	Unidentified		
í Factory configured - do not alter	J3	Unidentified		
í Factory configured - do not alter	J4	Unidentified		
í Factory configured - do not alter	J5	Unidentified		
í Factory configured - do not alter	J9	Unidentified		
í Factory configured - do not alter	J35	Unidentified		
í Factory configured - do not alter	J38	Unidentified		
í Factory configured - do not alter	J39	Pins 2 & 3 closed		
í Factory configured - do not alter	J42	Unidentified		
í Factory configured - do not alter	J43	Unidentified		
í CMOS memory normal operation	J44	Open		
CMOS memory clear	J44	Closed		
í Factory configured - do not alter	J45	Unidentified		
í Factory configured - do not alter	J46	Unidentified		
í Factory configured - do not alter	J47	Unidentified		
í Factory configured - do not alter	J48	Unidentified		
í Factory configured - do not alter	J49	Unidentified		
í Factory configured - do not alter	J50	Unidentified		

Continued on next page. . .

. . . continued from previous page

USER CONFIGURABLE SETTINGS (CON'T)				
Function	Label	Position		
í Factory configured - do not alter	J51	Unidentified		
í Factory configured - do not alter	J52	Unidentified		
í Factory configured - do not alter	J53	Unidentified		
í Factory configured - do not alter	J54	Unidentified		
í Factory configured - do not alter	J55	Unidentified		
í Flash BIOS voltage select 5v	J56	Pins 1 & 2 closed		
Flash BIOS voltage select 12v	J56	Pins 2 & 3 closed		
í Factory configured - do not alter	J57	Unidentified		
í Factory configured - do not alter	J58	Unidentified		
Note: The location of the following jumpers are unidentified: J1-J5, J9, J35, J38, J39, J42, J43, J45-J48, J51-J55, J57, J59.				

		SIMM CONFIGURATION	N	
Size	Bank 0	Bank 1	Bank 2	Bank 3
8MB	(2) 1M x 36	None	None	None
16MB	(2) 2M x 36	None	None	None
16MB	(2) 1M x 36	(2) 1M x 36	None	None
24MB	(2) 2M x 36	(2) 1M x 36	None	None
24MB	(2) 1M x 36	(2) 1M x 36	(2) 1M x 36	None
32MB	(2) 4M x 36	None	None	None
32MB	(2) 2M x 36	(2) 2M x 36	None	None
32MB	(2) 1M x 36	(2) 1M x 36	(2) 1M x 36	(2) 1M x 36
40MB	(2) 4M x 36	(2) 1M x 36	None	None
48MB	(2) 4M x 36	(2) 2M x 36	None	None
48MB	(2) 2M x 36	(2) 2M x 36	(2) 2M x 36	None
64MB	(2) 2M x 36	(2) 2M x 36	(2) 2M x 36	(2) 2M x 36
64MB	(2) 8M x 36	None	None	None
64MB	(2) 4M x 36	(2) 4M x 36	None	None
72MB	(2) 8M x 36	(2) 1M x 36	None	None
80MB	(2) 8M x 36	(2) 2M x 36	None	None
96MB	(2) 8M x 36	(2) 4M x 36	None	None
96MB	(2) 4M x 36	(2) 4M x 36	(2) 4M x 36	None
128MB	(2) 16M x 36	None	None	None
128MB	(2) 8M x 36	(2) 8M x 36	None	None

Continued on next page. . .

. . . continued from previous page

SIMM CONFIGURATION (CON'T)					
Size	Bank 0	Bank 1	Bank 2	Bank 3	
128MB	(2) 4M x 36	(2) 4M x 36	(2) 4M x 36	(2) 4M x 36	
136MB	(2) 16M x 36	(2) 1M x 36	None	None	
144MB	(2) 16M x 36	(2) 2M x 36	None	None	
152MB	(2) 16M x 36	(2) 1M x 36	(2) 1M x 36	(2) 1M x 36	
160MB	(2) 16M x 36	(2) 4M x 36	None	None	
176MB	(2) 16M x 36	(2) 2M x 36	(2) 2M x 36	(2) 2M x 36	
192MB	(2) 16M x 36	(2) 8M x 36	None	None	
192MB	(2) 8M x 36	(2) 8M x 36	(2) 8M x 36	None	
224MB	(2) 16M x 36	(2) 4M x 36	(2) 4M x 36	(2) 4M x 36	
256MB	(2) 32M x 36	None	None	None	
256MB	(2) 16M x 36	(2) 16M x 36	None	None	
256MB	(2) 8M x 36	(2) 8M x 36	(2) 8M x 36	(2) 8M x 36	
272MB	(2) 16M x 36	(2) 16M x 36	(2) 1M x 36	(2) 1M x 36	
280MB	(2) 32M x 36	(2) 1M x 36	(2) 1M x 36	(2) 1M x 36	
288MB	(2) 16M x 36	(2) 16M x 36	(2) 2M x 36	(2) 2M x 36	
304MB	(2) 32M x 36	(2) 2M x 36	(2) 2M x 36	(2) 2M x 36	
320MB	(2) 16M x 36	(2) 16M x 36	(2) 4M x 36	(2) 4M x 36	
320MB	(2) 16M x 36	(2) 8M x 36	(2) 8M x 36	(2) 8M x 36	
352MB	(2) 32M x 36	(2) 4M x 36	(2) 4M x 36	(2) 4M x 36	
384MB	(2) 16M x 36	(2) 16M x 36	(2) 16M x 36	None	
448MB	(2) 32M x 36	(2) 8M x 36	(2) 8M x 36	(2) 8M x 36	
512MB	(2) 32M x 36	(2) 32M x 36	None	None	
512MB	(2) 16M x 36	(2) 16M x 36	(2) 16M x 36	(2) 16M x 36	
640MB	(2) 32M x 36	(2) 16M x 36	(2) 16M x 36	(2) 16M x 36	
768MB	(2) 32M x 36	(2) 32M x 36	(2) 32M x 36	None	
1024MB	(2) 32M x 36	(2) 32M x 36	(2) 32M x 36	(2) 32M x 36	
Note: Board accept	ts EDO memory.				

SIMM VOLTAGE CONFIGURATION				
Voltage J13 J14 J15 J16				
3.3v	Closed	Closed	Open	Open
5v	Open	Open	Closed	Closed

SIMM VOLTAGE CONFIGURATION (CON'T)					
Voltage J24 J25 J26 J27					
3.3v	Closed	Closed	Open	Open	
5v	Open	Open	Closed	Closed	

Continued on next page. . .

. . . continued from previous page

CACHE CONFIGURATION

Note: 256KB/512KB cache is located on the Pentium Pro/Pentium II CPU.

CPU SPEED SELECTION (PENTIUM PRO)							
CPU speed	CPU speed Clock speed Multiplier J11 J12 J31 J32						
150MHz	60MHz	2.5x	Open	Open	Open	Closed	
166MHz	66MHz	2.5x	Closed	Open	Open	Closed	
180MHz	60MHz	3x	Open	Open	Closed	Open	
200MHz 66MHz 3x Closed Open Closed Open							
Note: Pins desi	Note: Pins designated should be in the closed position.						

CPU SPEED SELECTION (PENTIUM PRO, CON'T)					
CPU speed	Clock speed	Multiplier	J33	J34	J37
150MHz	60MHz	2.5x	Closed	Closed	3 & 4
166MHz	66MHz	2.5x	Closed	Closed	1 & 2
180MHz	60MHz	3x	Closed	Closed	3 & 4
200MHz	66MHz	3x	Closed	Closed	1 & 2

CPU SPEED SELECTION (PENTIUM II)						
CPU speed	Clock speed	Multiplier	J11	J12	J31	J32
200MHz	66MHz	3x	Closed	Open	Closed	Open
233MHz	66MHz	3.5x	Closed	Open	Open	Open
266MHz	66MHz	4x	Closed	Open	Closed	Closed
300MHz 66MHz 4.5x Closed Open Open Closed						
Note: Pins desi	Note: Pins designated should be in the closed position.					

CPU SPEED SELECTION (PENTIUM II, CON'T)						
CPU speed	Clock speed	Multiplier	J33	J34	J37	
200MHz	66MHz	3x	Closed	Closed	1 & 2	
233MHz	66MHz	3.5x	Closed	Closed	1 & 2	
266MHz	66MHz	4x	Open	Closed	1 & 2	
300MHz	66MHz	4.5x	Open	Closed	1 & 2	

SERIAL PORT SELECTION				
Setting	J30	J36		
Used as serial port	Pins 1 & 2 closed	Pins 1 & 2 closed		
Used as IR connector	Pins 2 & 3 closed	Pins 2 & 3 closed		