

5VIA3P
Jumper Setting

CPU Bus Frequency

	JCK 1	JCK 2	JCK3
50 MHz	2-3	2-3	2-3
55 MHz	2-3	2-3	1-2
60 MHz	1-2	2-3	2-3
66 MHz	2-3	1-2	2-3
75 MHz	1-2	2-3	1-2
83 MHz	2-3	1-2	1-2

CPU Frequency

	JBF 1	JBF 2	JBF 3
1.5 x	Open	Open	Open
2.0 x	Close	Open	Open
2.5 x	Close	Close	Open
3.0 x	Open	Close	Open
3.5 x	Open	Open	Open

CPU Frequency

JPW1- CPU Voltage Selector

CPU TYPE	Description	CPU Voltage	JPW1
Intel P54C	3.3 V	Vcore = 3.3 V V I/O = 3.3 V	1-2
AMD K5 Cyrix 6x86 M1	3.50 V	Vcore = 3.45 ~ 3.6V V I/O = the same	3-4
Intel P55C AMD K6 Cyrix M2/L	2.8 V	Vcore = 2.8 ~ 2.9V V I/O = 3.3 V	5-6
AMD K6	3.2 V	Vcore = 3.2 V I/O = 3.3 V	7-8

JV1 , JV2 - CPU Voltage Selector

Description	JV 1	JV 2
P54C	Open	1-2 , 3-4
P55C/Dual Voltage (Default)	1-2 , 3-4	Open