 


Model	MHz	JP9, JP10	ratio	JP16, JP17, JP18
Intel	PPro-150	JP9, JP10 1	x2.5	1 JP16 JP17 JP18
	PPro-166	JP9, JP10 1	x2.5	1 JP16 JP17 JP18
	PPro-180	JP9, JP10 1	x3	1 JP16 JP17 JP18
	PPro-200	JP9, JP10 1	x3	1 JP16 JP17 JP18

J5: PS/2 Mouse connector



J21: CPU cooling fan header



J6, J7: IR connector



IR connector recommended by Intel

IR connector recommended by HP

J22: System reset switch header

JP1: Keyboard grounding setting jumper.

To decrease the EMI radiation, we suggest you open this header after finishing the system assembly.

JP5: PS/2 mouse enable/disable setting jumper.

Short : PS/2 mouse enable (default)
Open : PS/2 mouse disable

J15: Hard disk LED header

J16: Green LED header

J17: Turbo LED header

J18: Speaker header

J19: Keyboard lock & power good LED header

JP12: Flash type select jumper

1~2 short : for 12V flash ROM use
2~3 short : for 5V flash ROM use (default)

JP13: Green switch header

System frequency (MHz)	JP9, JP10
50	JP9, JP10 1
55	JP9, JP10 1
60	JP9, JP10 1
66	JP9, JP10 1

Frequency ratio	JP16, JP17, JP18
x2	1 JP16 JP17 JP18
x2.5	1 JP16 JP17 JP18
x3	1 JP16 JP17 JP18
x3.5	1 JP16 JP17 JP18
x4	1 JP16 JP17 JP18