

924 System Board

Jumper Settings		
Jumper	Function	Pins
P1	Clock Select	1-2 Processor Clock 30 MHz 2-3 * Processor Clock 33 MHz
P3	DX4 Core Speed	1-2 DX4-Core runs at 2X clock speed 2-3 DX4-Core runs at 3X clock speed
P5	CMOS	1-2 * Secure CMOS Remove jumper for 10 seconds to clear password

