


Материнская плата AL576-Triton430VX

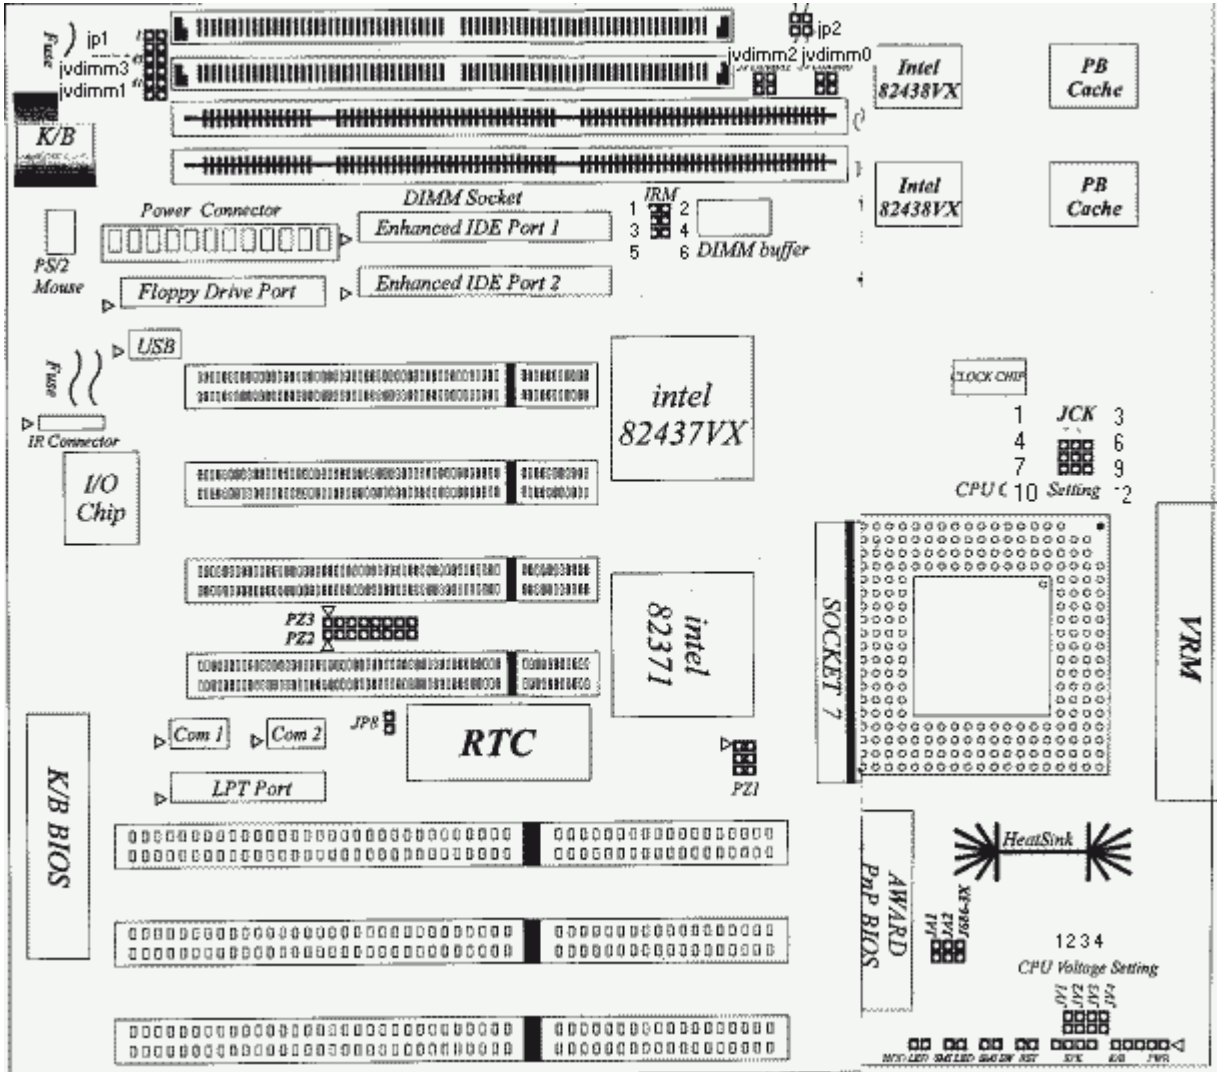

JV1 ON = 3.3V(Default)
JV2 ON = 3.4V
JV3 ON = 3.5V
JV4 Reserved

JP8 Short = Clear CMOS

SIMM AND DIMM Voltage Selected

JP1 ON SIMM 5V(Default)
JP2 ON SIMM 3.3V
JVDIMM0 ON BANK0 3.3V(Default)
JVDIMM1 ON BANK0 5V
JVDIMM2 ON BANK1 3.3V(Default)
JVDIMM3 ON BANK1 5V

FREQ JCK Setting

50Mhz 4-5 7-8 10-11
55Mhz 4-5 7-8 11-12
60Mhz 5-6 7-8 10-11
66Mhz 4-5 8-9 10-11(Default)

(Intel and AMD only)

MULT JA1 JA2 J686-3X
1.5x OFF OFF OFF
2x OFF ON OFF(Default)
2.5x ON ON OFF
3x ON OFF OFF

(IBM/Cyrix 6x86 only)

MULT JA1 JA2 J686-3X
2x OFF OFF OFF
3x OFF OFF ON

SIMM BANK SELECT

BANK JRM
0 1-3 2-4(Default)
1 3-5 4-6

INTEL CPU TYPE

Pentium75=50x1.5
Pentium90=60x1.5
Pentium100=66x1.5
Pentium110=55x2
Pentium120=60x2
Pentium133=66x2(Default)
Pentium150=60x2.5
Pentium166=66x2.5
Pentium180=60x3
Pentium200=66x3

Cyrix/IBM CPU

6X86P120+=50x2
6X86P133+=55x2
6X86P150+=60x2
6X86P166+=66x2
6X86P200+=50x3