

# Replacement Bezel Installation Instructions for DIGITAL AlphaStation™ 500/255 Series System Enclosures

#### **EK-ALSRE-IN. B01**

What's Included: Replacement bezel, bag of filler panels, and bag of DIGITAL AlphaStation model decals.

CAUTION: Always wear a grounded wrist strap when servicing internal components of this system.

### To open the system enclosure:


- 1. Turn off the system and all external peripheral devices.
- 2. Unplug the power cord from the wall outlet.
- 3. Wait at least 15 seconds to allow time for the power supply capacitors to fully discharge.
- Unlock the rear panel by turning the key ①
  counter-clockwise.
- Facing the rear of the system, remove the top cover screw with the 3/16-inch wide flat blade driver and remove the top cover. Slide cover rearward, then lift up .
- 6. Remove the two side panels.

## To install the replacement bezel:

- 1. Locate and remove parts bags containing filler panels and decals.
- 2. Remove the floppy drive tray.
- 3. Remove old front bezel. It is necessary to de-activate the locking tabs on the sides and in the center of the bezel before removing it.
- 4. Align the two locating pins **3** and the three center tabs **5** on the new bezel with the corresponding cut-outs in the chassis assembly.
- Push bezel onto chassis assembly, insuring all tabs are properly engaged.

# Reinstallation of components:

- 1. Reinstall the floppy drive tray.
- 2. Re-install the side panels.
- 3. Re-attach the top cover assembly.
- 4. Install the appropriate filler panels in the floppy drive bay.
- 5. Apply the appropriate DIGITAL AlphaStation label on the bezel in front of the CD-ROM.

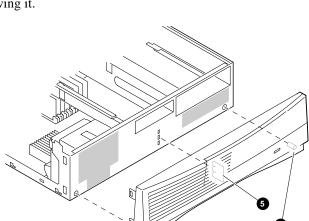

MA01404

#### April 1997

The information in this document is subject to change without notice and should not be construed as a commitment by Digital Equipment Corporation. Digital Equipment Corporation assumes no responsibility for any errors that might appear in this document. Copyright © 1997 Digital Equipment Corporation. Maynard, Massachusetts All Rights Reserved. The following are trademarks of Digital Equipment Corporation: AlphaStation, DEC, DIGITAL, and the DIGITAL logo. All other trademarks or registered trademarks are the property of their respective holders.