

## AP 5C

<i>Jumper</i>	<i>Position</i>	<i>Function</i>	
JP3,4	1-2	ECP DMA Channel 3	
	2-3	ECP DMA Channel 1	
JP5	1-2	Enable SMC 665GT Super I/O controller	
	2-3	Disable	
JP6	Closed	Enable PS/2 mouse	
	Open	Disable	
JP9-10	<b>JP9</b>	<b>JP10</b>	<b>CPU Type</b>
	1-2	1-2,3-4	P54-75
	2-3	1-2,3-4	P54C-90
	2-3	1-2,3-4	P54C-100
	2-3	3-4,5-6	P54C/CS/CQS-120
	2-3	3-4,5-6	P54C/CS/CQS-133
	2-3	5-6,7-8	P54CS/CQS-150
	2-3	5-6,7-8	P54CS/CQS-166
JP11	1-2,3-4	50 MHz host clock	
	1-2	60 MHz host clock	
	3-4	66 MHz host clock	
JP12	1-2	256K cache	
	2-3	512K cache	
JP13	1-2	5v Flash ROM	
	2-3	12v Flash ROM	
JP14,16	<b>JP14</b>	<b>JP16</b>	<b>SRAM</b>
	Off	On	3.3V SRAM
	On	Off	3.3V/5V Mix Mode SRAM
JP15	1-2	Normal	
	2-3	Clear CMOS	