



# AX6B PLUS

## User's Guide

Printed in Taiwan

PART NO.: 49.87826.001

DOC. NO.: AX6BP-1-E98010C



# AX6B Plus Mainboard

## User's Guide

**Document Number** : AX6BP-1-E98010C  
**Model and revision** : For AX6B Plus rev 1.xx  
**Manual version** : English, rev C  
**Release Date** : Oct 29, 1998

***More help for latest information:***

**Taiwan** <http://www.aopen.com.tw>

**USA** <http://www.aopen-usa.com>

<http://www.aopenusa.com>

<http://www.aopenamerica.com>

**Europe** <http://www.aopen.nl>

---

## Copyright

Copyright © 1998 by this company. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, manual or otherwise, without the prior written permission of this company.

---

## Disclaimer

This company makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims any warranties, merchantability or fitness for any particular purpose. Any software described in this manual is sold or licensed "as is". Should the programs prove defective following their purchase, the buyer (and not this company, its distributor, or its dealer) assumes the entire cost of all necessary servicing, repair, and any incidental or consequential damages resulting from any defect in the software. Further, this company reserves the right to revise this publication and to make changes from time to time in the contents hereof without obligation to notify any person of such revision or changes.

Intel and Pentium are registered trademarks of Intel Corporation.

XT/AT is a registered trademark of International Business Machines Corporation.

AMI is a registered trademark of American Megatrends Inc.

AWARD is a registered trademark of Award Software Inc.

Sound Blaster is a registered trademark of Creative Technology Ltd in the United States and certain other countries.

Sound Blaster-LINK and SB-LINK are trademarks of Creative Technology Ltd.


Other brand and product names are trademarks and/or registered trademarks of their respective holders.

---

## FCC Class B Radio Frequency Declaration of Conformity

This equipment has been tested and found to comply with the limits for a Class B Subassembly -CPU Board device, pursuant to Part 15 of FCC Rules. Operation is subject to the following two conditions: 1. This device may not cause harmful interference, and 2. This device must accept any interference received, including interference that may cause undesired operation.

Equipment Classification : FCC Class B Subassembly - CPU Board  
Type of Product : Intel Pentium II Micro ATX Motherboard  
Chipset(s) : Intel 82440BX

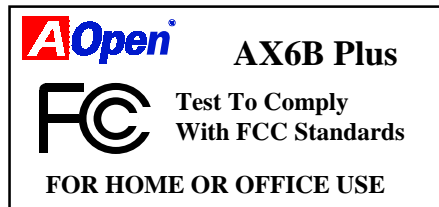

The limits of FCC Part 15 Class B are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/television technician for help.

**Notice 1:**

The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Notice 2:**

Shielded interface cables, if any, must be used in order to comply with emission limits.

---

## Organization

Chapter 1, **Overview**, covers the introduction and specifications of the system board and special features.

Chapter 2, **Hardware Installation**, describes hardware jumpers, connectors and memory configuration. There are user friendly drawings to locate jumper and connector.

Chapter 3, **AWARD BIOS**, explains the system BIOS and tells how to configure the system by setting the BIOS parameters.

Appendix A, **Frequently Asked Question**, collects most frequently asked question of this product.

Appendix B, **Troubleshooting Guide**, includes first aid information you need if you meet trouble, the WWW address and worldwide service telephone/fax are also included.

Appendix C, **Jumper Table Summary**, gives you a tabular summary of the jumper settings discussed in Chapter 2.

---

## Conventions

The following conventions are used in this manual:

Text entered by user, default settings, recommended selections      Represent text input by the user, default settings and recommended selections

<Enter>, <Tab>,<Ctl>, <Alt>, <Ins>, <Del>, etc      Represent the actual keys that you have to press on the keyboard.



**Note:**  
Gives bits and pieces of additional information related to the current topic.



**Warning:**  
Alerts you to any damage that might result from doing or not doing specific actions.



**Caution:**  
Suggests precautionary measures to avoid potential hardware or software problems.



**Important:**  
Reminds you to take specific action relevant to the accomplishment of the procedure at hand.



**Tip:**  
Tells how to accomplish a procedure with minimum steps through little shortcuts.



---

## Contents

### Chapter 1 Overview

1.1 Specifications.....	4
1.2 Suspend to Hard Drive .....	6
1.3 Zero Voltage Modem Wake Up .....	9
1.4 System Voltage Monitoring.....	11
1.5 Fan Monitoring .....	11
1.6 CPU Thermal Protection .....	12
1.7 Multi-language BIOS.....	12
1.8 Battery-less Design .....	13
1.9 Sound Blaster Link .....	13

### chapter 2 Hardware Installation

2.1 Jumper and Connector Locations .....	2
2.2 Jumpers .....	4
2.2.1 Selecting the CPU Frequency .....	4
2.2.2 Setting the CPU Voltage.....	5
2.2.3 Clearing the CMOS.....	5
2.2.4 AGP Ratio .....	6
2.3 Connectors .....	7
2.3.1 Power Cable .....	7
2.3.2 ATX Soft-Power Switch Connector.....	7
2.3.3 Fan 8	
2.3.4 PS/2 Mouse .....	8
2.3.5 Keyboard.....	9
2.3.6 Serial Devices (COM1/COM2).....	9
2.3.7 Printer .....	10
2.3.8 USB Device.....	10
2.3.9 Floppy Drive.....	11
2.3.10 IDE Hard Disk and CD ROM .....	11

2.3.11	SCSI Devices.....	12
2.3.12	Hard Disk LED .....	13
2.3.13	SB-LINK .....	13
2.3.14	Panel Connector .....	14
2.3.15	IrDA Connector .....	15
2.3.16	Modem Wake-up Connector.....	16
2.3.17	LAN Wake-up Connector.....	16
<b>2.4</b>	<b>Configuring the System Memory.....</b>	<b>17</b>

### **chapter 3 Award BIOS**

<b>3.1</b>	<b>Entering the Award BIOS Setup Menu .....</b>	<b>2</b>
<b>3.2</b>	<b>Standard CMOS Setup.....</b>	<b>3</b>
<b>3.3</b>	<b>BIOS Features Setup .....</b>	<b>6</b>
<b>3.4</b>	<b>Chipset Features Setup.....</b>	<b>11</b>
<b>3.5</b>	<b>Power Management Setup.....</b>	<b>16</b>
<b>3.6</b>	<b>PNP/PCI Configuration Setup.....</b>	<b>23</b>
<b>3.7</b>	<b>Load Setup Defaults .....</b>	<b>28</b>
<b>3.8</b>	<b>Load Turbo Defaults.....</b>	<b>28</b>
<b>3.9</b>	<b>Integrated Peripherals .....</b>	<b>29</b>
<b>3.10</b>	<b>Password Setting.....</b>	<b>34</b>
<b>3.11</b>	<b>IDE HDD Auto Detection .....</b>	<b>34</b>
<b>3.12</b>	<b>Save &amp; Exit Setup .....</b>	<b>34</b>
<b>3.13</b>	<b>Load EEPROM Default .....</b>	<b>35</b>
<b>3.14</b>	<b>Save EEPROM Default.....</b>	<b>35</b>
<b>3.15</b>	<b>Exit without Saving.....</b>	<b>35</b>
<b>3.16</b>	<b>BIOS Flash Utility.....</b>	<b>36</b>

<b>Appendix A</b>	<b>Frequently Asked Question</b>
<b>Appendix B</b>	<b>Troubleshooting</b>
<b>Appendix C</b>	<b>Jumper Table Summary</b>

---

## *Chapter 1*

# Overview

AX6B Plus is a new generation Pentium II based system board that features an **onboard Adaptec AIC-7880 SCSI chip**. It utilizes Intel **82440BX** AGPset on **ATX** PCI/ISA platform. This AGPset is designed for Pentium II CPU, and supports new architectures such as high speed AGP graphic port, SDRAM, Ultra DMA/33, Bus master IDE and USB port. It has four Dual in-line Memory Module (DIMM) that allow to install SDRAM memory and expand up to a maximum of **1GB**. Since the cache is on the Pentium II CPU card (connector SLOT1), there is no second level cache onboard. Also, AX6B Plus uses **2M bit Flash ROM BIOS** to reserve for future new functions.

Not only above features, AX6B Plus also implements many special features as following.

**Jumper-less Design** Pentium II VID signal and SMBus clock generator provide CPU voltage auto-detection and allows user to set CPU frequency through CMOS setup, no jumper or switch is needed. The correct CPU information is saved into EEPROM, with these technologies, the disadvantages of Pentium base jumper-less design are eliminated. There will be no worry of wrong CPU voltage detection and no need to re-open the housing if CMOS battery loss. The only jumper left is to clear CMOS, which is a safety hook if you forget the password.

**Battery-less Motherboard** AX6B Plus implements EEPROM and special circuit (patent applied) that allows you to save your current CPU and CMOS Setup configurations without the need of battery. The RTC (real time clock) can also keep running as long as power cord is plugged. If you lose your CMOS data by accident, you can just reload the CMOS configurations from EEPROM and the system will recover as usual.

**Suspend To Hard Drive** "Immediately" turns on system and goes back to the original screen before power down. You can resume your original work directly from hard disk without go through the Win95 booting process and run your application again. Suspend to Hard Drive saves your current work (system status, memory image) into hard disk. Note that you have to use VESA

## Overview

---

compatible PCI VGA, Sound Blaster compatible sound card with APM driver, for Suspend to Hard Drive to work properly.

**Zero Voltage Modem Wake Up** In conjunction with ATX soft power On/Off, it is possible to have system totally power off and wakeup to automatically answer a phone call such as answering machine or to send/receive fax. The most important break through is not only external box modem but also internal modem card can be used to support Modem Wake Up. The AX6B Plus and MP56 internal modem card implement special circuit (patent applied) to make sure the modem card work properly without any power.

**LAN Wake Up** This feature is very similar as Modem Wake Up, but it is through local area network. To use LAN Wake Up function, you must have a network card that supports this feature and also need to install a network management software, such as ADM.

**RTC Wake Up Timer** The Wake Up Timer is more like an alarm, which wakes up and power on your system at a pre-defined time for specific application. It can be set to wake up everyday or on specific date within a month. The date/time accurate is second.

**High Efficient Synchronous Switching Regulator** Most of the current switching designs are Asynchronous mode, which from the technical point of view, still consumes very high power as well as heat. AX6B Plus implements high efficient synchronous switching design that the temperature of MOS FET is far less than Schottky diode of Asynchronous design.

**Over Current Protection Circuit** The Over Current Protection was very popular implemented on the Baby AT or ATX 3.3V/5V/12V switching power supply. But unfortunately, the new generation Pentium II CPU uses different voltage that have regulator to transfer 5V to CPU voltage (for example, 2.8V), and make 5V over current protection useless. AX6B Plus with switching regulator onboard support CPU over current protection, in conjunction with 3.3V/5V/12V power supply provide the full line over current protection.

**CPU and Housing Fan Monitoring** AX6B Plus has one more "fan monitoring" function to prevent system overheat. There are two fan connectors, one is for CPU and the other can be an extra housing fan. The system will report and alarm fan malfunction though utility software such as Hardware Monitor utility (Small Icon for Hardware Monitoring).

**CPU Thermal Protection** AX6B Plus has a special thermal detection circuit to have warning through application software when the temperature is higher than a predefined value.

**System Voltage Monitoring** Further more, AX6B Plus implements a voltage monitoring system, As you turn on your system, this smart design will continue to monitor your system working voltage. If any of the system voltage is over the component's standard. There will be alarm though utility software such as

## Overview

---

Hardware Monitor utility (Small Icon for Hardware Monitoring) for a warning to user.

**Full-range CPU core voltage** This motherboard supports the CPU core voltage from 1.3V to 3.5V, that can be applied to various CPU type in future.

**FCC DoC certificate** AX6B Plus has passed FCC DoC test. The radiation is very low, you can use any kind of housing.

**Sound Blaster Link** The SB-LINK connector can be used to link Creative PCI sound card. If you have a Creative PCI sound card installed, it is necessary to link the card to this connector for compatibility issue under DOS environment.

**Powerful utility softwares supported** AOpen Bonus Pack bundled CD contains many useful utilities, such as ADM (Advanced Desktop Manager), AOchip, Hardware Monitor utility, AcePhone, EasyAxess, Suspend to Hard Drive utility, and BIOS flash utility.

**Multi-language BIOS** This breakthrough will help you set BIOS items without the language barrier.

# Overview

---

## 1.1 Specifications

<b>Form Factor</b>	ATX
<b>Board Size</b>	305 mm x 244 mm
<b>CPU</b>	Intel Pentium II Processor
<b>System Memory</b>	SDRAM or Registered SDRAM, 168-pin DIMM x4, maximum 1GB.
<b>Second-level Cache</b>	On the CPU card (Slot1 connector)
<b>Chipset</b>	Intel 82440BX AGPset
<b>Expansion Slots</b>	ISA x3, PCI x4 and AGP x1
<b>Serial Port</b>	Two serial ports UART 16C550 compatible, and the 3rd UART for IR function.
<b>Parallel Port</b>	One parallel port supports standard parallel port (SPP), enhanced parallel port (EPP) or extended capabilities port (ECP).
<b>Floppy Interface</b>	Floppy interface supports 3.5 inches drives with 720KB, 1.44MB or 2.88MB format or 5.25 inches drives with 360KB, 1.2MB format
<b>IDE Interface</b>	Dual-channel IDE interface support maximum 4 IDE hard disks or CDROM, mode 4 , bus master hard disk drives and Ultra DMA/33 mode hard drives are also supported.
<b>SCSI</b>	Adaptec AIC-7880 onboard.
<b>USB Interface</b>	Two USB ports supported by USB bracket, the BIOS also supports USB driver to simulate legacy keyboard.
<b>PS/2 Mouse</b>	Mini-Din PS/2 mouse connector onboard.
<b>Keyboard</b>	Mini-Din PS/2 keyboard connector onboard.
<b>RTC and Battery</b>	RTC within Intel PIIX4E chipset. Lithium (CR-2032) battery is an option, no battery is needed if power cord is plugged.
<b>BIOS</b>	AWARD Plug-and-Play, 2M bit Flash ROM BIOS. Multi-language versions supported.

## Overview

<b>Suspend to Hard Drive</b>	Supported by BIOS, save your work to hard disk and resume within a very short time. VESA compatible VGA and Sound Blaster compatible sound card required.
<b>Zero Voltage Modem Wake Up</b>	Special circuit (patent applied) to support modem ring wake up by external box modem or internal AOpen F56/MP56 modem card.
<b>LAN Wake Up</b>	By using a network card that supports this feature and a network management software (such as ADM), you can wake up a system through a local area network.
<b>RTC Wake Up Timer</b>	Program the date/time to wake up your system.
<b>Synchronous Switching Regulator</b>	High efficient synchronous switching regulator.
<b>Over-current Protection</b>	CPU core voltage over-current protection to prevent any accident short circuit.
<b>CPU Thermal Protection</b>	Warning when CPU temperature is overheat. Option for OEM to have sensor at CPU heatsink.
<b>Fan Monitoring</b>	Two 3-pin fan connectors, warning when CPU or housing fan is malfunction.
<b>System Voltage Monitoring</b>	Warning when system voltage (5V,12V,3.3V and CPU core) are abnormal
<b>SB-LINK</b>	The SB-LINK connector can be used to link Creative PCI sound card.

# Overview

---

## 1.2 Suspend to Hard Drive

Suspend to Hard Drive saves your current work (system status, memory and screen image) into hard disk, and then the system can be totally power off. Next time, when power is on, you can resume your original work directly from hard disk within few second without go through the Win95 booting process and run your application again. If your memory is 16MB, normally, you need to reserve at least 16MB HDD space to save your memory image. Note that you have to use VESA compatible PCI VGA (AOpen PV70/PT70), Sound Blaster compatible sound card and sound driver that supports APM (AOpen AW32/AW35) for Suspend to Hard Drive to work properly. Of course, we recommend to use AOpen products for best compatibility.

To use Suspend to Hard Drive:

1. Go into BIOS setup, Power Management à Suspend Mode Option, select "Suspend to Disk".
2. Go into BIOS setup, PNP/PCI Configuration à PnP OS Installed, select "No". This can give BIOS the capability to allocate system resources for Suspend to Hard Drive.
3. Bootup your system into DOS command prompt. If you are Win'95 user, Please restart your Windows 95 under "Command Prompt" by pressing "F8" while system shows "Windows 95 Starting ...". Choose "Safe Mode Command Prompt Only" from selection so that system will start in DOS command prompt.
4. Copy AOZVHDD.EXE to the root directory of your C: drive.
5. Option 1: Use **/file** switch (applied to FAT16 file system):  
Please use following command to create a hidden file in the root directory of your hard disk for Suspend to Hard Drive to save the system status and memory image.

```
C:>AOZVHDD /c /file
```

Please make sure that you have enough continuous HDD space for creating this hidden file. For example, if you have 32MB of system memory and 4MB of VGA memory, you need at least 36MB (32MB + 4MB) of continuous HDD space. If AOZVHDD failed to allocate the HDD space, you may run "DEFRAG" Utility or "Disk Defragmenter" which come with MS-DOS or Win'95 to free HDD space.



## Overview

---

Option2: Use **/partition** switch (applied to FAT16/FAT32 file system):

To create a separate partition for Suspend to Hard Drive, please make sure you have reserved a free partition. We suggest you reserve the free partition which space is appropriate for your future memory expansion. For example, if you have 32MB of system memory and 4MB of VGA memory currently, but you plan to upgrade system memory to 64MB in the near future, then you may reserve a 68MB (64MB+4MB) space by using a disk utility (such as fdisk). Next, use following command to create a suspend partition:

```
C:>AOZVHDD /c /partition
```

If there is no extra free partition and you don't want your data lost, please do not use this partition method.

6. After creating above partition or hidden file, please reboot your system.
7. Push suspend switch (momentary mode) or use Win95 Suspend icon to force system goes into Suspend to Hard Drive mode and then turn system power off by power switch of your power supply.
8. Next time when you turn on your system, it will resume to your original work automatically.



**Warning:** Note that Intel Bus Master and Ultra DMA/33 IDE driver are not fully compatible with Suspend to Hard Drive function, installing these drivers may cause the system unstable. Under this situation, please uninstall the drivers.

**Warning:** This function does not support SCSI hard disks.

## Overview

---



**Tip:** The following VGA cards have been tested & recognized as VESA compatible VGA device.

AOpen PV90 (Trident 9680)  
AOpen PT60 (S3 Virge/BIOS R1.00-01)  
AOpen PV60 (S3 Tiro64V+)  
AOpen PT70 (S3 Virge/DX)  
ProLink Trident GD-5440  
ProLink Cirrus GD-5430  
ProLink Cirrus GD-5446  
ATI Mach 64 GX  
ATI 3D RAGE II  
Diamond Stealth64D (S3 868)  
Diamond Stealth64V (S3 968)  
KuoWei ET-6000  
ATI 3D RAGE PRO 2x (AGP)  
PLOTECH 3D IMAGE 9850 (AGP)  
CARDEX S3 Virge/GX (AGP)



**Tip:** The following sound cards have been tested OK for Suspend to Hard Drive.

AOpen AW32  
AOpen AW35  
AOpen MP32  
Creative SB 16 Value PnP  
Creative SB AWE32 PnP  
ESS 1868 PnP

If your sound card can not work after resume from Suspend to Hard Drive, check your sound card vendor see if there is driver to support APM, and install it again.




**Note:** The USB function has not been tested for Suspend to Hard Drive. If you find any unstable problem, please go into BIOS, Integrated Peripherals à USB Legacy Support. Disable the USB Legacy function.

## 1.3 Zero Voltage Modem Wake Up

The Modem Wake Up discussed here is to wakeup from true power off (identified by fan of power supply is off), This motherboard still supports traditional green PC suspend mode but it is not discussed here.

With the help ATX soft power On/Off, it is possible to have system totally power off (The traditional suspend mode of power management function does not really turn off the system power supply), and wakeup to automatically answer a phone call such as answering machine or to send/receive fax. You may identify the true power off by checking fan of your power supply. Both external box modem and internal modem card can be used to support Modem Wake Up, but if you use external modem, you have to keep the box modem always power-on. AOpen AX6B Plus and internal modem card implement special circuit (patent applied) and make sure the modem card works properly without any power. We recommend you choose AOpen modem card (MP56) for Modem Wake Up applications.

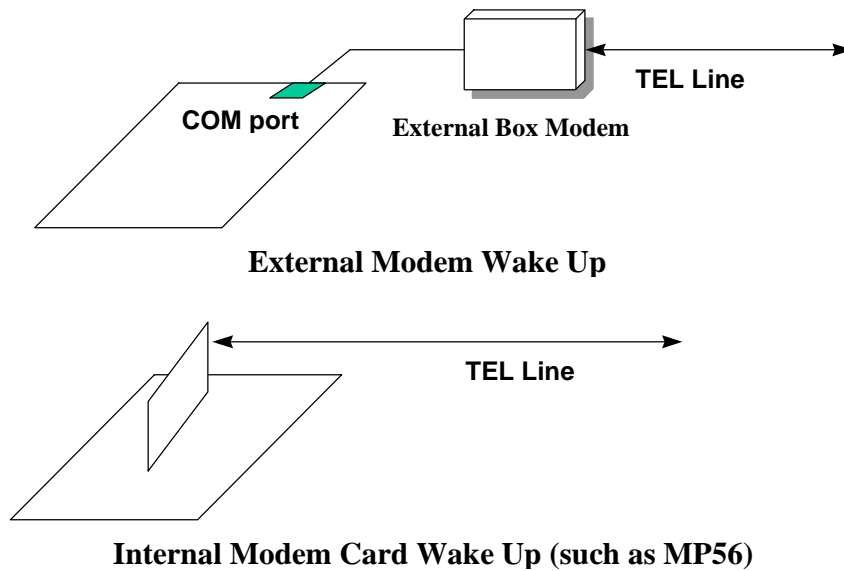

## Overview

---

For Internal Modem Card (AOpen MP56):

1. Go into BIOS setup , Power Management à Modem Wake Up, select Enable.
2. Setup your application, put into Windows 95 StartUp or use Suspend to Hard Drive function.
3. Turn system power off by soft power switch.
4. Connect 4-pin Modem Ring-On cable from MP56 RING connector to AX6B Plus connector WKUP.
5. Connect telephone line to MP56. You are now ready to use Modem Ring-On.

For External Box Modem:

1. Go into BIOS setup , Power Management à Modem Wake Up, select Enable.
2. Setup your application, put into Windows 95 StartUp or use Suspend to Hard Drive function.
3. Turn system power off by soft power switch.
4. Connect RS232 cable of external box Modem to COM1 or COM2.
5. Connect telephone line to external box Modem. Turn on Modem power (you must keep Modem power always on). You are now ready to use Modem Ring



**Tip:** External modem wake up signal is detected through COM1 or COM2. Internal modem card wake up signal is detected through cable from connector RING (on modem card) to WKUP (on mainboard).

**Tip:** You can combine Suspend to Hard Drive, Modem Wake Up and the software Acephone for the best solution of answering machine or to send/receive fax.




**Note:** If you use external modem, the power of external modem must be kept on to receive signal from telephone line. Internal modem card has no such limitation.

## 1.4 System Voltage Monitoring

This motherboard implements a voltage monitoring system. As you turn on your system, this smart design will continue to monitor your system working voltage. If any of the system voltage is over the component's standard. There will be alarm through application software such as Hardware Monitor utility for a warning to user. System voltage monitoring function monitors CPU core voltage. It is automatically implemented by BIOS and Hardware Monitor utility (the file name is like aohw100.exe, where 100 means the version number), no hardware installation is needed.

## 1.5 Fan Monitoring

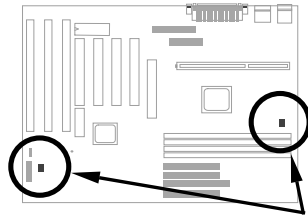

There are two fan connectors, one is for CPU, the other can be a housing fan. The fan monitoring function is implemented by connecting fan to 3-pin fan connector **CPUFAN** or **FAN** and installing Hardware Monitor utility.




**Note:** You need 3-pin fan that supports SENSE signal for fan monitoring function to work properly.

# Overview

---

## 1.6 CPU Thermal Protection

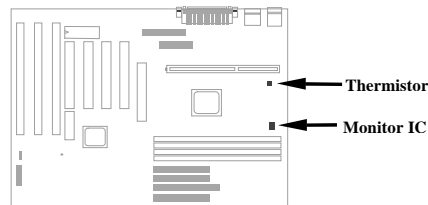

This mainboard implements special thermal protection circuits. When temperature is higher than a predefined value, there will be warning through application software such as Hardware Monitor utility to notify user. It is automatically implemented by BIOS and Hardware Monitor utility, no hardware installation is needed.

For OEM customer who needs more accurate temperature, AX6B Plus reserves an option to use special CPU heatsink with thermal sensor on it. The CPU thermal sensor should be connected to **CN1**.


## 1.7 Multi-language BIOS

For giving AOpen's worldwide users the best support, AOpen software team made every effort to overcome all difficulties and successfully develop a method to provide multi-language BIOS.

You may download and reflash a specified BIOS version from AOpen 's web site (For example, Chinese). After entering BIOS Setup, you can switch to another language by pressing F9. Then pressing F9 again will let you return to English screen.

This breakthrough will help you set BIOS items without the language barrier.


## 1.8 Battery-less Design

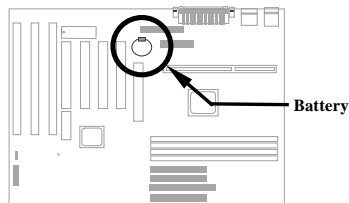

To preserve the earth, AOpen AX6B Plus implements the world first battery-less motherboard design. There is no need to have battery for RTC (real time clock) and CMOS Setup as long as ATX power cable is plugged. In case of the AC power is shutdown or power cord is removed by accident, the CMOS Setup and system configuration can be restored from EEPROM, only the system clock needed to be re-set to current date/time.

For the convenience of end user, AX6B Plus still shipped with one Lithium (CR-2032) battery. If you prefer to use battery, you can still Insert it into battery socket. The RTC will still keep running even power cord is removed.

## 1.9 Sound Blaster Link

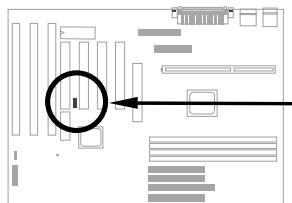

AX6B Plus implements a SB-LINK connector to support Creative-compatible PCI sound card. If you have a Creative-compatible PCI sound card installed, it is necessary to link the card to SB-LINK connector for compatibility issue under DOS environment.

---

## Chapter 2

# Hardware Installation

This chapter gives you a step-by-step procedure on how to install your system. Follow each section accordingly.



**Caution:** *Electrostatic discharge (ESD) can damage your processor, disk drives, expansion boards, and other components. Always observe the following precautions before you install a system component.*


1. *Do not remove a component from its protective packaging until you are ready to install it.*
2. *Wear a wrist ground strap and attach it to a metal part of the system unit before handling a component. If a wrist strap is not available, maintain contact with the system unit throughout any procedure requiring ESD protection.*



# Hardware Installation

## 2.1 Jumper and Connector Locations

The following figure shows the locations of the jumpers and connectors on the system board:

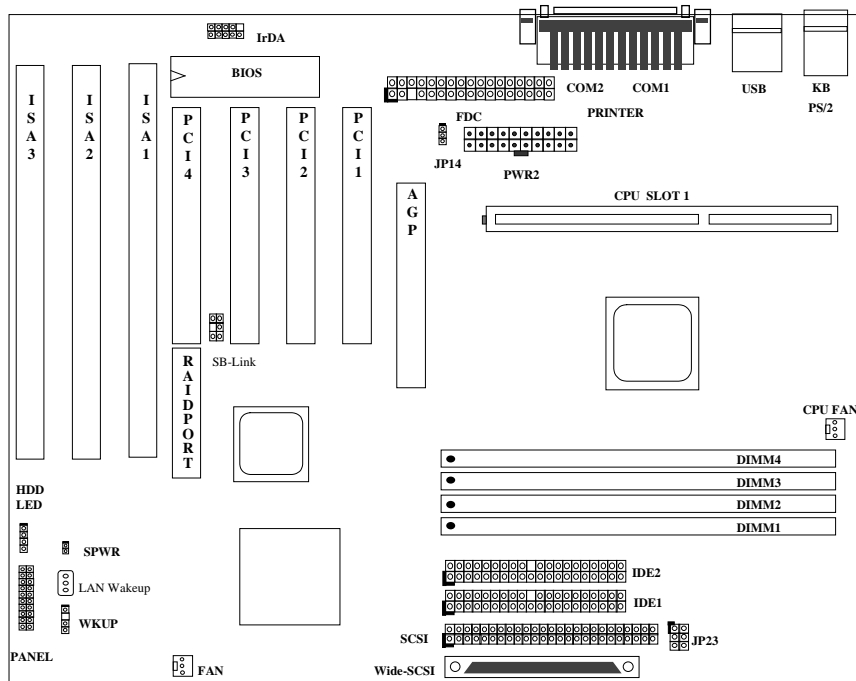

# Hardware Installation

---

## Jumpers:

**JP14:** Clear CMOS  
**JP23:** AGP Ratio

## Connectors:

**PS2:** PS/2 mouse connector  
**KB:** PS/2 keyboard connector  
**COM1:** COM1 connector  
**COM2:** COM2 connector  
**PRINTER:** Printer connector  
**PWR2:** ATX power connector  
**USB:** USB connector  
**FDC:** Floppy drive connector  
**IDE1:** IDE1 primary channel  
**IDE2:** IDE2 secondary channel  
**CPUFAN:** CPU Fan connector  
**FAN:** Housing Fan Connector  
**IrDA:** IrDA (Infrared) connector  
**HDD LED:** HDD LED connector  
**PANEL:** Front panel (Multifunction) connector  
**SPWR:** ATX Soft-Power Switch Connector  
**MODEM-WKUP:** Modem Wake Up Connector  
**LAN-WKUP:** LAN Wake Up Connector  
**SB-LINK:** Creative PCI sound card connector

# Hardware Installation

---

## 2.2 Jumpers

With the help of Pentium II VID signal and SMBus, this motherboard is jumper-less design.

### 2.2.1 Selecting the CPU Frequency

Pentium II VID signal and SMBus clock generator provide CPU voltage auto-detection and allow user to set CPU frequency through CMOS setup, no jumper or switch is needed. The correct CPU information is saved into EEPROM, with these technologies, the disadvantages of Pentium base jumper-less design are eliminated. There will be no worry of wrong CPU voltage detection and no need to re-open the housing if CMOS battery loss.

The CPU frequency selection is set by going into:

**BOIS Setup à Chipset Features Setup à CPU Clock Frequency**

(The possible setting is 66, 68.5, 75, 83.3, 100, 103, 112 and 133.3 MHz)

**BOIS Setup à Chipset Features Setup à CPU Clock Ratio**

(The possible setting is 1.5x, 2x, 2.5x, 3x, 3.5x, 4x, 4.5x, 5x, 5.5x, 6x, 6.5x, 7x, 7.5x, and 8x)

**Core frequency = Ratio \* External bus clock**

INTEL Pentium II	CPU Core Frequency	Ratio	External Bus Clock
Pentium II - 233	233MHz =	3.5x	66MHz
Pentium II - 266	266MHz =	4x	66MHz
Pentium II - 300	300MHz =	4.5x	66MHz
Pentium II - 333	333MHz =	5x	66MHz
Pentium II - 350	350MHz=	3.5x	100MHz
Pentium II - 400	400MHz=	4x	100MHz
Pentium II - 450	450MHz=	4.5x	100MHz
Celeron 266	266MHz=	4x	66MHz
Celeron 300	300MHz	4.5x	66MHz
Celeron 300A	300MHz	4.5x	66MHz
Celeron 333	333MHz	5x	66MHz

## Hardware Installation



**Warning:** INTEL 440BX chipset supports maximum 100MHz external CPU bus clock, the 103, 112 and 133.3MHz are for internal test only. **These settings exceed the specification of BX chipset, which may cause serious system damage.**


### 2.2.2 Setting the CPU Voltage

This motherboard supports Pentium II VID function, the CPU core voltage is automatically detected, the range is from 1.3V to 3.5V.

### 2.2.3 Clearing the CMOS

JP14	Clear CMOS
1-2	Normal operation (default)
2-3	Clear CMOS

You need to clear the CMOS if you forget your system password. To clear the CMOS, follow the procedures listed below:

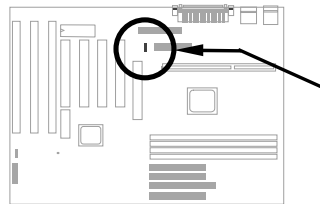

JP14



Normal Operation  
(default)

JP14



Clear CMOS

#### The procedure to clear CMOS:

1. Turn off the system and unplug the AC power.
2. Remove ATX power cable from connector PWR2.
3. Locate **JP14** and short pins 2-3 for a few seconds.
4. Return **JP14** to its normal setting by shorting pins 1-2.
5. Connect ATX power cable back to connector PWR2.
6. Turn on the system power.
7. Press **[DEL]** during bootup to enter the BIOS Setup Utility and specify a new password, if needed.



**Tip:** If your system hangs or fails to boot because of over-clocking, please clear CMOS and the system will go back to default setting (233MHz).

## Hardware Installation

---


**Tip:** Except using JP14, you may also press <Home> key. By this smart design, it would be more convenient to clear CMOS. For using this function, you just need to press <Home> key first and then press Power button at the same time. After doing this, the system will return to the default setting (233MHz).

## Hardware Installation

### 2.2.4 AGP Ratio

JP23	AGP Ratio
1-2	Auto (default)
3-4	2/3
5-6	1/1

To improve system performance, AX6B has implemented this jumper for AGP to synchronize the CPU 100MHz (or above) external frequency. We recommend you choose a better AGP card for overclocking. Some AGP cards can not take 100MHz bus frequency and may cause overclocking failure.

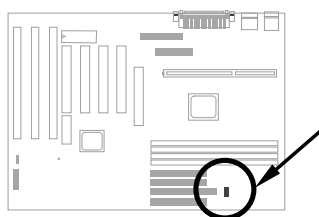

JP23	JP23	JP23
Auto (Default)	2/3	1/1

There is a "66/100" signal pin from CPU for BX chipset to automatically identify AGP clock, this is important for jumperless design. When a 66MHz Pentium II CPU is used, the north bridge will synchronize the CPU external frequency and the AGP bus frequency. Therefore, when you set the CPU external frequency to 100MHz, the AGP bus will also runs at 100MHz.

With 100MHz Pentium II CPU, the north bridge automatically set AGP frequency to 2/3 AGP frequency. In other words, the AGP card will still runs at 66MHz while the CPU is running at 100MHz external frequency.

Except Auto setting, you may also set this jumper to 2/3 or 1/1. Below is a table for better understanding:

CPU Type	66/100 signal	Bus clock	AGP clock	JP23
66MHz	Low	66MHz	66MHz	1-2
66MHz	Low	100MHz	100MHz	1-2
66MHz	Low	100MHz	66MHz	3-4
100MHz	High	100MHz	66MHz	1-2
100MHz	High	100MHz	66MHz	3-4
100MHz	High	100MHz	100MHz	5-6
100MHz	High	133MHz	88.6MHz	1-2
100MHz	High	133MHz	88.6MHz	3-4
100MHz	High	133MHz	133MHz	5-6



**Warning:** The specification of AGP is maximum 66Mhz clock. If the bus clock is larger than 66MHz, setting this item to Enabled may cause serious system damage.

# Hardware Installation



## 2.3 Connectors

### 2.3.1 Power Cable

The ATX power supply uses 20-pin connector shown below. Make sure you plug in the right direction.




**Caution:** Make sure that the power supply is off before connecting or disconnecting the power cable.

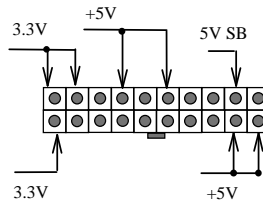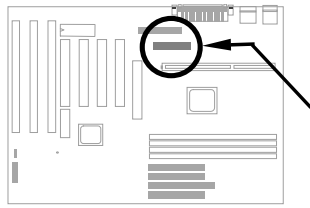

**PWR2**

### 2.3.2 ATX Soft-Power Switch Connector

The ATX soft-power switch connector is a 2-pin header on the system board. Locate the power switch cable from your ATX housing. It is 2-pin female connector from the housing front panel. Plug this connector to the soft-power switch connector marked **SPWR**.


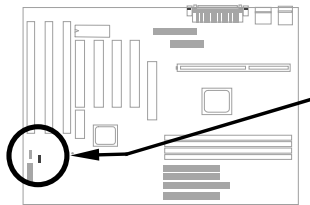


**SPWR**

# Hardware Installation

## 2.3.3 Fan

 Plug in the fan cable to the 3-pin fan connector onboard. The fan connector is marked **CPU FAN** and **FAN** on the system board.

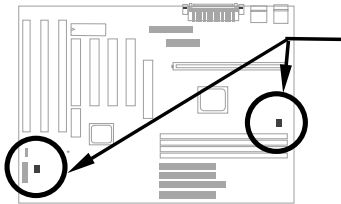



**CPUFAN and FAN**



**Note:** Attach fan cable to either CPU FAN connector or FAN connector. Both of these two fans connectors can support hardware monitoring function, however, you can only use the CPU FAN connector to control the fan power ON/OFF.

## 2.3.4 PS/2 Mouse

 The onboard PS/2 mouse connector is a 6-pin Mini-Din connector marked **PS2**. The view angle of drawing shown here is from back panel of the housing.

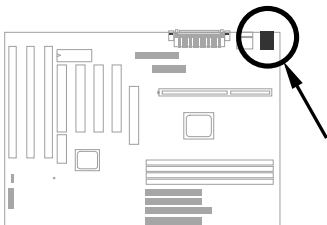




## Hardware Installation


### 2.3.5 Keyboard

The onboard PS/2 keyboard connector is a 6-pin Mini-Din connector marked **KB2**. The view angle of drawing shown here is from back panel of the housing.

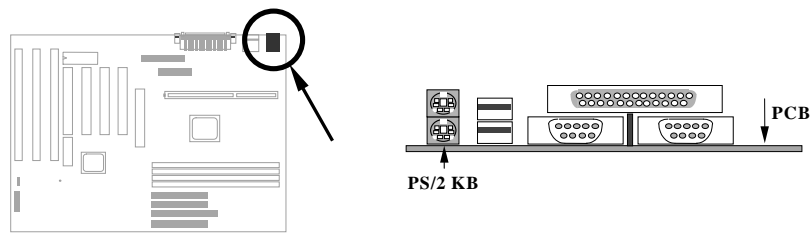

### 2.3.6 Serial Devices (COM1/COM2)


The onboard serial connectors are 9-pin D-type connector on the back panel of mainboard. The serial port 1 connector is marked as **COM1** and the serial port 2 connector is marked as **COM2**.

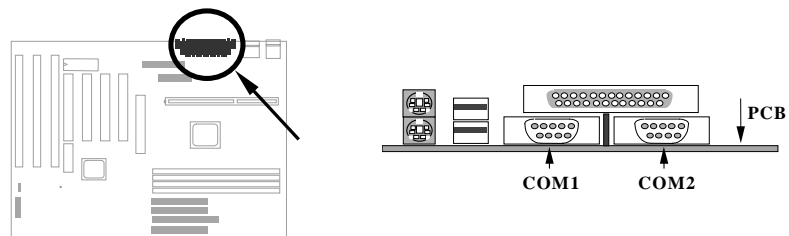

# Hardware Installation


## 2.3.7 Printer

The onboard printer connector is a 25-pin D-type connector marked **PRINTER**. The view angle of drawing shown here is from back panel of the housing.

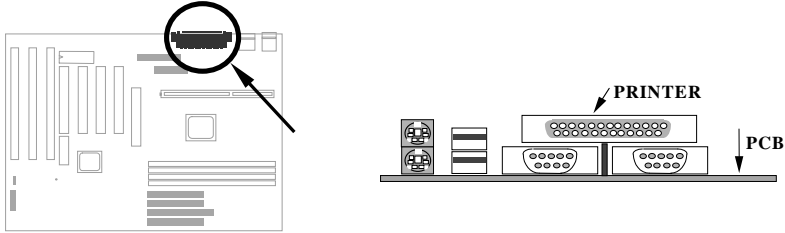

## 2.3.8 USB Device


You can attach USB devices to the USB connector. The motherboard contains two USB connectors, which are marked as **USB**.

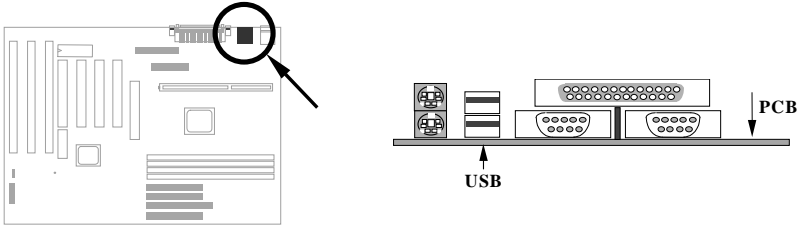

# Hardware Installation

## 2.3.9 Floppy Drive

Connect the 34-pin floppy drive cable to the floppy drive connector marked as **FDC** on the system board.

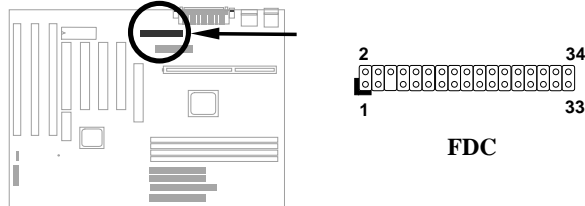


## 2.3.10 IDE Hard Disk and CD ROM

This mainboard supports two 40 pin IDE connectors marked as **IDE1** and **IDE2**. IDE1 is also known as primary channel and IDE2 as secondary channel, each channel supports two IDE devices that makes total of four devices.

In order to work together, the two devices on each channel must be set differently to master and slave mode, either one can be hard disk or CDROM. The setting as master or slave mode depends on the jumper on your IDE device, please refer to your hard disk and CDROM manual accordingly.

Connect your first IDE hard disk to master mode of the primary channel. If you have second IDE device to install in your system, connect it as slave mode on the same channel, and the third and fourth device can be connected on secondary channel as master and slave mode respectively.

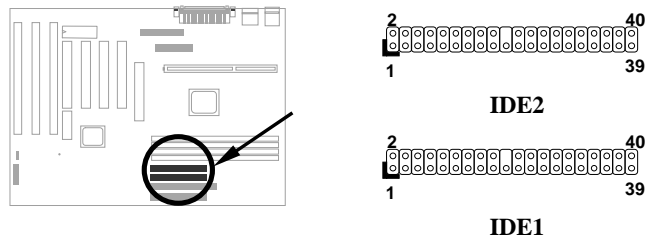


# Hardware Installation




**Caution:** The specification of IDE cable is maximum 46cm (18 inches), make sure your cable does not exceed this length.

**Caution:** For better signal quality, it is recommended to set far end side device to master mode and follow the suggested sequence to install your new device. Please refer to following figure.

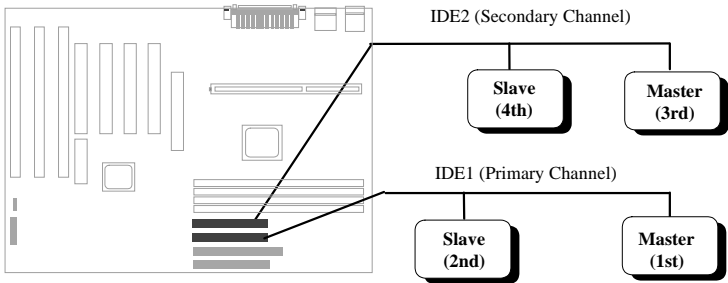

## 2.3.11 SCSI Devices

Connect your SCSI devices to the on board 68-pin **WIDE-SCSI** or 50-pin **SCSI** connector.




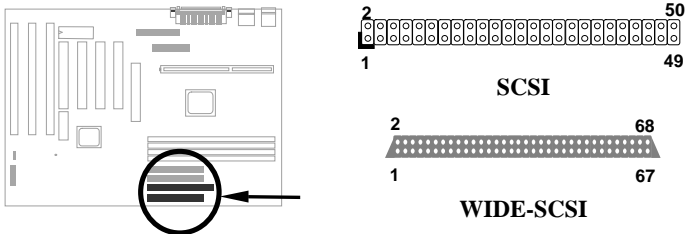


## Hardware Installation

### 2.3.12 Hard Disk LED

The HDD LED connector is marked as **HDD LED** on the board. This connector is designed for different type of housing, actually only two pins are necessary for the LED. If your housing has four pin connector, simply plug it in. If you have only two pin connector, please connect to pin 1-2 or pin 3-4 according to the polarity.



<u>Pin</u>	<u>Description</u>
1	HDD LED
2	GND
3	GND
4	HDD LED

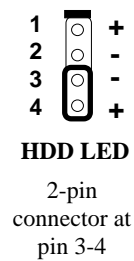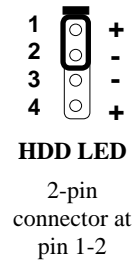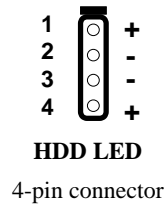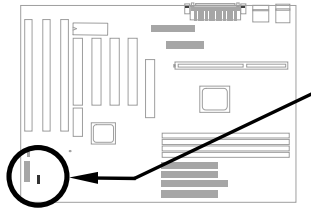

### 2.3.13 SB-LINK

**SB-LINK** is used to connect Creative PCI sound card. If you have a Creative PCI sound card installed, it is necessary to link the card to this connector for compatibility issue under DOS environment.
 
<u>Pin</u>	<u>Description</u>
1	GNT#
2	GND
3	NC
4	REQ#
5	GND
6	SIRQ#

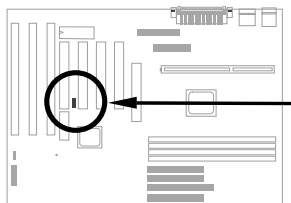





## Hardware Installation

### 2.3.15 IrDA Connector

The IrDA connector can be configured to support wireless infrared module, with this module and application software such as Laplink or Win95 Direct Cable Connection, user can transfer files to or from laptops, notebooks, PDA and printers. This connector supports HPSIR (115.2Kbps, 2 meters), ASK-IR (56Kbps) and Fast IR (4Mbps, 2 meters).

Install infrared module onto **IrDA** connector and enable infrared function from BIOS setup, make sure to have correct orientation when you plug onto IrDA connector.

<b>Pin</b>	<b>Description</b>
1	+5V
3	FIRRX (FAST IR)
4	CIRRX
5	IRRX (STANDARD IR)
6	5VSB
7	GND
9	IRTX (STANDARD IR)

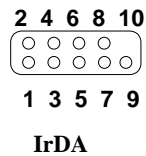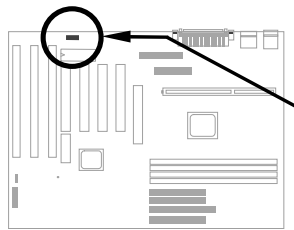


# Hardware Installation

## 2.3.16 Modem Wake-up Connector

This mainboard implements special circuit to support Modem Ring-On, both Internal Modem Card (AOpen MP56) and external box Modem are supported. Since Internal Modem card consumes no power when system power is off, it is recommended to use Internal Modem. To use AOpen MP56, connect 4-pin cable from **RING** connector of MP56 to **MODEM-WKUP** connector on the mainboard.

<u>Pin</u>	<u>Description</u>
1	+5V SB
2	NC
3	RING
4	GND

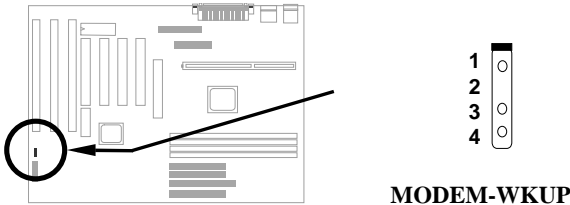

## 2.3.17 LAN Wake-up Connector

This mainboard implements a **LAN-WKUP** connector. To use LAN Wake-up function, you need a network card that supports this feature. In addition, you also need to install a network management software, such as ADM.


<u>Pin</u>	<u>Description</u>
1	+5V SB
2	GND
3	LID





# Hardware Installation

## 2.4 Configuring the System Memory

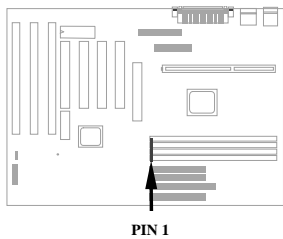

The DIMM types supported are SDRAM (Synchronous DRAM) and Registered SDRAM. This mainboard has four 168 pin DIMM sockets (Dual-in-line Memory Module) that allow you to install system memory up to **1GB**. But note that mixing SDRAM and Registered SDRAM is not allowed, you can install one of the DRAM types only.




**Warning:** This motherboard does not support EDO DRAM.

DIMM modules can be identified by the following factors:

- I. **Size:** single side, 1Mx64 (8MB), 2Mx64 (16MB), 4Mx64 (32MB), 8Mx64 (64MB), 16Mx64 (128MB), and double side, 1Mx64x2 (16MB), 2Mx64x2 (32MB), 4Mx64x2 (64MB), 8Mx64x2 (128MB).



**Tip:** Here is a trick to check if your DIMM is single-side or double-side -- if there are traces connected to golden finger pin 114 and pin 129 of the DIMM, the DIMM is probably double-side; otherwise, it is single-side. Following figure is for your reference.

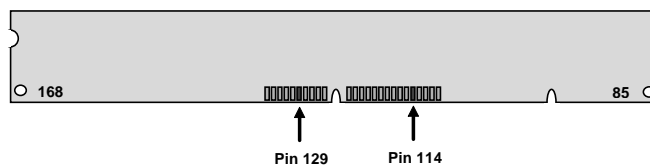

**Note:** 1GB memory is achieved by using 64M bit Registered SDRAMs.


## Hardware Installation

- II. **Speed:** Normally marked as -12, which means the clock cycle time is 12ns and maximum clock of this SDRAM is 83MHz. Sometimes you can also find the SDRAM marked as -67, which means maximum clock is 67MHz.



**Caution:** Some SDRAMs marked as -10 may work fine with 100 MHz CPU clock, but not all this kind of modules can work properly under 100MHz external clock. We suggest you choose and install SDRAMs that match **PC 100** specification if 100MHz or above CPU clock is selected.

- III. **Buffered and non-buffered:** This motherboard supports non-buffered DIMMs. You can identify non-buffered DIMMs and buffered DIMMs according to the position of the notch, following figure is for your reference:

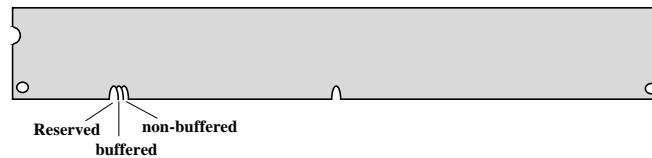

Because the positions are different, only non-buffered DIMMs can be inserted into the DIMM sockets on this motherboard. Although most of DIMMs on current market are non-buffered, we still recommend you to ask your dealer for the correct type.

- IV. **2-clock and 4-clock signals:** Although both of 2-clock and 4-clock signals are supported by AX6B, we strongly recommend you to choose 4-clock SDRAM in consideration of reliability.



**Tip:** To identify 2-clock and 4-clock SDRAM, you may check if there are traces connected to golden finger pin 79 and pin 163 of the SDRAM. If there are traces, the SDRAM is probably 4-clock; Otherwise, it is 2-clock.

- V. **Parity:** This motherboard supports standard 64 bit wide (without parity) and 72-bit wide (with parity) DIMM modules.

- VI. **SPD support:** BIOS will automatically detect DIMM with SPD, and set to appropriate timing. DIMMs without SPD are still able to work fine on this board, but BIOS POST screen will give you a warning message that you use a DIMM without SPD.

## Hardware Installation

There is no jumper setting required for the memory size or type. It is automatically detected by the system BIOS, and the total memory size is to add them together.

**Total Memory Size = Size of DIMM1 + Size of DIMM2 + Size of DIMM3 + Size of DIMM4**

Following table list the recommended SDRAM combinations of DIMM:

DIMM Data chip	Bit size per side	Single/Double side	Chip count	DIMM size	Recommended
1M by 16	1Mx64	x1	4	8MB	Yes
1M by 16	1Mx64	x2	8	16MB	Yes
2M by 8	2Mx64	x1	8	16MB	Yes
2M by 8	2Mx64	x2	16	32MB	Yes
4M by 16	4Mx64	x1	4	32MB	Yes
4M by 16	4Mx64	x2	8	64MB	Yes
8M by 8	8Mx64	x1	8	64MB	Yes
8M by 8	8Mx64	x2	16	128MB	Yes

DIMM Data chip	Bit size per side	Single/Double side	Chip count	DIMM size	Recommended
2M by 32	2Mx64	x1	2	16MB	Yes, but not tested.
2M by 32	2Mx64	x2	4	32MB	Yes, but not tested.

Following table are possible SDRAM combinations that is **NOT** recommended:

DIMM Data chip	Bit size per side	Single/Double side	Chip count	DIMM size	Recommended
4M by 4	4Mx64	x1	16	32MB	No
4M by 4	4Mx64	x2	32	64MB	No
16M by 4	16Mx64	x1	16	128MB	No

## Hardware Installation

For getting the best performance and stability under 100MHz or above external clock, we strongly recommend you use PC 100 SDRAM. The PC 100 SDRAM that AOpen had tested are listed below.

Size	Vendor	Model	Single/Double	Chip Count
16M	Micron	MT48LC2M8A1-08	x1	8
16M	TI	TMX626812BDGE-10A	x1	8
16M	Hyundai	HY57V168010CTC-10	x1	8
32M	Fujitsu	81F16822D-A10-7JF	X2	16
32M	Micron	MT48LC2M8A1-08	x2	16
32M	Hyndai	HY57V168010CTC-10	x1	16
32M	NEC	D4516821AG5-A10-7JF	x1	16
32M	SEC	KM48S2020CT-GH	x1	16
32M	LGS	GM72V661641CT7J	x1	4
64M	Fujitsu	81F64842B-103FN	x2	16
64M	Mitsubishi	M5M4V64S30ATP-10	x1	8
64M	NEC	D4564841G5-A10-9JF	x1	8
64M	SEC	KM48S8030BT-GH	x1	8
64M	Toshiba	TC59S6408FTL-80H	x1	8
64M	LGS	GM72V661641CT7J	x2	8
64M	LGS	GM72V66841CT7J	x1	9
128M	LGS	GM72V66841CT7J	x2	18
128M	Simens	HYS72V16220GU	x2	18

Memory error checking is supported by parity check. To use parity check you need 72 bit DIMM (64+8 bit parity), which are automatically detected by BIOS.

## Hardware Installation

---



**Warning:** The driving capability of new generation chipset is limited because the lack of memory buffer (to improve performance). This makes DRAM chip count an important factor to be taking into consideration when you install DIMM. Unfortunately, there is no way that BIOS can identified the correct chip count, you need to calculate the chip count by yourself. The simple rule is: **By visual inspection, use only DIMM which is less than 16 chips.**



**Tip:** The parity mode uses 1 parity bit for each byte, normally it is even parity mode, that is, each time the memory data is updated, parity bit will be adjusted to have even count "1" for each byte. When next time, if memory is read with odd number of "1", the parity error is occurred and this is called single bit error detection.

---

## **Chapter 3**

# Award BIOS

This chapter tells how to configure the system parameters. You may update your BIOS via AWARD Flash Utility.




**Important:** *Because the BIOS code is the most often changed part of the mainboard design, the BIOS information contained in this chapter (especially the Chipset Setup parameters) may be a little different compared to the actual BIOS that came with your mainboard.*

# AWARD BIOS

## 3.1 Entering the Award BIOS Setup Menu

The BIOS setup utility is a segment of codes/routines residing in the BIOS Flash ROM. This routine allows you to configure the system parameters and save the configuration into the 128 byte CMOS area, (normally in the RTC chip or directly in the main chipset). To enter the BIOS Setup, press **[DEL]** during POST (Power-On Self Test). The BIOS Setup Main Menu appears as follows.

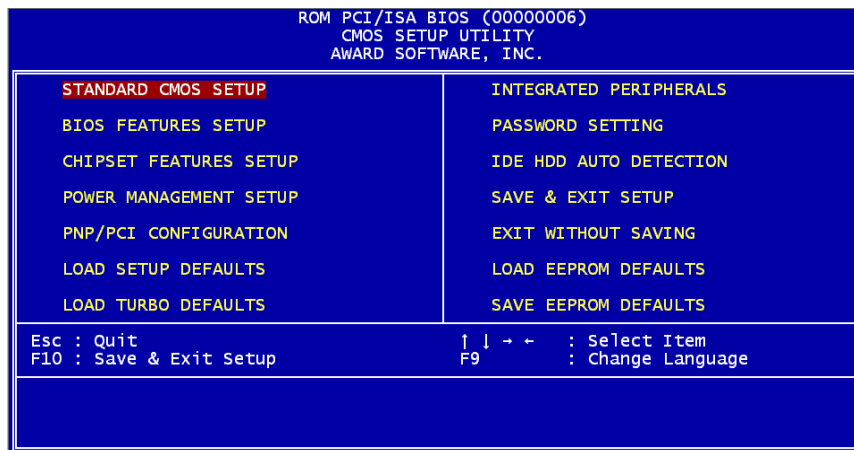

**Tip:** Choose "Load Setup Defaults" for recommended optimal performance. Choose "Load Turbo Defaults" for best performance with light system loading. Refer to section 3.7.

The section at the bottom of the screen tells how to control the screen. Use the arrow keys to move between items, **[SHIFT] [F2]** to color scheme of the display, **[ESC]** to exit, and **[F10]** to save the changes before exit. Another section at the bottom of the screen displays a brief description of the highlighted item.

After selecting an item, press **[ENTER]** to select or enter a submenu.

# AWARD BIOS

## 3.2 Standard CMOS Setup

The "Standard CMOS Setup" sets the basic system parameters such as the date, time, and the hard disk type. Use the arrow keys to highlight an item and **[PGUP]** or **[PGDN]** to select the value for each item.

```
ROM PCI/ISA BIOS (00000006)
STANDARD CMOS SETUP
AWARD SOFTWARE, INC.

Date (mm:dd:yy) : Thu, Jan 8 1998
Time (hh:mm:ss) : 18 : 38 : 34

HARD DISKS      TYPE      SIZE  CYLS  HEAD  PRECOMP  LANDZ  SECTOR  MODE
-----
Primary Master  : None      0      0    0      0      0      0  -----
Primary Slave   : None      0      0    0      0      0      0  -----
Secondary Master : None      0      0    0      0      0      0  -----
Secondary Slave  : None      0      0    0      0      0      0  -----

Drive A : None
Drive B : None

Video : EGA/VGA
Halt On : All Errors

Base Memory: 0K
Extended Memory: 0K
Other Memory: 512K
-----
Total Memory: 512K

ESC : Quit      ↑ ↓ → ← : Select Item      PU/PD/+/- : Modify
Fl  : Help      (Shift)F2 : Change Color
```

### Standard CMOS → Date

To set the date, highlight the Date parameter. Press **[PGUP]** or **[PGDN]** to set the current date. The date format is month, date, and year.

### Standard CMOS → Time

To set the time, highlight the Time parameter. Press **[PGUP]** or **[PGDN]** to set the current time in hour, minute, and second format. The time is based on the 24 hour military clock.



## AWARD BIOS

---

**Standard CMOS → Primary Master → Type**

**Standard CMOS → Primary Slave → Type**

**Standard CMOS → Secondary Master → Type**

**Standard CMOS → Secondary Slave → Type**

<u>Type</u>
Auto
User
None
1
2
...
45

This item lets you select the IDE hard disk parameters that your system supports. These parameters are Size, Number of Cylinder, Number of Head, Start Cylinder for Pre-compensation, Cylinder number of Head Landing Zone and Number of Sector per Track. The default setting is **Auto**, which enables BIOS to automatically detect the parameters of installed HDD at POST (Power-On Self Test). If you prefer to enter HDD parameters manually, select **User**. Select **None** if no HDD is connected to the system.

The IDE CDROM is always automatically detected.



***Tip:** For an IDE hard disk, we recommend that you use the "IDE HDD Auto Detection" to enter the drive specifications automatically. See the section "IDE HDD Auto Detection".*

**Standard CMOS → Primary Master → Mode**

**Standard CMOS → Primary Slave → Mode**

**Standard CMOS → Secondary Master → Mode**

**Standard CMOS → Secondary Slave → Mode**

<u>Mode</u>
Auto
Normal
LBA
Large

The enhanced IDE feature allows the system to use a hard disk with a capacity of more than 528MB. This is made possible through the Logical Block Address (LBA) mode translation. The LBA is now considered as a standard feature of current IDE hard disk on the market because of its capability to support capacity larger than 528MB. Note that if HDD is formatted with LBA On, it will not be able to boot with LBA Off.

# AWARD BIOS

---

## Standard CMOS → Drive A

## Standard CMOS → Drive B

### Drive A

None  
360KB 5.25"  
1.2MB 5.25"  
720KB 3.5"  
1.44MB 3.5"  
2.88MB 3.5"

These items select floppy drive type. The available settings and types supported by the mainboard are listed on the left.

## Standard CMOS → Video

### Video

EGA/VGA  
CGA40  
CGA80  
Mono

This item specifies the type of video card in use. The default setting is VGA/EGA. Since current PCs use VGA only, this function is almost useless and may be disregarded in the future.

## Standard CMOS → Halt On

### Halt On


No Errors  
All Errors  
All, But Keyboard  
All, But Diskette  
All, But Disk/Key

This parameter enables you to control the system stops in case of Power-On Self Test (POST) error.

# AWARD BIOS

## 3.3 BIOS Features Setup

This screen appears when you select the option "BIOS Features Setup" from the main menu.

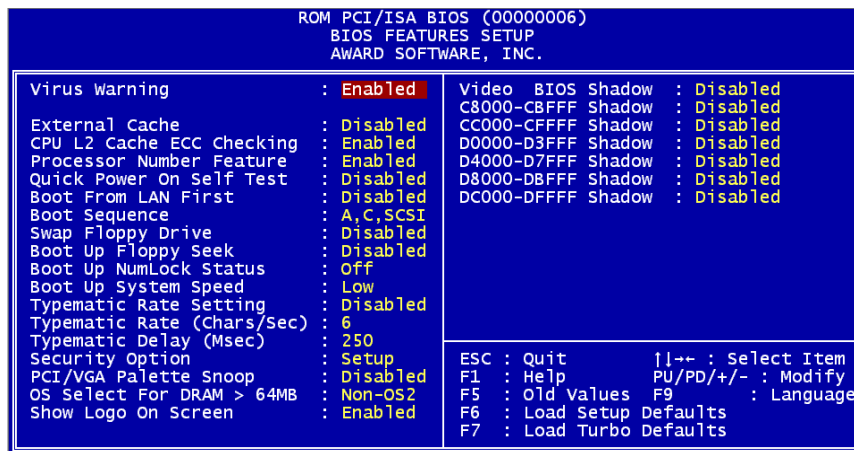

### BIOS Features → Virus Warning

<b>Virus Warning</b>
Enabled
Disabled

Set this parameter to Enabled to activate the warning message. This feature protects the boot sector and partition table of your hard disk from virus intrusion. Any attempt during boot up to write to the boot sector of the hard disk drive stops the system and the following warning message appears on the screen. Run an anti-virus program to locate the problem.

```
! WARNING !  
  
Disk Boot Sector is to be modified  
Type "Y" to accept write, or "N" to abort write  
Award Software, Inc.
```

# AWARD BIOS

---

## BIOS Features → External Cache

<b><u>External Cache</u></b> Enabled Disabled	Enabling this parameter activates the secondary cache (currently, PBSRAM cache). Disabling the parameter slows down the system. Therefore, we recommend that you leave it enabled unless you are troubleshooting a problem.
---	---

## BIOS Features → CPU L2 Cache ECC Checking

<b><u>CPU L2 Cache ECC Checking</u></b> Enabled Disabled	This item lets you enable or disable L2 Cache ECC checking.
--	---

## BIOS Features → Processor Number Feature

<b><u>Processor Number Feature</u></b> Enabled Disabled	This item is used to enable or disable Pentium III CPU Number Feature.
---	--

## BIOS Features → Quick Power On Self Test

<b><u>Quick Power on Self test</u></b> Enabled Disabled	This parameter speeds up POST by skipping some items that are normally checked.
---	---

## BIOS Features → Boot From LAN First

<b><u>Boot From LAN First</u></b> Enabled Disabled	This item is used to boot the system from a network server.
--	---

# AWARD BIOS

---

## BIOS Features → Boot Sequence

<b><u>Boot Sequence</u></b> A,C,SCSI C,A,SCSI C,CDROM,A CDROM,A,C CDROM,C,A D,A,SCSI E,A,SCSI F,A,SCSI SCSI,A,C SCSI,C,A C only LS/ZIP,C	This parameter allows you to specify the system boot up search sequence. The hard disk ID are listed below: C: Primary master D: Primary slave E: Secondary master F: Secondary slave LS: LS120 Zip: IOMEGA ZIP Drive
--	---

## BIOS Features → Swap Floppy Drive

<b><u>Swap Floppy Drive</u></b> Enabled Disabled	This item allows you to swap floppy drives. For example, if you have two floppy drives (A and B), you can assign the first drive as drive B and the second drive as drive A or vice-versa.
--	--

## BIOS Features → Boot Up Floppy Seek

<b><u>Boot Up Floppy Seek</u></b> Enabled Disabled	Setting this item to force the system to seek the status in detail and detects any errors in both floppy drives during POST.
--	--

## BIOS Features → Boot Up NumLock Status

<b><u>Boot Up NumLock Status</u></b> On Off	Setting this parameter to On enables the numeric function of the numeric keypad. Set this parameter to Off to disregard the function. Disabling the numeric function allows you to use the numeric keypad for cursor control.
---	---

# AWARD BIOS

---

## BIOS Features → Boot Up System Speed

<b><u>Boot Up System Speed</u></b>
High
Low

Select High or Low system speed after boot.

## BIOS Features → Typematic Rate Setting

<b><u>Typematic Rate Setting</u></b>
Enabled
Disabled

Set this parameter to Enable/Disable the keyboard repeat function. When enabled, continually holding down a key on the keyboard will generate repeatedly keystrokes.

## BIOS Features → Typematic Rate (Chars/Sec)

<b><u>Typematic Rate</u></b>
6
8
10
12
15
20
24
30

This item allows you to control the speed of repeated keystrokes. The default is 30 characters/sec.

## BIOS Features → Typematic Delay (Msec)

<b><u>Typematic Delay</u></b>
250
500
750
1000

This parameter allows you to control the delay time between the first and the second keystroke (where the repeated keystrokes begin). The typematic delay settings are 250, 500, 750, and 1000 msec.

# AWARD BIOS

---

## BIOS Features → Security Option

<b><u>Security Option</u></b> Setup System	<p>The <b>System</b> option limits access to both the System boot and BIOS setup. A prompt asking you to enter your password appears on the screen every time you boot the system.</p> <p>The <b>Setup</b> option limits access only to BIOS setup.</p> <p>To disable the security option, select Password Setting from the main menu, don't type anything and just press &lt;Enter&gt;.</p>
--	--

## BIOS Features → PCI/VGA Palette Snoop

<b><u>PCI/VGA Palette Snoop</u></b> Enabled Disabled	<p>Enabling this item informs the PCI VGA card to keep silent (and to prevent conflict) when palette register is updated (i.e., accepts data without responding any communication signals). This is useful only when two display cards use the same palette address and plugged in the PCI bus at the same time (such as MPEQ or Video capture). In such case, PCI VGA is silent while MPEQ/Video capture is set to function normally.</p>
--	--

## BIOS Features → OS Select for DRAM > 64MB

<b><u>OS Select for DRAM &gt; 64MB</u></b> OS/2 Non-OS/2	<p>Set to OS/2 if your system is utilizing an OS/2 operating system and has a memory size of more than 64 MB.</p>
--	---

## BIOS Features → Show Logo On Screen

<b><u>Show Logo On Screen</u></b> Enabled Disabled	<p>This item lets you show or hide AOpen logo on the POST screen.</p>
--	---

# AWARD BIOS

## BIOS Features → Video BIOS Shadow

<b><u>Video BIOS</u></b>
--------------------------

<b><u>Shadow</u></b>
----------------------

Enabled
---------

Disabled
----------

VGA BIOS Shadowing means to copy video display card BIOS into the DRAM area. This enhances system performance because DRAM access time is faster than ROM.

## BIOS Features → C800-CBFF Shadow

## BIOS Features → CC00-CFFF Shadow

## BIOS Features → D000-D3FF Shadow

## BIOS Features → D400-D7FF Shadow

## BIOS Features → D800-DBFF Shadow

## BIOS Features → DC00-DFFF Shadow

<b><u>C800-CBFF</u></b>
-------------------------

<b><u>Shadow</u></b>
----------------------

Enabled
---------

Disabled
----------

These six items are for shadowing ROM code on other expansion cards. Before you set these parameters, you need to know the specific addresses of that ROM code. If you do not know this information, enable all the ROM shadow settings.




**Note:** The F000 and E000 segments are always shadowed because BIOS code occupies these areas.



# AWARD BIOS

## 3.4 Chipset Features Setup

The "Chipset Features Setup" includes settings for the chipset dependent features. These features are related to system performance.

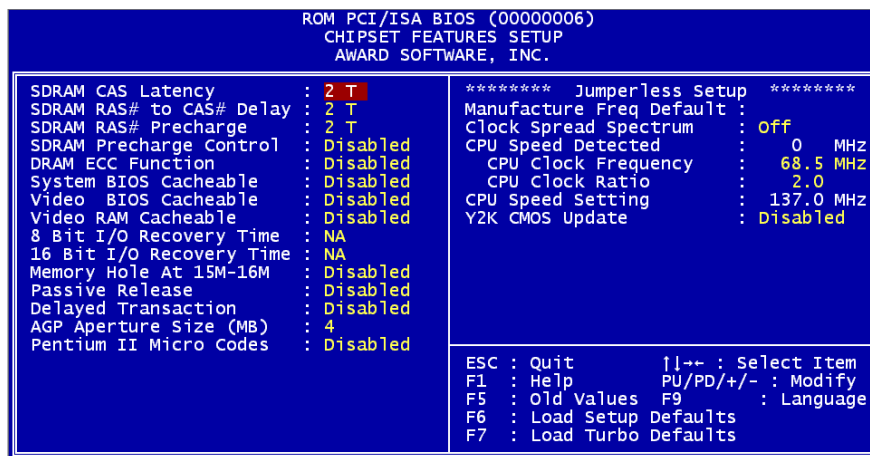

**Caution:** Make sure you fully understand the items contained in this menu before you try to change anything. You may change the parameter settings to improve system performance. However, it may cause system unstable if the setting are not correct for your system configuration.

## AWARD BIOS

### Chipset Features → SDRAMCAS Latency

<b><u>SDRAM CAS Latency</u></b>
2T
3T

This SDRAM timing is calculated by clocks. Adjust its value affects SDRAM performance, the default setting is 2 clocks. If your system has unstable problem, change 2T to 3T.

### Chipset Features → SDRAM RAS# to CAS# Delay

<b><u>SDRAM RAS# to CAS# Delay</u></b>
2T
3T
Auto

These are timing of SDRAM CAS Latency and RAS to CAS Delay, calculated by clocks. They are important parameters affects SDRAM performance, default is **Auto**. If you install DIMMs with SPD and set this item to Auto, BIOS will automatically detect your DIMMs and then set to a appropriate timing; If you use DIMMs without SPD and set this item to Auto, BIOS will set it to 3/3. To make sure all of these settings in BIOS are correct, it is recommended to use DIMMs with SPD.

### Chipset Features → SDRAM RAS# Precharge

<b><u>SDRAM RAS# Precharge</u></b>
2T
3T
Auto

The RAS Precharge means the timing to inactive RAS and the timing for DRAM to do precharge before next RAS can be issued. RAS is the address latch control signal of DRAM row address. The default setting is **Auto**.

### Chipset Features → SDRAM Precharge Control

<b><u>SDRAM Precharge Control</u></b>
Enabled
Disabled

Enable : SDRAM Precharge only the bank targeted by the page miss cycle.  
Disable: Issue SDRAM precharge all command.

# AWARD BIOS

---

## Chipset Features → DRAM ECC Function

<b><u>DRAM ECC</u></b> <b><u>Function</u></b> Auto Disabled
--

This lets you enable or disable DRAM ECC function. The ECC algorithm has the ability to detect double bit error and automatically correct single bit error.

## Chipset Features → System BIOS Cacheable

<b><u>System BIOS</u></b> <b><u>Cacheable</u></b> Enabled Disabled
---

Setting it to Enabled allows the system BIOS data at F0000h-FFFFFh (in main memory, 64K in all) to be cacheable for a better system performance.

However, if any program writes to this memory range, a system error may result.

## Chipset Features → Video BIOS Cacheable

<b><u>Video BIOS</u></b> <b><u>Cacheable</u></b> Enabled Disabled
--

Allows the video BIOS to be cached to allow faster video performance.

## Chipset Features → Video RAM Cacheable

<b><u>Video RAM</u></b> <b><u>Cacheable</u></b> Enabled Disabled
---

This item lets you cache Video RAM A000 and B000.

# AWARD BIOS

## Chipset Features → 8 Bit I/O Recovery Time

<b><u>8 Bit I/O Recovery Time</u></b>
1
2
3
4
5
6
7
8
NA

For some old I/O chips, after the execution of an I/O command, the device requires a certain amount of time (recovery time) before the execution of the next I/O command. Because of new generation CPU and mainboard chipset, the assertion of I/O command is faster, and sometimes shorter than specified I/O recovery time of old I/O devices. This item lets you specify the delay of 8-bit I/O command by count of ISA bus clock. If you find any unstable 8-bit I/O card, you may try to extend the I/O recovery time via this item. The BIOS default value is **4 ISA clock**. If set to NA, the chipset will insert 3.5 system clocks.

## Chipset Features → 16 Bit I/O Recovery Time

<b><u>16 Bit I/O Recovery Time</u></b>
1
2
3
4
NA

The same as 16-bit I/O recovery time. This item lets you specify the recovery time for the execution of 16-bit I/O commands by count of ISA bus clock. If you find any of the installed 16-bit I/O cards unstable, try extending the I/O recovery time via this item. The BIOS default value is **1 ISA clocks**. If set to NA, the chipset will automatically insert 3.5 system clocks.

## Chipset Features → Memory Hole At 15M-16M

<b><u>Memory Hole At 15M-16M</u></b>
Enabled
Disabled

This option lets you reserve system memory area for special ISA cards. The chipset accesses code/data of these areas from the ISA bus directly. Normally, these areas are reserved for memory mapped I/O card.

## Chipset Features → Passive Release

<b><u>Passive Release</u></b>
Enabled
Disabled

This item lets you control the Passive Release function of the PIIX4E chipset (Intel PCI to ISA bridge). This function is used to meet latency of ISA bus master. Try to enable or disable it, if you have ISA card compatibility problem.

# AWARD BIOS

---

## Chipset Features → Delayed Transaction

<b><u>Delayed Transaction</u></b> Enabled Disabled
--

This item lets you control the Delayed Transaction function of the PIIX4E chipset (Intel PCI to ISA bridge). This function is used to meet latency of PCI cycles to or from ISA bus. Try to enable or disable it, if you have ISA card compatibility problem.

## Chipset Features → AGP Aperture Size (MB)

<b><u>AGP Aperture Size (MB)</u></b> 4 8 16 32 64 128 256
--

This item lets you determine the effective size of the AGP Graphic Aperture.

## Chipset Features → Pentium II Micro Codes

<b><u>Pentium II Micro Codes</u></b> Enabled Disabled
---

The micro codes are used to fix bugs of Pentium II CPU, we strongly recommend to enable this item for system reliability reason. However, this microcode may slightly reduce CPU performance. We provide this option for your convenience if you like to test it.

## Chipset Features → Manufacture Frequency Default

<b><u>Manufacture Frequency Default</u></b> Depends on the CPU type
--

This item only reminds you of the actual CPU frequency while clearing CMOS or pressing "Home" key. The default setting is 233 Mhz, you can modify it to match the actual CPU frequency by using the utility - flash.exe.

## AWARD BIOS

---

### Chipset Features → Clock Spread Spectrum

**Clock Spread  
Spectrum**

On  
Off

This item is used to set clock spread spectrum for EMI testing. Normally, you don't need to change the default setting.

### Chipset Features → Clock Speed Detected

**Clock Speed Detected**

This column shows you present CPU Speed.

### Chipset Features → CPU Clock Frequency

**CPU Clock Frequency**

66.8 Mhz  
68.5 Mhz  
75.0 Mhz  
83.3 Mhz  
100 Mhz  
103 Mhz  
112 Mhz  
133.3 Mhz

This item lets you set external clock (bus clock). The correct setting may vary because of different CPU products, refer to your CPU specification for more details.

# AWARD BIOS

---

## Chipset Features → CPU Clock Ratio

<u>CPU Clock Ratio</u>
1.5
2.0
2.5
3.0
3.5
4.0
4.5
5.0
5.5
6.0
6.5
7.0
7.5
8.0

Intel Pentium II is designed to have different Internal (Core) and External (Bus) frequency. This item lets you select the ratio of Core/Bus frequency. The default value is 3.5x.

## Chipset Features → CPU Speed Setting

<u>CPU Speed Setting</u>
FSB clock: 68.5, 66.8, 75, 83.3, 100,103,,112, and 133.3 MHz.
Clock Ratio: x2, x2.5, x 3, x 3.5, x 4, x 4.5, x 5, x 5.5, x 6, x 6.5, x 7, x 7.5, and x8

The item is used to select the CPU clock speed.

$\text{CPU Clock} = \text{FSB clock} \times \text{Clock Ratio}.$

## Chipset Features → Y2K CMOS Update

<u>Y2K CMOS Update</u>
Enabled
Disabled

This item is designed for some Y2K testing programs, for example, Check It 98. If you are using this kind of program to test your system and fails, enable this item and redo the test again.

AWARD BIOS


---



# AWARD BIOS

## 3.5 Power Management Setup

The Power Management Setup screen enables you to control the mainboard green features. See the following screen.

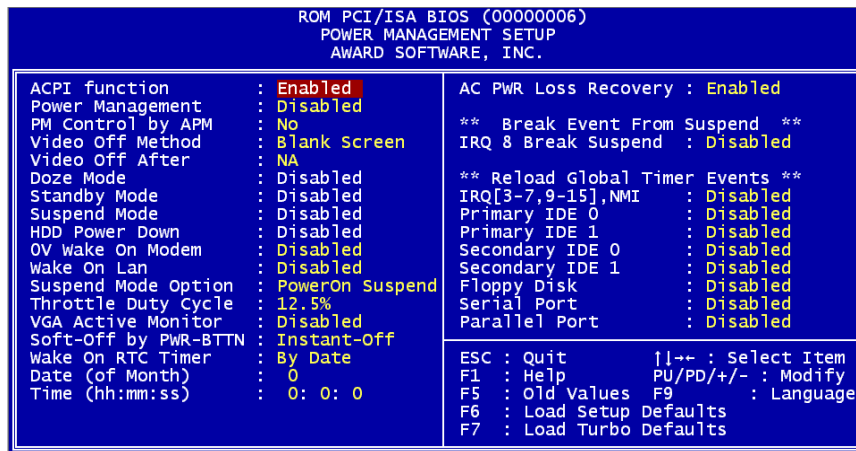

### Power Management → ACPI function

<b>ACPI function</b>
Enabled
Disabled

If your OS is ACPI enabled you have to set this item to Enabled, or there may be unexpected errors. If your OS is APM mode, you can remain the Disabled setting.

---

## Power Management → Power Management

<b>Power Management</b>
Max Saving
Mix Saving
User Define
Disabled

This function allows you to set the default parameters of power-saving modes. Set to **Disable** to turn off power management function. Set to User Define to choose your own parameters.

Mode	Doze	Standby	Suspend	HDD Power Down
Min Saving	1 hour	1 hour	1 hour	15 min
Max Saving	1 min	1 min	1 min	1 min

## Power Management → PM Controlled by APM

<b>PM Controlled by APM</b>
Yes
No

If "Max Saving" is selected, you can turn on this item, transfer power management control to APM (Advanced Power Management) and enhance power saving function. For example, stop CPU internal clock.

## Power Management → Video Off Method

<b>Video Off Method</b>
V/H SYNC + Blank
DPMS
Blank Screen

This determines the way that monitor is off. Blank Screen writes blanks to video buffer. V/H SYNC+Blank allows BIOS to control VSYNC and HSYNC signals. This function applies only for DPMS (Display Power Management Standard) monitor. The DPMS mode uses DPMS function provided by VGA card.

## Power Management → Video Off After

<b>Video Off After</b>
N/A
Doze
Standby
Suspend

To turn off video monitor at which power down mode.

# AWARD BIOS

---

## Power Management → Doze Mode

<u>Doze Mode</u>
Disabled
1 Min
2 Min
4 Min
8 Min
12 Min
20 Min
30 Min
40 Min
1 Hour

This item lets you set the period of time after which the system enters into Doze mode. The system activity (or event) is detected by monitoring the IRQ signals or other events (such as I/O).

## Power Management → Standby Mode

<u>Standby Mode</u>
Disabled
1 Min
2 Min
4 Min
8 Min
12 Min
20 Min
30 Min
40 Min
1 Hour

This item lets you set the period of time after which the system enters into Standby mode. In this mode, the monitor power-saving feature activates. Any activity detected returns the system to full power. The system activity (or event) is detected by monitoring the IRQ signals or other events (such as I/O).

## Power Management → Suspend Mode

<u>Suspend Mode</u>
Disabled
1 Min
2 Min
4 Min
8 Min
12 Min
20 Min
30 Min
40 Min
1 Hour

This item lets you set the period of time after which the system enters into Suspend mode. The Suspend mode can be Power On Suspend or Suspend to Hard Drive, selected by "Suspend Mode Option".

# AWARD BIOS

## Power Management → HDD Power Down

<b><u>HDD Power Down</u></b>
Disabled
1 Min
.....
15 Min

This option lets you specify the IDE HDD idle time before the device enters the power down state. This item is independent from the power states previously described in this section (Standby and Suspend).

## Power Management → 0V Wake On Modem

<b><u>0V Wake On Modem</u></b>
Enabled
Disabled

This option lets you specify enable or disable Wake On Modem function.

## Power Management → Wake On LAN

<b><u>Wake On LAN</u></b>
Enabled
Disabled

This option lets you specify enable or disable Wake On LAN function.

## Power Management → Suspend Mode Option

<b><u>Suspend Modem Option</u></b>
PowerOn Suspend
Suspend to Disk

You can select suspend mode by this item. **Power On Suspend** is the traditional Green PC suspend mode, the CPU clock is stop, all other devices are shut off. But power must be kept On to detect activities from modem, keyboard/mouse and returns the system to full power. The system activities is detected by monitoring the IRQ signals or I/O. **Suspend to Hard Drive** saves system status, memory and screen image into hard disk, then the power can be totally Off. Next time, when power is turned On, the system goes back to your original work within just few seconds, which depending on your memory size. You need utility AOZVHDD to reserve disk space.

# AWARD BIOS

---

## Power Management → Throttle Duty Cycle

<b>Throttle Duty Cycle</b> 12.5 % 25.0 % 37.5 % 50.0 % 62.5 % 75.0 %	Clock Throttling means at the Doze/Standby state, the CPU clock count in a given time (not the frequency) is reduced to the ratio specified in this parameter. Actually, the period per CPU clock is not changed. For example, a 66MHz CPU clock remains the same 30ns clock period when system goes into Doze/Suspend. The chipset generates the STPCLK (stop clock) signal periodically to prevent CPU for accepting clock from clock generator. For full power on, the CPU can receive 66M count in one second. If the Slow Clock Ratio is set to 50%, the CPU will only receive 33M clock count in one second. This will effectively reduce CPU speed as well as CPU power.
--	---

## Power Management → VGA Active Monitor

<b>VGA Active Monitor</b> Enabled Disabled	To enable or disable the detection of VGA activity for power down state transition.
--	---

## Power Management → Soft-Off by PWR-BTTN

<b>Soft-Off by PWR-BTTN</b> Delay 4 sec. Instant-Off	This is a specification of ACPI and supported by hardware. When <b>Delay 4 sec.</b> is selected, the soft power switch on the front panel can be used to control power On, Suspend and Off. If the switch is pressed less than 4 sec during power On, the system will go into Suspend mode. If the switch is pressed longer than 4 sec, the system will be turned Off. The default setting is <b>Instant-Off</b> , soft power switch is only used to control On and Off, there is no need to press 4 sec, and there is no Suspend.
--	--

## Power Management → Wake On RTC Timer

<b>Wake On RTC Timer</b> Disabled By Date By Week	This option lets you enable or disable the RTC Wake Up function.
--	--

# AWARD BIOS

## Power Management → Date (of Month)

<u>Date (of Month)</u> 0 1 ..... 31
---

This item is displayed when you enable the Wake On RTC Timer option. Here you can specify what date you want to wake up the system. For Example, setting to 15 will wake up the system on the 15th day of every month.



**Note:** Setting this item to 0 will wake up the system on the specified time (which can be set in the WakeUp Time item) every day.

## Power Management → Time (hh:mm:ss)

<u>Time (hh:mm:ss)</u> hh:mm:ss
------------------------------------

This item is displayed when you enable the Wake On RTC Timer option. Here you can specify what time you want to wake up the system.

## Power Management → AC PWR Loss Recovery

<u>AC PWR Loss Recovery</u> Enabled Disabled
--

Set this item to Enabled will recover the system's original status (power on/power off) after power is resumed. For a server in LAN or WAN, it is very useful to avoid network disconnecting caused by power failure.

## Power Management → IRQ 8 Break Suspend

<u>IRQ 8 Break Suspend</u> Enabled Disabled
---

To enable or disable the detection of IRQ8 (RTC) event for power down state transition. OS2 has periodically IRQ8 (RTC) interruptions, If IRQ8 is not set to **Disabled**, OS/2 may fail to go into Doze/Standby/Suspend mode.

## Power Management → IRQ [3-7,9-15],NMI

<u>IRQ [3-7,9-15],NMI</u> Enabled Disabled
--

To enable or disable the detection of IRQ3-7, IRQ9-15 or NMI interrupt events for power down state transition.

## AWARD BIOS

---

Power Management → Primary IDE 0  
Power Management → Primary IDE 1  
Power Management → Secondary IDE 0  
Power Management → Secondary IDE 1  
Power Management → Floppy Disk  
Power Management → Serial Port  
Power Management → Parallel Port

<b><u>Primary IDE 0</u></b>
-----------------------------

Enabled
Disabled

These items enable or disable the detection of IDE, floppy, serial and parallel port activities for power down state transition. Actually it detects the read/write to/from I/O port.

# AWARD BIOS

## 3.6 PNP/PCI Configuration Setup

The PNP/PCI Configuration Setup allows you to configure the ISA and PCI devices installed in your system. The following screen appears if you select the option "PNP/PCI Configuration Setup" from the main menu.

```
ROM PCI/ISA BIOS (00000006)
PNP/PCI CONFIGURATION
AWARD SOFTWARE, INC.

PNP OS Installed      : No
Resources Controlled By : Manual

IRQ-3 assigned to : PCI/ISA PnP
IRQ-4 assigned to : PCI/ISA PnP
IRQ-5 assigned to : PCI/ISA PnP
IRQ-7 assigned to : PCI/ISA PnP
IRQ-9 assigned to : PCI/ISA PnP
IRQ-10 assigned to : PCI/ISA PnP
IRQ-11 assigned to : PCI/ISA PnP
IRQ-12 assigned to : PCI/ISA PnP
IRQ-14 assigned to : PCI/ISA PnP
IRQ-15 assigned to : PCI/ISA PnP
DMA-0 assigned to : PCI/ISA PnP
DMA-1 assigned to : PCI/ISA PnP
DMA-3 assigned to : PCI/ISA PnP
DMA-5 assigned to : PCI/ISA PnP
DMA-6 assigned to : PCI/ISA PnP
DMA-7 assigned to : PCI/ISA PnP

PCI IDE IRQ Map To : PCI-AUTO
Primary IDE INT# : A
Secondary IDE INT# : A

Assign IRQ For USB : Disabled
Assign IRQ For VGA : Disabled
MODEM Use IRQ : NA
Used MEM base addr : N/A

PCI Slot 1 IRQ (Right) : Auto
PCI Slot 2 IRQ : Auto
PCI Slot 3 IRQ : Auto
PCI Slot 4 IRQ (Left) : Auto

ESC : Quit      | |++ : Select Item
F1  : Help     | PU/PD/+/- : Modify
F5  : Old Values | F9       : Language
F6  : Load Setup Defaults
F7  : Load Turbo Defaults
```

### PNP/PCI Configuration → PnP OS Installed

<b><u>PnP OS Installed</u></b>
Yes
No

Normally, the PnP resources are allocated by BIOS during POST (Power-On Self Test). If you are using a PnP operating system (such as Windows 95), set this item to **Yes** to inform BIOS to configure only the resources needed for booting (VGA/IDE or SCSI). The rest of system resources will be allocated by PnP operating system.

### PNP/PCI Configuration → Resources Controlled By

<b><u>Resources Controlled by</u></b>
Auto
Manual

Setting this option to **Manual** allows you to individually assign the IRQs and DMAs to the ISA and PCI devices. Set this to **Auto** to enable the auto-configuration function.



## AWARD BIOS

---

PNP/PCI Configuration → **IRQ3** (COM2)  
PNP/PCI Configuration → **IRQ4** (COM1)  
PNP/PCI Configuration → **IRQ5** (Network/Sound or Others)  
PNP/PCI Configuration → **IRQ7** (Printer or Others)  
PNP/PCI Configuration → **IRQ9** (Video or Others)  
PNP/PCI Configuration → **IRQ10** (SCSI or Others)  
PNP/PCI Configuration → **IRQ11** (SCSI or Others)  
PNP/PCI Configuration → **IRQ12** (PS/2 Mouse)  
PNP/PCI Configuration → **IRQ14** (IDE1)  
PNP/PCI Configuration → **IRQ15** (IDE2)

### IRQ 3

Legacy ISA  
PCI/ISA PnP

If your ISA card is not PnP compatible and requires a special IRQ to support its function, set the selected IRQ to **Legacy ISA**. This setting informs the PnP BIOS to reserve the selected IRQ for the installed legacy ISA card. The default is **PCI/ISA PnP**. Take note that PCI cards are always PnP compatible (except old PCI IDE card).

PNP/PCI Configuration → **DMA 0**  
PNP/PCI Configuration → **DMA 1**  
PNP/PCI Configuration → **DMA 3**  
PNP/PCI Configuration → **DMA 5**  
PNP/PCI Configuration → **DMA 6**  
PNP/PCI Configuration → **DMA 7**

### DMA 0

Legacy ISA  
PCI/ISA PnP

If your ISA card is not PnP compatible and requires a special DMA channel to support its function, set the selected DMA channel to **Legacy ISA**. This setting informs the PnP BIOS to reserve the selected DMA channel for the installed legacy ISA card. The default is **PCI/ISA PnP**. Take note that PCI card does not require DMA channel.

# AWARD BIOS

## PNP/PCI Configuration → PCI IDE IRQ Map To

<b>PCI IDE IRQ Map To</b>
ISA
PCI-Slot1
PCI-Slot2
PCI-Slot3
PCI-Slot4
PCI-Auto

Some old PCI IDE add-on cards are not fully PnP compatible. These cards require you to specify the slot in use to enable BIOS to properly configure the PnP resources. This function allows you to select the PCI slot for any PCI IDE add-on card present in your system. Set this item to **Auto** to allow BIOS to automatically configure the installed PCI IDE card(s).

## PNP/PCI Configuration → Primary IDE INT# PNP/PCI Configuration → Secondary IDE INT#

<b>Primary IDE INT#</b>
A
B
C
D

These two items, in conjunction with item "PCI IDE IRQ Map To", specify the IRQ routing of the primary or secondary channel of the PCI IDE add-on card (not the onboard IDE). Each PCI slot has four PCI interrupts aligned as listed in the table below. You must specify the slot in the "PCI IDE IRQ Map To", and set the PCI interrupt (INTx) here according to the interrupt connection on the card.

PCI Slot	Location 1 (pin A6)	Location 2 (pin B7)	Location 3 (pin A7)	Location 4 (pin B8)
Slot 1	INTA	INTB	INTC	INTD
Slot 2	INTB	INTC	INTD	INTA
Slot 3	INTC	INTD	INTA	INTB
Slot 4	INTD	INTA	INTB	INTC
Slot 5 (if any)	INTD	INTA	INTB	INTC

## PNP/PCI Configuration → Assign IRQ For USB

<b>Assign IRQ For USB</b>
Enabled
Disabled

This item lets you set an IRQ for USB.

# AWARD BIOS

---

## PNP/PCI Configuration → Assign IRQ For VGA

<b><u>Assign IRQ For VGA</u></b> Enabled Disabled	This item lets you set an IRQ for VGA.
---	--

## PNP/PCI Configuration → MODEM Use IRQ

<b><u>MODEM Use IRQ</u></b> 3, 4, 5, 7, 9, 10, 11, N/A	This item lets you set an IRQ for the modem.
--	--

## PNP/PCI Configuration → Used MEM Base Addr

<b><u>Used MEM base addr</u></b> N/A C800 CC00 D000 D400 D800 DC00	This item, in conjunction with the "Used MEM Length", lets you set a memory space for non-PnP compatible ISA card. This item specifies the memory base (start address) of the reserved memory space. The memory size is specified in the "Used MEM Length" .
---	--

## AWARD BIOS

---

**PNP/PCI Configuration → PCI Slot1 IRQ (Right)**

**PNP/PCI Configuration → PCI Slot2 IRQ**

**PNP/PCI Configuration → PCI Slot3 IRQ**

**PNP/PCI Configuration → PCI Slot4 IRQ (Left)**

<u>PCI Slot1 IRQ</u>
3
4
5
7
9
10
11
12
14
15
Auto

This item is reserved for engineering purpose to let you assign an IRQ manually to the add-on card on each PCI slot. If you select Auto, system will automatically assign an available value to the device.

It is suggested to use default setting, which is Auto, in order to comply with PnP specification completely.

# AWARD BIOS

---

## 3.7 Load Setup Defaults

The "Load Setup Defaults" option loads optimized settings for optimum system performance. Optimal settings are relatively safer than the Turbo settings. We recommend you to use the Optimal settings if your system has large memory size and fully loaded with add-on card (for example, a file server using double-sided 8MB DIMM x4 and SCSI plus Network card occupying the PCI and ISA slots).

Optimal is not the slowest setting for this mainboard. If you need to verify a unstable problem, you may manually set the parameter in the "BIOS Features Setup" and "Chipset Features Setup" to get slowest and safer setting.

## 3.8 Load Turbo Defaults


The "Load Turbo Defaults" option gives better performance than Optimal values. However, Turbo values may not be the best setting of this mainboard but these values are qualified by the AOpen RD and QA department as the reliable settings especially if you have limited loading of add-on card and memory size (for example, a system that contains only a VGA/Sound card and two DIMMs).

To attain the best system performance, you may manually set the parameters in the "Chipset Features Setup" to get proprietary setting. Make sure that you know and understand the functions of every item in Chipset Setup menu. The performance difference of Turbo from Optimal is normally around 3% to 10%, depending on the chipset and the application.

# AWARD BIOS

## 3.9 Integrated Peripherals

The following screen appears if you select the option "Integrated Peripherals" from the main menu. This option allows you to configure the I/O features.

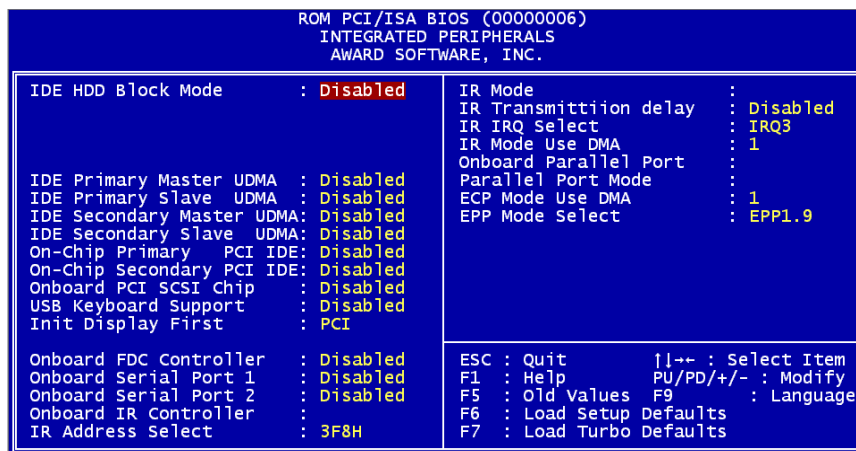

### Integrated Peripherals → IDE HDD Block Mode

<b>IDE HDD Block Mode</b>
Enabled
Disabled

This feature enhances disk performance by allowing multisector data transfers and eliminates the interrupt handling time for each sector. Most IDE drives, except with old designs, can support this feature.

## AWARD BIOS

---

**Integrated Peripherals → IDE Primary Master UDMA**

**Integrated Peripherals → IDE Primary Slave UDMA**

**Integrated Peripherals → IDE Secondary Master UDMA**

**Integrated Peripherals → IDE Secondary Slave UDMA**

**IDE Primary Master  
UDMA**

Auto

Disabled

This item allows you to set the Ultra DMA/33 mode supported by the hard disk drive connected to your primary IDE connector.

**Integrated Peripherals → On-Chip Primary PCI IDE**

**Integrated Peripherals → On-Chip Secondary PCI IDE**

**On-Chip Primary  
PCI IDE**

Enabled

Disabled

This parameter lets you enable or disable the IDE device connected to the primary IDE connector.

**Integrated Peripherals → Onboard PCI SCSI Chip**

**Onboard PCI SCSI  
Chip**

Enabled

Disabled

This item lets you enable or disable the Onboard AHA7880 SCSI Controller.

**Integrated Peripherals → USB Keyboard Support**

**USB Keyboard  
Support**

Enabled

Disabled

This item lets you enable or disable the USB keyboard driver within the onboard BIOS. The keyboard driver simulates legacy keyboard command and let you use USB keyboard during POST or after boot if you don't have USB driver in the operating system.



**Note:** You cannot use both USB driver and USB legacy keyboard at the same time. Disable "USB Keyboard Support" if you have USB driver in the operating system.

# AWARD BIOS

## Integrated Peripherals → Init Display First

### Init Display First

PCI  
AGP

If you installed a PCI VGA card and an AGP card at the same time, this item lets you decide which one is the initial display card.

## Integrated Peripherals → Onboard FDC Controller

### Onboard FDC Controller

Enabled  
Disabled

Setting this parameter to **Enabled** allows you to connect your floppy disk drives to the onboard floppy disk connector instead of a separate controller card. Change the setting to Disabled if you want to use a separate controller card.

## Integrated Peripherals → Onboard Serial Port 1

## Integrated Peripherals → Onboard Serial Port 2

### Onboard Serial Port

1  
Auto  
3F8/IRQ4  
2F8/IRQ3  
3E8/IRQ4  
2E8/IRQ3  
Disabled

This item allow you to assign address and interrupt for the board serial port. Default is **Auto**.



**Note:** If you are using an network card, make sure that the interrupt does not conflict.

## Integrated Peripherals → Onboard IR Controller

### Onboard IR Controller

Enabled  
Disable

To enable or disable onboard wireless Infrared controller.





---

### Integrated Peripherals → IR Address Select

<b><u>IR Address Select</u></b> 2E0H 2E8H 2F8H 3E0H 3E8H 3F8H	This item selects the address of IR controller.
---	---

### Integrated Peripherals → IR Mode

<b><u>IR Mode</u></b> ASKIR IrDA	This item selects the mode of onboard wireless Infrared controller. The IrDA standard includes both HPSIR and FIR, the driver in the Win95 will automatically change to different mode according to different chip.
--	---

- **ASKIR** - Select this setting if you installed an Infrared module via IrDA connector (refer to section 2.3 "Connectors"). This ASKIR setting allows infrared serial communication at a maximum baud rate of 56K baud.
- **HPSIR** - Select this setting if you installed an Infrared module in your system via IrDA connector (refer to section 2.3 "Connectors"). The HPSIR setting allows infrared serial communication at a maximum baud rate of 115K baud.
- **FIR** - Select this setting if you installed an Infrared module via IrDA connector (refer to section 2.3 "Connectors"). This FIR (Fast IR) setting allows infrared serial communication at a maximum baud rate of 4M baud.

### Integrated Peripherals → IR Transmission Delay

<b><u>IR Transmission delay</u></b> Enabled Disabled	If Enabled is selected, there will be a 4 character delay when SIR is changed from TX mode to RX mode.
--	--

# AWARD BIOS

---

## Integrated Peripherals → IR IRQ Select

<u>IR IRQ Selection</u>
IRQ3
IRQ4
IRQ10
IRQ11

This item selects the IRQ of IR port.



**Note:** If you are using a network card, make sure that the interrupt does not conflict.

## Integrated Peripherals → IR Mode Use DMA

<u>IR Mode Use DMA</u>
3
1
Disabled

This item lets you set the DMA channel of ECP mode.

## Integrated Peripherals → Onboard Parallel Port

<u>Onboard Parallel Port</u>
3BC/IRQ7
378/IRQ7
278/IRQ5
Disabled

This item controls the onboard parallel port address and interrupt.



**Note:** If you are using an I/O card with a parallel port, make sure that the addresses and IRQ do not conflict.

# AWARD BIOS

---

## Integrated Peripherals → Parallel Port Mode

<u>Parallel Port Mode</u>
SPP
EPP
ECP
ECP + EPP

This item lets you set the parallel port mode. The mode options are SPP (Standard and Bidirection Parallel Port), EPP (Enhanced Parallel Port) and ECP (Extended Parallel Port). SPP is the IBM AT and PS/2 compatible mode. EPP enhances the parallel port throughput by directly writing/reading data to/from parallel port without latch. ECP supports DMA and RLE (Run Length Encoded) compression and decompression.

## Integrated Peripherals → ECP Mode Use DMA

<u>ECP Mode Use DMA</u>
3
1

This item lets you set the DMA channel of ECP mode.

## Integrated Peripherals → EPP Mode Select

<u>EPP Mode Select</u>
EPP1.7
EPP1.9

This item lets you select EPP mode protocol.

# AWARD BIOS

---

## 3.10 Password Setting

Password prevents unauthorized use of your computer. If you set a password, the system prompts for the correct password before boot or access to Setup.

To set a password:

1. At the prompt, type your password. Your password can be up to 8 alphanumeric characters. When you type the characters, they appear as asterisks on the password screen box.
2. After typing the password, press **Enter**.
3. At the next prompt, re-type your password and press **Enter** again to confirm the new password. After the password entry, the screen automatically reverts to the main screen.

To disable the password, press **Enter** when prompted to enter the password. The screen displays a message confirming that the password has been disabled.

## 3.11 IDE HDD Auto Detection

If your system has an IDE hard drive, you can use this function to detect its parameters and enter them into the "Standard CMOS Setup" automatically.

This routine only detects one set of parameters for your IDE hard drive. Some IDE drives can use more than one set of parameters. If your hard disk is formatted using different parameters than those detected, you have to enter the parameters manually. If the parameters listed do not match the ones used to format the disk, the information on that disk will not be accessible. If the auto-detected parameters displayed do not match those that used for your drive, ignore them. Type **N** to reject the values and enter the correct ones manually from the Standard CMOS Setup screen.

## 3.12 Save & Exit Setup

This function automatically saves all CMOS values before leaving Setup.

### **3.13 Load EEPROM Default**

Except "Load Setup Default" and "Load Turbo Default", you may also use "Save EEPROM Default " to save your own settings into EEPROM, and reload by using this item.

### **3.14 Save EEPROM Default**

You may use this item to save your own settings into EEPROM. Then, if the data in CMOS is lost or you forget the previous settings, you may use "Load EEPROM Default " to reload.

### **3.15 Exit without Saving**

Use this function to exit Setup without saving the CMOS value changes. Do not use this option if you want to save the new configuration.

# AWARD BIOS

---

## 3.16 BIOS Flash Utility

The BIOS Flash utility allows you to upgrade the system BIOS. To get the AOpen Flash utility and the upgrade BIOS file, contact your local distributor or visit our homepage at <http://www.aopen.com.tw>. Please make sure that you have the correct BIOS ready, the BIOS filename is normally like AP5TR110.BIN, which means model AP5T BIOS revision 1.10.

There are two useful programs, Checksum utility CHECKSUM.EXE and AOpen Flash utility AOFLASH.EXE. Follow the procedures below to upgrade your BIOS.

### [CHECKSUM.EXE]

This utility will help you to determine if the BIOS has been downloaded correctly or not.

1. Execute  
C:> CHECKSUM Biosfile.bin  
Biosfile.bin is the filename of the BIOS code.
2. The utility will show "Checksum is ssss".
3. Compare the "sss" with original checksum posted on Web or BBS. If they are different, please do not proceed any further and try to download the BIOS again.

### [AOFLASH.EXE]

This utility will try to check the mainboard model, BIOS version and Super/Ultra IO chip model. To ensure the correct BIOS file for the correct mainboard and IO chip. This utility will permanently replace your original BIOS content after flashing.

1. Bootup the system from floppy without loading any memory handler (HIMEM, EMM386, QEMM386, ...) or device driver.
2. Execute  
A:> AOFLASH Biosfile.bin  
Biosfile.bin is the filename of the BIOS code.

## AWARD BIOS

---

3. After loading the new BIOS code, the utility will prompt you to save original BIOS code into your HDD or floppy. Please press "Y" to store it as "BIOS.OLD".
4. After the old BIOS has been successfully saved, press "Y" to replace BIOS.
5. DO NOT turn off the power during "FLASHING".
6. Reboot the system by turn off the power after "FLASHING".
7. Press "DEL" key to enter BIOS setup during POST.
8. Reload the "BIOS SETUP DEFAULT" and reconfigure other items as previous set.
9. Save & Exit. Done!



**Warning:** DO NOT turn off the power during "FLASHING". If the BIOS programming is not successfully finished, the system will not be boot again, and you may need to physically replace the BIOS chip.



**Tip:** You may load back original BIOS "BIOS.OLD" by the same procedure.



## Appendix A

# Frequently Asked Question



**Note:** FAQ may be updated without notice. If you cannot find the information that you need in this appendix, visit our WWW home page, (address: <http://www.aopen.com.tw>) and check the FAQ area and other new information.

### Q: How can I identify the mainboard BIOS version?

A: The AOpen mainboard BIOS version appears on the upper-left corner of the POST (Power-On Self Test) screen. Normally, it starts with R and is found in between the model name and the date. For example:

AP53/AX53 R3.80 Oct.22.1996

↖  
BIOS revision

### Q: How can I identify the model name & revision of the mainboard from PCB?

A: The AOpen mainboard revision appears as REV:X.X on the PCB, usually it is under beneath of AOpen Logo & mainboard model name. For example, "AX6L REV:1.2" shall appear on the PCB as follows:

**AOpen**<sup>®</sup>

**AX6L**  
REV:1.2

## Frequently Asked Questions

---

**Q: What is MMX?**

A: MMX is the new single-line multiple-instruction technology of the new Intel Pentium PP/MT (P55C) and Pentium II (Klamath) CPU. The AMD K6 and Cyrix M2 will support MMX, too. The MMX instructions are specifically useful for multimedia applications (such as 3D video, 3D sound, video conference). The performance can be improved if applications use these instructions. All AOpen MBs have at least dual power onboard to support MMX. It is not necessary to have special chipset for MMX CPU.

**Q: What is the performance improvement of Pentium II (Klamath)?**

A: Following is the comparison table of the new generation CPU.

DRAM : 64MB EDO or SDRAM

HDD : Quantum Fireball 1280AT

VGA : Matrox Millennium VGA, 4MB, 1024x768 24bit, 85Hz.

OS : Windows 95 4.00.950

CPU	MB	Chipset	Winstone97 Business	Winstone97 High-End
PP/MT-200	AP5T/AX5T	Intel 430TX	48.3	21.9
PP/MT-233	AP5T/AX5T	Intel 430TX	50.5	23.6
Pentium II 200	AX6F	Intel 440FX	45.3	24.1
Pentium II 233	AX6F	Intel 440FX	48.4	26.5
Pentium II 266	AX6F	Intel 440FX	50.8	28.2
Pentium II 266	AX6L	Intel 440LX	54.5	30.8

You can see that Klamath-233 is no better than PP/MT-233 on Business Winstone97, but it has large improvement on High-End Winstone97. It is probably because Klamath has very good floating point performance and is suitable for graphic operation.

**Q: What is USB (Universal Serial Bus)?**

A: USB is a new 4-pin serial peripheral bus that is capable of cascading low/medium speed peripherals (less than 10Mbit/s) such as keyboard, mouse, joystick, scanner, printer and modem/ISDN. With USB, the traditional complex cables from back panel of your PC can be eliminated.

You need the USB driver to support USB device(s). AOpen MBs are all USB ready, you may get latest BIOS from AOpen web site (<http://www.aopen.com.tw>). Our latest BIOS includes the keyboard driver (called Legacy mode), that simulates USB keyboard to act as AT or PS/2 keyboard and makes it possible to use USB keyboard if you don't have driver in your OS. For other USB devices, you may get the drivers from your device


## Frequently Asked Questions

---

vendor or from OS (such as Win95). Be sure to turn off "USB Legacy Support" in BIOS "Chipset Setup" if you have another driver in your OS.

**Q: What is FCC DoC (Declaration of Conformity)?**

A: The DoC is new certification standard of FCC regulations. This new standard allows DIY component (such as mainboard) to apply DoC label separately without a shielding of housing. The rule to test mainboard for DoC is to remove housing and test it with regulation 47 CFR 15.31. The DoC test of mainboard is more difficult than traditional FCC test. If the mainboard passes DoC test, that means it has very low EMI radiation and you can use any kind of housing (even paper housing). Following is an example of DoC label.

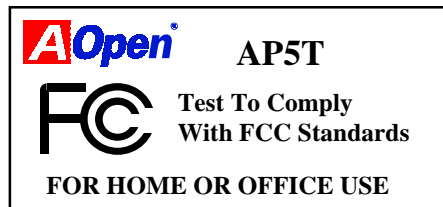

**Q: What is Bus Master IDE (DMA mode)?**

A: The traditional PIO (Programmable I/O) IDE requires the CPU to involve in all the activities of the IDE access including waiting for the mechanical events. To reduce the workload of the CPU, the bus master IDE device transfers data from/to memory without interrupting CPU, and releases CPU to operate concurrently while data is transferring between memory and IDE device. You need the bus master IDE driver and the bus master IDE HDD to support bus master IDE mode. Note that it is different with master/slave mode of the IDE device connection. For more details, refer to section 2.3 "Connectors".

**Q: What is the Ultra DMA/33?**

A: This is the new specification to improve IDE HDD data transfer rate. Unlike traditional PIO mode, which only uses the rising edge of IDE command signal to transfer data, the DMA/33 uses both rising edge and falling edge. Hence, the data transfer rate is double of the PIO mode 4 or DMA mode 2. (16.6MB/s x2 = 33MB/s).

The following table lists the transfer rate of IDE PIO and DMA modes. The IDE bus is 16-bit, which means every transfer is two bytes.

## Frequently Asked Questions

Mode	Clock per 33MHz PCI	Clock count	Cycle time	Data Transfer rate
PIO mode 0	30ns	20	600ns	(1/600ns) x 2byte = 3.3MB/s
PIO mode 1	30ns	13	383ns	(1/383ns) x 2byte = 5.2MB/s
PIO mode 2	30ns	8	240ns	(1/240ns) x 2byte = 8.3MB/s
PIO mode 3	30ns	6	180ns	(1/180ns) x 2byte = 11.1MB/s
PIO mode 4	30ns	4	120ns	(1/120ns) x 2byte = 16.6MB/s
DMA mode 0	30ns	16	480ns	(1/480ns) x 2byte = 4.16MB/s
DMA mode 1	30ns	5	150ns	(1/150ns) x 2byte = 13.3MB/s
DMA mode 2	30ns	4	120ns	(1/120ns) x 2byte = 16.6MB/s
DMA/33	30ns	4	120ns	(1/120ns) x 2byte x2 = 33MB/s

**Q: What is ACPI (Advanced Configuration & Power Interface) and OnNow?**

A: The ACPI is new power management specification of 1997 (PC97). It intends to save more power by taking full control of power management to operating system and not through BIOS. Because of this, the chipset or super I/O chip needs to provide standard register interface to OS (such as Win97) and provides the ability for OS to shutdown and resume power of different part of chip. The idea is a bit similar to the PnP register interface.

ACPI defines momentary soft power switch to control the power state transition. Most likely, it uses the ATX form factor with momentary soft power switch. The most attractive part of ACPI for desktop user is probably the "OnNow" feature, an idea from notebook. This feature allows you to immediately resume to your original work without the long time waiting from bootup, entering Win95 and running Winword. Intel 430TX PCIsset, 440LX AGPset and 440BX AGPset can support ACPI.

**Q: What is ATX Soft Power On/Off and Momentary Switch?**

A: The Soft Power On of the ATX specification means to provide a standby current for special circuit to wait for wakeup event when main power is off. For example, Infrared wakeup, modem wakeup, or voice wakeup. Currently, the most simple usage is to provide standby current for power switch circuit so that power switch can turn on/off the main power through soft power control pin. The ATX power specification does not mention anything about the power switch type. You can use toggle or momentary switch, note that ACPI specification requires momentary switch for power state control. All the AOpen ATX MBs support momentary switch and modem wakeup (Modem Ring-On).

## Frequently Asked Questions

---

Soft Power Off means to turn off system through software, Windows 95 Shutdown function can be used to verify if your mainboard supports soft power off. AOpen AX5T/AX5TC/AX6F/AX6L/AX6LC/AX6BAX6BC/AX6B Plus support soft power off.

**Q: What is RTC Wake Up Timer (Alarm)?**

A: RTC (Real Time Clock) is a device like electronic watch, and keep the date/time of the computer system running. The Wake Up Timer is more like an alarm, which wakes up and powers on your system at a pre-defined time for specific application. It can be set to wake up everyday or on specific date within a month. The date/time accurate is second. To set the date/time, go into BIOS setup, Power Management RTC Wake Up Timer, select Enable. RTC is a standard device of all the mainboard, but Wake Up Timer is not a standard design, AOpen AX5T/AX5TC/AX6F/AX6L/AX6LC/AX6B/AX6BC/AX6B Plus support RTC Wake Up Timer.

**Q: What is Lan Wake Up?**

A: Lan Wake Up is a technology that enables you to remotely manage the PCs in your network even if they have been turned off. When the client has been powered off, the remote network management software could send a wake-up frame ( or Magic packet) to the client if needed. The Lan Wake Up enabled adapter in the client will receive that frame can check it to determine whether the frame contains the correct MAC address. If so, the client turns on the system by Wake-up call, just as the user turns on the system manually with the ON/OFF button. The network management software will continue to perform the tasks that have been programmed to do.

**Q: What is the AGP (Accelerated Graphic Port)?**

A: AGP is a PCI-like bus interface targeted for high-performance 3D graphic. AGP supports only memory read/write operation and single-master single-slave one-to-one only. The AGP uses both rising and falling edge of the 66MHz clock and produces  $66\text{MHz} \times 4\text{byte} \times 2 = 528\text{MB/s}$  data transfer rate.

**Q: What is the AGP bus clock on Intel 440BX chipset?**

A: AGP used to perform as the same bus clock as the Intel 440LX chipset were. If we provide 75Mhz of bus clock to 440LX chipset, AGP will also perform with 75Mhz of clock. The Intel 440BX chipset which supports 100Mhz of bus clock behaves to meet the specification so that AGP bus clock is always kept by 66Mhz of clock no matter how 440BX chipset bus clock may be set. In this manner, it will ensure the compatibility & stability of the AGP within defined specification.

## Frequently Asked Questions

---

**Q: Why is there a resource conflict between my AGP VGA card & PCI-to-PCI bridge (or AGP bridge) within Device Manger under Windows95?**

A: It is normal for AGP cards to conflict with the PCI standard PCI-to-PCI bridge (or AGP bridge). Since Windows'95 does not inherently support AGP technology, it reports this conflict incorrectly. This conflict will not adversely affect the performance of your system. Attempting to resolve it will result in improper operation of the PC. This issue is expected to be fixed by Microsoft when Windows 98 released.

**Q: Does Pentium, Pentium Pro or Pentium II support Deturbo mode?**

A: The Deturbo mode was originally designed to slow down CPU speed for old applications (especially old games). It uses programming loop to wait or delay special event. This programming method is considered very bad since the delay of loop highly depends on the CPU speed and the application fails at high-speed CPU. Almost all new applications (including games) use RTC or interrupt to wait event. There is no need for Deturbo mode now. The Turbo switch is now used as Suspend switch. However, some MBs still support Turbo/Deturbo function via keyboard. You can set the system to Deturbo by pressing <Ctrl> <Alt> <->. To back to Turbo mode, press <Ctrl> <Alt> <+>. Note that the Deturbo mode has been removed in new MBs since these require more code space in Flash ROM.

**Q: Power Management Icon does not appear in the Windows 95 Control Panel even though the APM under BIOS Setup is enabled.**

A: This problem occurs if you did not enable the APM function before you install Windows 95. If you have already installed Windows 95, re-install it after the BIOS APM function is enabled.

**Q: Why does the system fail to go into suspend mode under Win95?**

A: This problem may be caused by your CDROM settings. The CDROM Auto Insert Notification of Win95 is default enabled, the system will continue to monitor your CDROM, auto-execute application when a CD diskette is loaded, and prevents the system from entering into suspend mode. To resolve this, go into Control Panel è System è Device Manager è CDROM è Setting, and disable the "Auto Insert Notification" function.

## Frequently Asked Questions

---

**Q: Which version of the Windows '95 that I am using?**

A: You may determine the version of Windows '95 by following steps.

1. Double click "System" in "Control Panel".
2. Click "General".
3. Look for "System" heading & refer to following,

4.00.950	Windows 95
4.00.950A	Windows 95 + Service Pack or OEM Service Release 1
4.00.950B	OEM Service Release 2 or OEM Service Release 2.1
4.00.950C	OEM Service Release 2.5

If you are running OSR 2.1, you may tell it from by checking "USB Supplement to OSR2" in the list of installed program of Add/Remove program tool under Control Panel, and checking for version 4.03.1212 of the Ntkern.vxd file in the Windows\System\Vmm32 folder.

**Q: How can I eliminate the "?" marks presented under Device Manager after installing Win'95 on TX or LX or BX based system?**

A: Even though your system will work fine with this "?" marks, we received many requests about how to eliminate it. AOpen software team spends few weeks to develop an utility AOchip.exe for the convenience of Win95 users. It is very user friendly and can be used on any TX, LX or BX chipset based motherboard, not limited to AOpen products. You are welcome to distribute it, if you like it, simply say thanks to our software team. Note that you need USB driver for USB devices to work properly which is expected to be implemented on Windows'98.

**Q: What is LDCM (LAN Desktop Client Manager)?**

A: This is a software of Intel. The major goal is to provide an easy way for corporate network administrator to monitor the status of all the clients (workstation). You need at least DMI BIOS for LDCM. AOpen BIOS is also DMI ready but unfortunately, Intel LDCM needs Intel network card and ATI VGA to work properly. It is obviously not suitable for home user to pay LDCM extra cost.

## Frequently Asked Questions

---

### **Q: How to install Windows 95 USB driver?**

A: If you are Win'95 OSR 2.0 user (.950B, shows "PCI Universal Serial Devices"), you may obtain USBSUPP.EXE from Microsoft or your OEM system provider for installing Microsoft USB supplement which will create "USB Supplement to OSR2" in the list of Add/Remove program tool under Control Panel. After above installation, please run AOchip.exe provided by AOpen to create USB Controller under Device Manager.

If you are Win'95 OSR 2.1 or 2.5 user, only AOchip.exe installation is necessary.

If you are Win'95 retail user (.950 or .950A), there is no direct upgrade path available from Microsoft at this moment. It is expected to be implemented under Windows'98.

### **Q: What is jumper-less mainboard?**

A: Pentium II VID signal and SMBus clock generator provide CPU voltage auto-detection and allows user to set CPU frequency through CMOS setup, no jumper or switch is needed. The correct CPU information is saved into EEPROM, with these technologies, the disadvantages of Pentium base jumper-less design are eliminated. There will be no worry of wrong CPU voltage detection and no need to re-open the housing if CMOS battery loss. The only jumper left is to clear CMOS, which is a safety hook if you forget the password. AOpen AX6L/AX6LC/AX6B/AX6B/AX6B Plus does implement jumper-less design.

### **Q: What is battery-less mainboard?**

A: AX6L/AX6LC/AX6B/AX6BC/AX6B Plus implements EEPROM and special circuit (patent applied) that allows you to save your current CPU and CMOS Setup configurations without the need of battery. The RTC (real time clock) can also keep running as long as power cord is plugged. If you lose your CMOS data by accident, you can just reload the CMOS configurations from EEPROM and the system will recover as usual.

### **Q: What is the benefit of using Resettable Fuse?**

A: The traditional pico-fuse needs to be replaced once it is burned due to any abnormal surge current. It has to be replaced by qualified repairing engineer which is cost & time consuming. With the updated technology, AOpen motherboard starts to introduce new 3Resettable3 fuse, which is 3PolySwitch3, to protect your keyboard & USB circuit. When there is surge current, this PolySwitch will reach high impedance within few m/seconds so that the circuit becomes opened. PolySwitch will be recovered to its original stage after surge current disappeared & the system is being cooled down for a while.



## Frequently Asked Questions

---

It is highly recommended to adopt 3Resetable3 fuse in order to fully support 3Hot-Plug3 feature on USB.

**Q: What is Multi-language BIOS?**

A: For giving AOpen 's worldwide users the best support, AOpen software team made every effort to overcome all difficulties and successfully develop a method to provide multi-language BIOS.

You may download and reflash a specified BIOS version from AOpen 's web site (For example, Chinese, Japanese, German, etc.). After entering BIOS Setup, you can switch to another language by pressing 3F93. Then pressing 3F93 again will let you return to English screen.

This breakthrough will help you set BIOS items without the language barrier.

**Q: What is Hardware Monitoring?**

A: There are four high-valued “Hardware Monitoring” features being implemented on AOpen ATX mainboard.

1. **Over Current Protection:** Providing over current protection for CPU Vcore. In conjunction with the over current protection provided by ATX power supply on 3.3V/5V/12V, it gives the full line over current protection.
2. **System Voltage Monitoring:** As you turn your system on, this smart design will continue to monitor your system working voltage. If any of the system voltage is over the component's standard, there will be warning alarm from PC speaker when AOHW100 or ADM installed.
3. **Thermal Protection:** The higher speed of CPU, the more heat dissipation ability is needed to be taken into consideration. If user does not use a correct fan for the CPU cooling, it is highly possible the CPU will be overheating and cause system unstable. AOpen mainboard monitors CPU & System temperatures by using two thermal sensors.
4. **Fan Monitoring:** There are two three-pin fan connectors, one is for CPU and the other one can be connected to the housing fan. The system will report the rotational speed of the fan and alarm fan malfunction though utility software such as AOHW100 or ADM.

## Frequently Asked Questions

---

**Q: What is AOHW100 (Hardware Monitoring Utility)?**

A: This is the Hardware Monitoring Utility software (AOHW100) developed by AOpen which monitors the status of system voltage, thermal, & fan. Instead of using ADM or LDCM which supports network administration, AOHW100 is especially designed for personal user. You may install it on your AOpen mainboard based system which comes with Hardware Monitoring features.

**Q: What is ADM (Advanced Desktop Manager)?**

A: This is a desktop client and server management software developed by AOpen. It is similar as Intel LDCM with some improvement. ADM is not only for corporate network management, it can also be used as system status monitoring utility, for example, CPU fan, thermal and system voltage monitoring.

Features	ADM 2.1	LDCM 3.0
VGA card	No limitation	Only ATI
Network card	No limitation	Only Intel
Support DMI BIOS 2.0	Yes	Yes
Support Win95	Yes	Yes
Support Win NT	Yes	Yes
Real-Time CPU/Memory Utilization Monitoring	Yes	No
Multi-Machine Monitoring on One Screen	Yes	No
Remote Management Protocol	Standard SNMP protocol	Intel proprietary RAP protocol
Standard SNMP Trap	Yes (so that can work with standard software such as HP Open View)	No
Remote File Transfer	No	Yes

## Frequently Asked Questions

### **Q: Why do AOpen MBs use many Electrolytic Capacitors instead of Tantalum Capacitor?**

A: The quality of Electrolytic capacitor has huge difference depends on model and vendor. Normally, Tantalum capacitor is better than Electrolytic capacitor, but good quality and high price Electrolytic capacitor is even better than Tantalum capacitor. Originally, AOpen motherboards use 100uF Tantalum capacitor nears CPU to reduce voltage ripple, but the technology improvement has introduced an 1000uF very low ESR (Equivalent Serial Resistor) of Electrolytic capacitor with only 0.15 ohm comparing with 0.7 ohm of Tantalum capacitor. The lower the ESR and higher the capacitance value, the smaller the CPU voltage ripple.

Following are the specifications of capacitors that AOpen is currently using:

Tantalum: SPRAGUE 100uF,  
Part number 595D107X06R3C2T,  
Max ESR is 0.7 at 25 degree 100KHz.

Electrolytic: SANYO 1000uF,  
Part number 16MV1000CG,  
Max ESR is 0.15 at 20 degree 100khz.

Also, more capacitors are not exactly equal to better CPU voltage, it depends on where you put your capacitor (the layout). The most accurate way is to use storage scope to measure the CPU voltage directly, but of course, it is difficult for end user to do so. AOpen design team follows Intel, AMD and Cyrix's design specification strictly, it is approved by Intel, AMD and Cyrix.

### **Q: What is PC 100 SDRAM?**

A: Although 440BX chipset supports 100MHz bus clock, however, it's apparent that traditional FPM and EDO DRAMs won't be able to work properly under this system clock frequency. In order to fully support 100MHz or even above bus clock system, Intel provided PC SDRAM Specifications to facilitate the development of SDRAM products. This is also known as PC 100 SDRAM specification. For getting the best performance and stability under 100MHz or above external clock, we strongly recommend you use the Synchronous DRAMs which meet the PC 100 requirement. The PC 100 SDRAM that AOpen QA Team had tested are listed below.

Size	Vendor	Model	Single/Double	Chip Count
16M	Micron	MT48LC2M8A1-08	x1	8
16M	TI	TMX626812BDGE-10A	x1	8
16M	Hyundai	HY57V168010CTC-10	x1	8

## Frequently Asked Questions

---

Size	Vendor	Model	Single/Double	Chip Count
32M	Micron	MT48LC2M8A1-08	x2	16
32M	Hyundai	HY57V168010CTC-10	x1	16
32M	NEC	D4516821AG5-A10-7JF	x1	16
32M	SEC	KM48S2020CT-GH	x1	16
128M	Simens	HYS72V16220GU	x2	18

**Q: What is the difference between 440LX and 440BX chipset?**

A: Following table lists the difference between 440LX and 440BX.

Features	440LX	440BX
Maximum external bus clock	66MHz	100MHz
SIMM support	Yes	No
Maximum DRAM size	1GB EDO DRAM or 512MB SDRAM	1GB SDRAM

---

## Appendix B

# Troubleshooting

In case you encounter any of the troubles listed below, follow the procedures accordingly to resolve the problem. If the first corrective action listed did not work, then try the next one.



**Important:** Make sure that you have tried listed procedures in this appendix before you call your distributor.



**Tip:** There are many useful information in our homepage, such as jumper settings, latest BIOS, drivers, and more FAQs. Visit our homepage to see if there is answer of your problem.

**Taiwan** <http://www.aopen.com.tw>

**USA** <http://www.aopen-usa.com>

<http://www.aopenamerica.com>

**Europe** <http://www.aopen.nl>

### No display

1. Check all jumper settings according to section 2.2 "Jumpers". Make sure that you have set the proper jumpers especially those for CPU frequency, core and IO voltage select functions. Ask your CPU dealer for the correct CPU specifications.
2. Check the power cord or power switch of your system. The simple way to identify power failure is to check the CPU fan and the power supply fan. If these are not working, then the power is down.
3. Turn off the power and remove all add-on cards, connectors and SIMMs/DIMMs from your mainboard. Then reinstall the VGA card and two SIMMs or one DIMM. Turn on the power again. If you can see the POST (power-on-self-test) screen, the problem is your add-on cards or peripheral.

## Troubleshooting

---

try to reinstall the add-on cards one by one to find out which card is causing the problem.

4. Check the monitor and VGA cable. Press the <Num Lock> key to enable/disable the Num Lock function. If the Num Lock LED works properly, this indicates that your CPU, SIMM and BIOS bootup sequence are properly functioning. The problem may be caused by your VGA or monitor.

### **Unstable system or HDD, HDD with bad sector. System sometimes hangs or auto reboots.**

1. Check all jumper settings according to section 2.2 "Jumpers". Make sure that you have set the proper jumpers especially those for CPU frequency, core and IO voltage select functions. Ask your CPU dealer for correct CPU specification. The remarked CPU is very popular in the market, we recommend that you use a Box CPU, i.e., CPU sold in package with warranty card inside.
2. Check if your SIMM has less than 24 chips. Refer to section 2.4 "Configuring the System Memory" for details.
3. Set DRAM timing to 70ns and disable all enhanced chipset features in BIOS. The default BIOS timing is 60ns for better performance. If you are using an old SIMM or a remarked SIMM, you may need to manually slow down the DRAM timing and disable the chipset features. Refer to chapter 3 "Chipset Features Setup" for details.
4. Disable the power management and USB functions. Some add-on cards, drivers or applications may not be compatible with these functions.
5. Disable the external cache (2nd level cache) in chapter 3 "Advanced CMOS Setup" (AMI) or "BIOS Features Setup" (AWARD). If the system works fine, your cache module or onboard PBRAM may be malfunction.
6. Enter BIOS and set the HDD "Block" and "32-bit" mode parameters to OFF. Refer to Chapter 3 "Standard CMOS Setup" (AMI) or "Integrated Peripherals" (AWARD) for details. Also, if possible set HDD PIO mode 2 or 3 to a slower transfer speed.
7. Turn off the power and remove all add-on cards, connectors and SIMMs from your mainboard. Then reinstall the VGA card, two SIMMs and connect only one hard disk to the end-most connector of the IDE cable. The IDE cable length must not exceed 46cm (18inches), refer to section 2.3 "Connectors". If the system functions properly, reinstall the add-on cards one by one. This will help you find out which card or device is causing the problem. Be sure to connect the 2nd IDE device (HDD/CD-ROM) to the primary channel slave mode.

## Troubleshooting

---

8. If your CPU bus frequency is 66MHz, set the CPU external/bus frequency to 60MHz, but leave the CPU core/bus frequency ratio unchanged. Normally, CPU with 66MHz bus frequency works properly at slower speed, e.g., 60MHz. This will help you identify if the CPU is remarked or if the mainboard or add-on card is unstable at 66MHz.

### **Keyboard, Mouse, Printer or Floppy is not working properly.**

1. Check the cable and bracket. Make sure that pin 1 of the cable is connected to pin1 of the connector. Pin 1 of the flat cable is indicated by a red-colored wire. Refer to section 2.3 "Connectors".
2. If possible, use another system to test the peripherals and cables. Check if these are working properly.
3. If possible, use another peripheral to double check if the mainboard or the cable is defective.

### **CMOS data lost, forget password.**

1. Refer to section 2.2 "Jumpers". Locate the CMOS jumper and follow the procedures on how to clear the CMOS. Load the BIOS optimal settings (AMI) or load BIOS default settings (Award).
2. If your mainboard comes with a battery, simply change it. If your mainboard comes with Dallas DS12887A compatible RTC, the occurrence of low battery problem is very rare since RTC battery is expected to last for 7 years. In this case, you have to send the mainboard back to your distributor.

### **Incompatible add-on card, peripheral, operating system, and application.**

1. Check all jumper settings according to section 2.2 "Jumpers".
2. Check if you have a Legacy ISA card (non PnP). If yes, set the IRQ and DMA for this card to Legacy/ISA. Refer to Chapter 3 "PCI/PnP Setup" section. If you are using a PnP operating system such as Win95, enable the "Plug-and-Play Aware O/S" parameter in BIOS and let the OS configure the system.
3. Disable all enhanced chipset features. Refer to Chapter 3 "Chipset Features Setup" for details.
4. Disable the power management and USB functions. Some add-on cards, drivers or applications are not compatible with these functions.

## Troubleshooting

---

5. Disable the external cache (2nd level cache) and system BIOS cacheable or VGA BIOS cacheable parameters in BIOS. Refer to Chapter 3 "Advanced CMOS Setup" section. Some applications has trouble at higher system speed.
6. Visit our WWW home page, (address <http://www.aopen.com.tw>), check the FAQ area (frequently asked question) and download the latest BIOS, try again with the latest BIOS.



**Important:** *If problem still exist after you have done all the corrective actions listed in this appendix, fill out the attached problem report form. Write down your configuration and error symptoms as detailed as possible. The more detailed information you give us, the faster we can identify and solve your problem. You can copy this form and fax it to your distributor or send the form via e-mail. Refer to Appendix B "Frequently Asked Question" for information on how to identify the BIOS and the mainboard versions.*



## Troubleshooting

<b>Technical Problem Report Form</b>																									
<b>FROM:</b>	Name: _____  TEL: _____ FAX: _____  Email address: _____																								
<b>Error Symptom:</b>																									
<b>Error Type:</b> (Please mark in the box and list the model and version below.)	<table style="width: 100%; border: none;"> <tr> <td><input type="checkbox"/> PS/2 mouse</td> <td><input type="checkbox"/> COM1/COM2, serial mouse.</td> </tr> <tr> <td><input type="checkbox"/> Printer</td> <td><input type="checkbox"/> Parallel Tape</td> </tr> <tr> <td><input type="checkbox"/> Floppy</td> <td><input type="checkbox"/> Floppy Tape</td> </tr> <tr> <td><input type="checkbox"/> IDE HDD</td> <td><input type="checkbox"/> IDE CDROM</td> </tr> <tr> <td><input type="checkbox"/> Keyboard</td> <td><input type="checkbox"/> VGA</td> </tr> <tr> <td><input type="checkbox"/> Sound/Modem</td> <td><input type="checkbox"/> SCSI HDD</td> </tr> <tr> <td><input type="checkbox"/> SCSI CDROM</td> <td><input type="checkbox"/> SCSI Tape</td> </tr> <tr> <td><input type="checkbox"/> Ethernet</td> <td><input type="checkbox"/> Tokenring</td> </tr> <tr> <td><input type="checkbox"/> USB</td> <td><input type="checkbox"/> DOS</td> </tr> <tr> <td><input type="checkbox"/> Win95</td> <td><input type="checkbox"/> Windows 3.1</td> </tr> <tr> <td><input type="checkbox"/> Window NT</td> <td><input type="checkbox"/> OS/2</td> </tr> <tr> <td><input type="checkbox"/> UNIX</td> <td><input type="checkbox"/> Others: _____</td> </tr> </table>	<input type="checkbox"/> PS/2 mouse	<input type="checkbox"/> COM1/COM2, serial mouse.	<input type="checkbox"/> Printer	<input type="checkbox"/> Parallel Tape	<input type="checkbox"/> Floppy	<input type="checkbox"/> Floppy Tape	<input type="checkbox"/> IDE HDD	<input type="checkbox"/> IDE CDROM	<input type="checkbox"/> Keyboard	<input type="checkbox"/> VGA	<input type="checkbox"/> Sound/Modem	<input type="checkbox"/> SCSI HDD	<input type="checkbox"/> SCSI CDROM	<input type="checkbox"/> SCSI Tape	<input type="checkbox"/> Ethernet	<input type="checkbox"/> Tokenring	<input type="checkbox"/> USB	<input type="checkbox"/> DOS	<input type="checkbox"/> Win95	<input type="checkbox"/> Windows 3.1	<input type="checkbox"/> Window NT	<input type="checkbox"/> OS/2	<input type="checkbox"/> UNIX	<input type="checkbox"/> Others: _____
<input type="checkbox"/> PS/2 mouse	<input type="checkbox"/> COM1/COM2, serial mouse.																								
<input type="checkbox"/> Printer	<input type="checkbox"/> Parallel Tape																								
<input type="checkbox"/> Floppy	<input type="checkbox"/> Floppy Tape																								
<input type="checkbox"/> IDE HDD	<input type="checkbox"/> IDE CDROM																								
<input type="checkbox"/> Keyboard	<input type="checkbox"/> VGA																								
<input type="checkbox"/> Sound/Modem	<input type="checkbox"/> SCSI HDD																								
<input type="checkbox"/> SCSI CDROM	<input type="checkbox"/> SCSI Tape																								
<input type="checkbox"/> Ethernet	<input type="checkbox"/> Tokenring																								
<input type="checkbox"/> USB	<input type="checkbox"/> DOS																								
<input type="checkbox"/> Win95	<input type="checkbox"/> Windows 3.1																								
<input type="checkbox"/> Window NT	<input type="checkbox"/> OS/2																								
<input type="checkbox"/> UNIX	<input type="checkbox"/> Others: _____																								
<b>System Configuration:</b> (Please list model name and version.)	<table style="width: 100%; border: none;"> <tr> <td>MB: _____</td> <td>BIOS: _____</td> </tr> <tr> <td>CPU: _____</td> <td>SIMM: _____</td> </tr> <tr> <td>HDD: _____</td> <td>CDROM: _____</td> </tr> <tr> <td>VGA: _____</td> <td>OS: _____</td> </tr> <tr> <td colspan="2">Others: _____</td> </tr> </table>	MB: _____	BIOS: _____	CPU: _____	SIMM: _____	HDD: _____	CDROM: _____	VGA: _____	OS: _____	Others: _____															
MB: _____	BIOS: _____																								
CPU: _____	SIMM: _____																								
HDD: _____	CDROM: _____																								
VGA: _____	OS: _____																								
Others: _____																									

---

## Appendix C

# Jumper Table Summary

### Selecting the CPU Frequency

With the help of Pentium II VID signal and SMBus, this motherboard is jumperless design.

The CPU frequency selection is set by going into:

#### **BOIS Setup à Chipset Features Setup à CPU Clock Frequency**

(The possible setting is 66, 68.5, 75, 83.3, 100, 103, 112 and 133.3 MHz)

#### **BOIS Setup à Chipset Features Setup à CPU Clock Ratio**

(The possible setting is 1.5x, 2x, 2.5x, 3x, 3.5x, 4x, 4.5x, 5x, 5.5x, 6x, 6.5x, 7x, 7.5x, and 8x)

INTEL Pentium II	CPU Core Frequency	Ratio	External Bus Clock
Pentium II - 233	233MHz =	3.5x	66MHz
Pentium II - 266	266MHz =	4x	66MHz
Pentium II - 300	300MHz =	4.5x	66MHz
Pentium II - 333	333MHz =	5x	66MHz
Pentium II - 350	350MHz=	3.5x	100MHz
Pentium II - 400	400MHz=	4x	100MHz
Pentium II - 450	450MHz=	4.5x	100MHz
Celeron 266	266MHz=	4x	66MHz
Celeron 300	300MHz	4.5x	66MHz
Celeron 300A	300MHz	4.5x	66MHz
Celeron 333	333MHz	5x	66MHz



**Warning:** INTEL 440BX chipset supports maximum 100MHz external CPU bus clock, the 103, 112 and 133.3MHz are for internal test only. **These settings exceed the specification of BX chipset, which may cause serious system damage.**

## Jumper Table Summary

---

### Selecting the CPU Voltage

This motherboard supports Pentium II (Klamath) VID function, the CPU core voltage is automatically detected, the range is from 1.3V to 3.5V.

### Clear CMOS

<b>JP14</b>	<b>Clear CMOS</b>
1-2	Normal operation (default)
2-3	Clear CMOS



**Tip:** If your system hangs or fails to boot because of over-clocking, please clear CMOS and the system will go back to default setting. Except using JP14, you can also press <Home> key to clear CMOS while system booting.

### AGP Ratio

<b>JP23</b>	<b>AGP Ratio</b>
1-2	Auto
3-4	2/3
5-6	1/1