


# 96M2981o

## Layout und Jumperbelegung

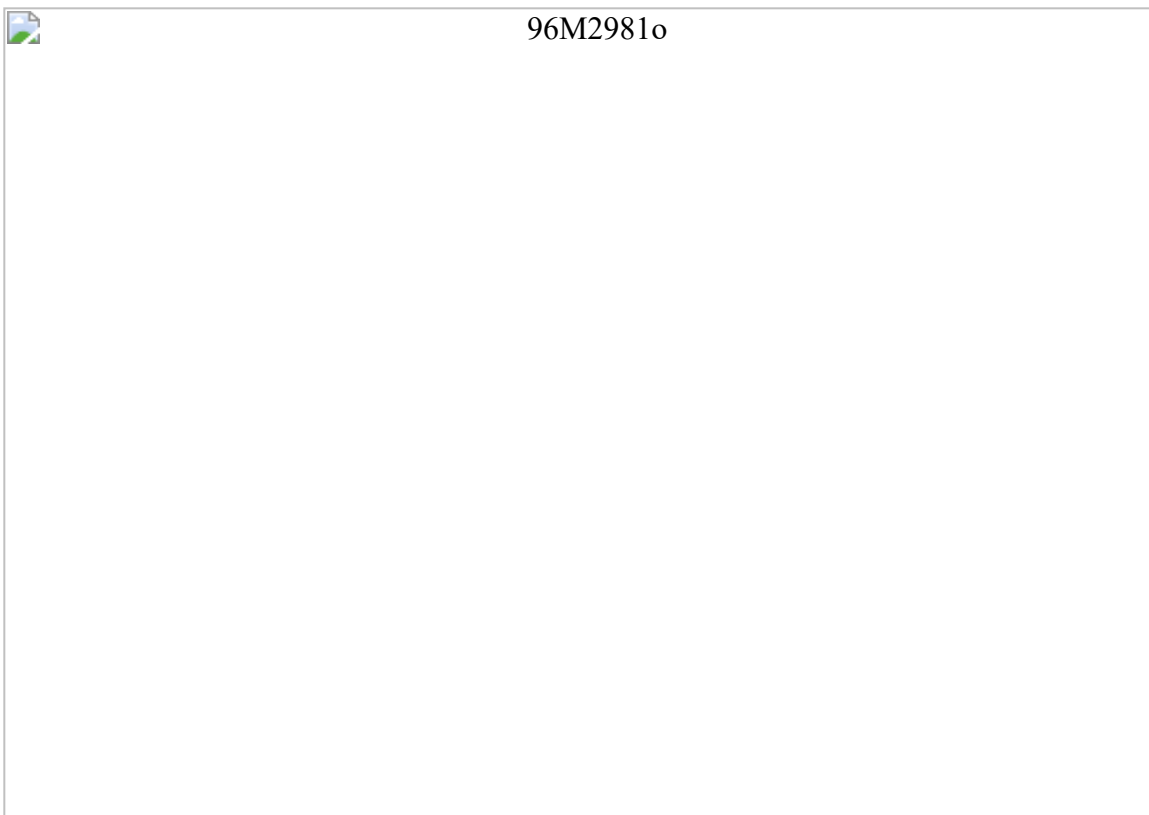

CPU-Typ	CPU Clock	JP7	JP8	JP9	JP10
Intel Pentium 75MHz	50MHz	3-5 4-6	offen	offen	offen
Intel Pentium 90MHz	60MHz	1-3 4-6	offen	offen	offen
Intel Pentium 100MHz	66MHz	2-4 3-5	offen	offen	offen
Intel Pentium 120MHz	60MHz	1-3 4-6	offen	1-2	offen
Intel Pentium 133MHz	66MHz	2-4 3-5	offen	1-2	offen
Intel Pentium 150MHz	50MHz	3-5 4-6	offen	offen	1-2
Intel Pentium 166MHz	66MHz	2-4 3-5	offen	1-2	1-2
Intel Pentium 200MHz	66MHz	2-4 3-5	offen	offen	1-2
Cyrix 6x86/P-120+	50MHz	3-5 4-6	1-2	offen	offen
Cyrix 6x86/P-150+	60MHz	1-3 4-6	1-2	offen	offen
Cyrix 6x86/P-166+	66MHz	2-4 3-5	1-2	offen	offen
CPU Spannung					JP6
3.3V					1-2
3.52V					3-4
2.5V					5-6
2.75V					7-8
RS-232 / 422 / 485 Einstellung COM2		JP1			
RS-232		1-2			
RS-422		1-3 5-6 7-8 9-10 11-12 17-18 19-20 21-22 23-24			
RS-485		1-3 4-6 7-8 9-10 11-12 13-14 15-16 17-18 19-20 21-22 23-24			

Tastatur / PS/2 Maus Umschaltung	JP4	JP5
PS/2 Tastatur	2-3	1-2
PS/2 Maus	2-3	1-2

