

M54Pi Jumper Settings:

Jumper	Configuration	Setting
JP1	90MHz 75Mhz	1-2 2-3
JP36	75Mhz/90Mhz 100Mhz	Installed Not Installed
JP37	75Mhz 90Mhz 100Mhz	Installed Not Installed Installed
JP38	75Mhz 90Mhz 100Mhz	Not Installed Installed Not Installed

Jumper	Configuration	Setting
JP7	Read Only To Perform Flash BIOS Update	Not Installed Installed

Jumper	Configuration	Setting
JP10	Clear the Real-Time Clock	Installed

Jumper	Configuration	Setting
JP5	256K 512K	2-3 1-2
JP19	256K 512K	1-2 2-3

Jumper	Configuration	Setting
JP4	PCI IDE Chip Enabled (default) PCI IDE Chip Disabled	Not Installed Installed

Jumper	Configuration	Setting
JP11	Mono Color	Not Installed Installed

Jumper	Configuration	Setting
JP3	Primary IDE IRQ 14 (default) Primary IDE IRQ 15	1-2 2-3
JP12	Secondary IDE IRQ 14 Secondary IDE IRQ 15 (default)	1-2 2-3
JP17	Parallel Port IRQ 7 Parallel Port IRQ 5	1-2 2-3

Jumper	Configuration	Setting
JP13	DMA 6 for 2 nd IDE DMA 7	1-2 2-3
JP14	DMA 6 DMA 7	1-2 2-3
JP15	DMA 1 for parallel DMA 3	1-2 2-3
JP16	DMA 1 DMA 3	1-2 2-3
Jumper	Configuration	Setting

JP18	Enable SMC665 (default) Disable SMC665	Not Installed Installed
------	---	----------------------------

Jumper	Configuration	Setting
JP2	Reserved	Not Installed
JP25 & JP27	PS/2 Mouse Connector (may not be present)	
JP23	External PC/AT Keyboard Connector (may not be present)	
JP26	PS/2 Keyboard Connector (may not be present)	
JP24	PC/AT Keyboard Connector (may not be present)	
JP31	Serial Port A	Can be disabled at the CMOS
JP32	Serial Port B	Can be disabled at the CMOS
JP33	Parallel	
J5	PCI IDE Connector (primary)	
JP34	Floppy IDE Connector	
J29	On-board IDE LED	
J12	Reset Switch	1-signal; 2-ground
J1	Speaker Connector	1-power LED; 2-N/C; 3-ground; 4-(+) 5V DC
J13	Power LED/ Keylock	1-power LED; 2-N/C; 3-ground; 4-keybd LCK; 5-ground
J30	ISA IDE Connector (secondary)	