

HP Consumer Support

Motherboard Specifications, AM37 (Salsa)

[Print](#) [Share](#)[Motherboard specification chart](#)[Layout and Photographs](#)[Clearing the CMOS settings](#)[Setting the front side bus speed](#)

Motherboard specification chart

Feature / Specifications	Description
Motherboard Description	<ul style="list-style-type: none">Manufacturer's name - FIC AM37HP/Compaq name - Salsa
Motherboard Supplier	FIC
Motherboard Name	AM37
System BIOS Supplier	Award
Form Factor	uATX
Processor Brand	AMD
Processor Socket Type	Socket-A (PGA462)
Processor Family	Duron, Athlon, AthlonXP
Proc. Front Side Bus Freq.	200/266 MHz
Chipset Name	VIA KM266
Chipset "North Bridge"	n/a
Revision/stepping	A1
Chipset "South Bridge"	VT8235
Super I/O	ITE-IT8705F
Flash BIOS Device	Xbus 2 Mbit
Memory Type	DDR
Memory Speed	PC2100/PC1600

[Contact HP](#)

Tips

We are currently updating our customer support system and are unable to process your service order at this time. Please check back after September 14th (10:00 AM MT) for your order status.

[Extend your warranty with HP Care Pack Services](#)[Check out the HP Total Care Support Videos](#)

Recently browsed products

[HP Pavilion Media Center m8325f Desktop PC](#)

Related support links

[Check warranty status](#)[Check repair order](#)

HP Support forums

Find solutions and collaborate with others on the HP Support Forum

[Join the conversation](#)

T	TV-out on motherboard
U	Graphics card (up, not on motherboard)
W	Microsoft(R) Windows XP hardware compliant

[Back to top](#)

Layout and Photographs

Figure 1: Layout

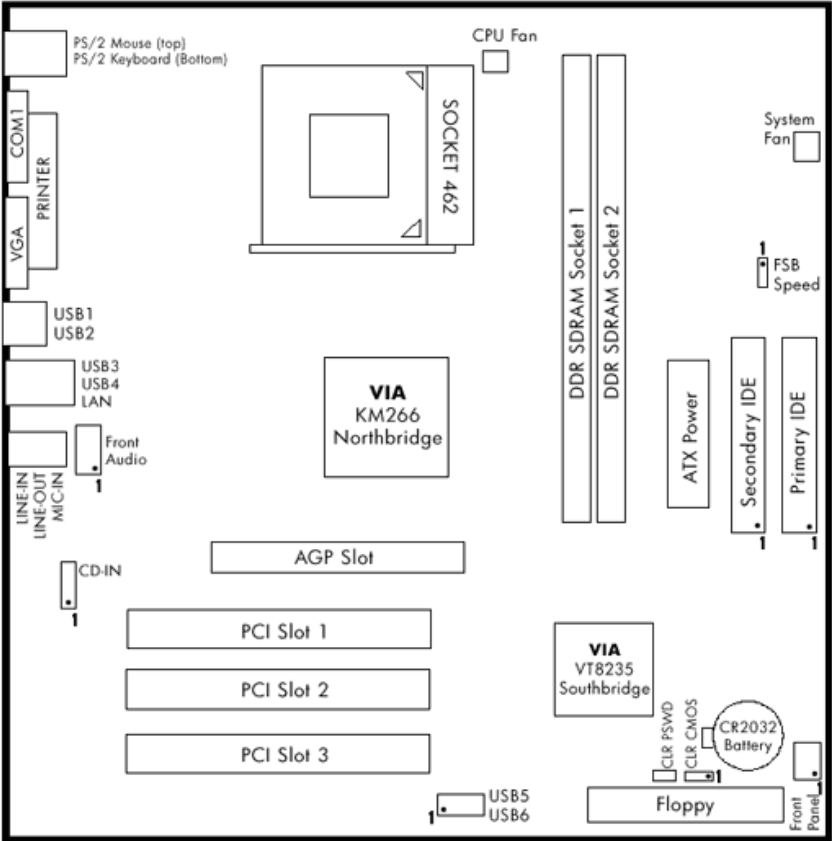


Figure 2: Photograph




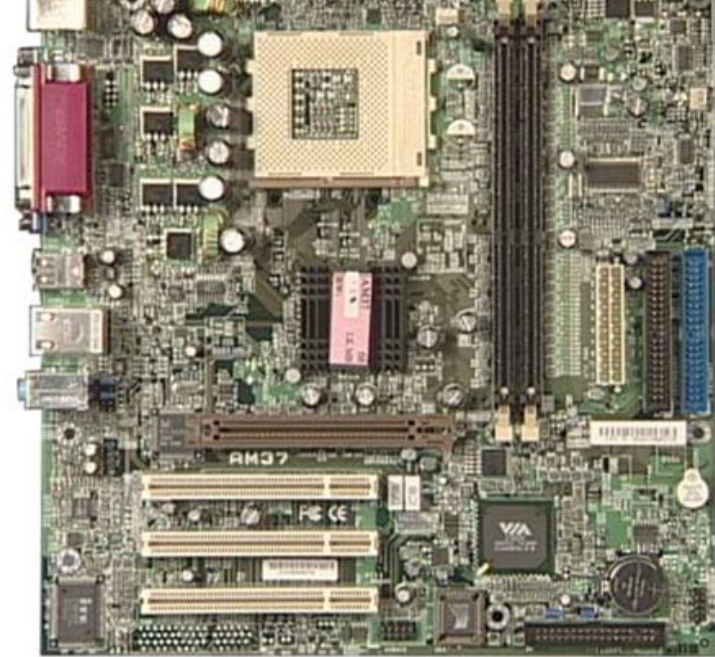


Figure 3: backplate

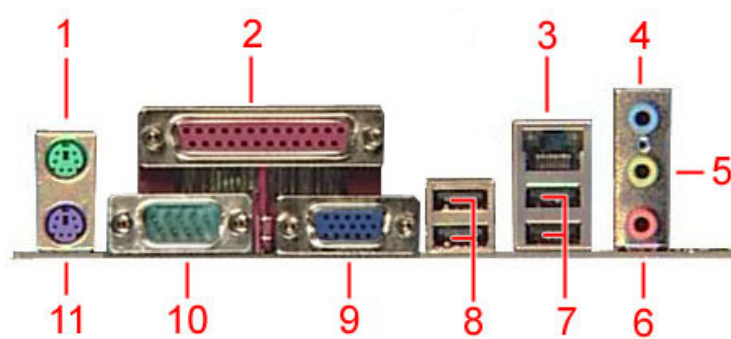

1 - PS/2 mouse

2 - Parallel port

3 - RJ-45 connector

4 - Line in jack

5 - Line Out jack

6 - Microphone jack

7 - USB 2.0 connectors

8 - USB 2.0 connectors

9 - VGA connector

10 - Serial connector

11 - PS/2 Keyboard

[Back to top](#)


Clearing the CMOS settings

The 3-pin CLR jumper allows you to clear the date, time, and system setup parameter memories in CMOS. The onboard button cell battery powers the RAM data in CMOS, including system setup information.



CAUTION: Do not change any jumper setting while the computer is on. Damage to the motherboard can result.

1. Turn off the PC and unplug the power cord.
2. Move the CLR jumper cap from pins 1-2 (default) to pins 2-3 (clear CMOS).

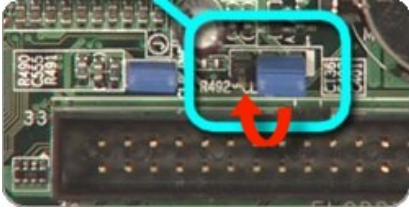


3. Keep the jumper cap on pins 2-3 for 5 to 10 seconds, then move it back to pins 1-2.
4. Plug in the power cord and turn on the PC.
5. Enter the **BIOS setup** to change the BIOS settings.

Clearing the BIOS password

The BIOS password protects the BIOS from undesired changes (Password checking is disabled by default for this motherboard). To disable password checking, use the following steps:

1. Turn off the PC and unplug the power cord.
2. Remove the CLR_PWD jumper cap.

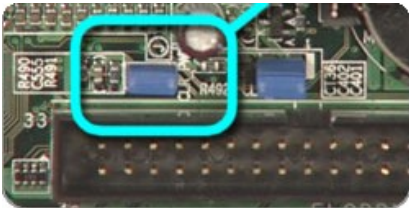

3. To enter BIOS setup, start the PC and press the **F1** key as the PC boots.
4. Clear or reset the BIOS password.
5. Save the BIOS settings and turn off the PC.
6. If desired, reactivate BIOS password checking by replacing the CLR_PWD jumper cap.

Setting the front side bus speed

To set the bus speed to 133MHz bridge pins 1 and 2 on the FSB Speed jumper. The white mark at the end of the jumper block indicates pin 1. To set the bus speed to 100MHz bridge pins 2 and 3.



[Back to top](#)

 United States

[Mobile version](#)

About HP

Contact us

Newsroom

Investor relations

Living Progress

Accessibility

Events

HP Labs

Jobs

Social Media

Consumer support forum

Enterprise business community

Corporate blogs



HP Partners

Become a partner

Find a reseller

PartnerOne

Customer Support

Power cord replacement

Download drivers

Register your product

Authorized service providers

Training & certification

Product recycling

[Home](#) | [Email sign-up](#) | [Site map](#) | [Privacy](#) | [Cookies & ad choices](#) | [Terms of use](#) | [Recalls](#)

© 2014 Hewlett-Packard Development Company, L.P.

[View mobile site](#)