

R543 Jumper Setting

SIMM Module Installing Table

Memory	Bank 0		Bank 1	
	SIMM 1	SIMM 2	SIMM 3	SIMM 4
8 MB	4 MB	4 MB	-	-
16 MB	4 MB	4 MB	4 MB	4 MB
24 MB	4 MB	4 MB	8 MB	8 MB
40 MB	4 MB	4 MB	16 MB	16 MB
72 MB	4 MB	4 MB	32 MB	32 MB
16 MB	8 MB	8 MB	-	-
32 MB	8 MB	8 MB	8 MB	8 MB
48 MB	8 MB	8 MB	16 MB	16 MB
80 MB	8 MB	8 MB	32 MB	32 MB
32 MB	16 MB	16 MB	-	-
64 MB	16 MB	16 MB	16 MB	16 MB
96 MB	16 MB	16 MB	32 MB	32 MB
64 MB	32 MB	32 MB	-	-
128 MB	32 MB	32 MB	32 MB	32 MB

CMOS Clear Jumper: JP 1

Function	JP1 Setting
(a) Normal (default)	1-2 short
(b) Clear CMOS	2-3 short