

Jazz Up Your PC by

**Octek** Mainboard

**Octek-**  
It Always  
Delivers  
Better Tech.

**Rhino 18+**

Pentium® Mainboard

English

Chinese



**PCI**  
LOCAL BUS



**Octek**

**Mainboard**

### Copyright Notice

© Copyright 1997 Ocean Office Automation Ltd.  
All rights reserved.  
Ocean Office Automation Ltd.  
5th Floor, Kader Industrial Building,  
22 Kai Cheung Road, Kowloon Bay,  
Kowloon, Hong Kong.

All of the information contained in this manual is copyrighted and all rights reserved. No part of this document, in whole or in part, may be reproduced or copied in any form without prior consent in writing from Ocean Office Automation Ltd.  
For updated BIOS, drivers, or product release information, please visit Octek home page at :  
<http://www.oceanhk.com/>

### Limitations of Liability

While the information in this manual has been carefully reviewed and is believed to be accurate, Ocean Office Automation Ltd. (Ocean) assumes no responsibility in the event that any inaccuracies are found. In no event shall Ocean be held liable for any loss or expenses whether directly or indirectly caused by the support materials provided with this product. It is further acknowledged that Ocean is under no obligation to update the manual or to notify purchasers of any forthcoming updates.

### Trademarks

Pentium and Intel are registered trademarks of Intel Corporation.  
Cyrrix is registered trademark of Cyrix International, Inc..  
AMD is registered trademark of Advanced Micro Device Corporation.  
Octek is a registered trademark of Ocean Office Automation Ltd.  
XT, AT, PS/2, OS/2, & IBM are registered trademarks of International Business Machines Corporation.

All other brand and product names mentioned in this manual are trademarks or copyrights of their respective holders.

REVISION 1.0 OCTOBER 1997

Table of Contents

**Chapter 1: System Overview**

1.1 General Specification Overview ..... 1

**Chapter 2: Hardware Installation and Upgrade**

2.1 Layout of Rhino 18+ Main Board ..... 3

2.2 CPU Related Setting..... 4

2.3 CPU Cooling Fan and Heatsink ..... 5

2.4 Voltage for DIMM sockets..... 6

2.5 Reset CMOS..... 6

2.6 Connectors Pinout..... 6

**Chapter 3 : Memory Configuration**

3.1 Memory Configuration..... 8

**Chapter 4 : CMOS Setup Configuration**

4.1 CMOS Setup Utility ..... 9

4.2 Standard CMOS Setup ..... 10

4.3 BIOS Features Setup ..... 11

4.4 Chipset Features Setup ..... 14

4.5 Power Management Setup..... 15

4.6 PnP/PCI Configuration..... 17

4.7 Integrated Peripherals..... 18

4.8 Load Setup Defaults ..... 19

4.9 Supervisor /User Password..... 20

4.10 IDE HDD Auto Detection..... 20

4.11 Save and Exit Setup..... 21

4.12 Exit without Saving..... 21

**Quick Manual for Rhino 18+**

1.1 General Specifications Overview

**Processor:**

- Processor Type Intel Pentium, Pentium with MMX, AMD K5/K6, Cyrix/IBM 6x86/6x86L/6x86MX
- External CPU clock 50/55/60/66/75 Mhz
- CPU voltage Switching Voltage Regulator support single/dual power plane

**Chipset:**

- Motherboard chipset VIA VT82C585VPX

**Cache Architecture:**

- External Cache 256K/512K Byte on-board Synchronous Pipelined Burst SRAM

**Memory Subsystem:**

- DRAM SIMM sockets 4 x 72 pin 4MB/8MB/16MB/32MB/64MB modules
- SDRAM DIMM sockets 1x168 pin 8MB/16MB/32MB/64MB Synchronous DRAM / EDO RAM modules
- Max. Memory Size 256MB
- DRAM Type Fast Page Mode or EDO DRAM or Synchronous DRAM
- Enhancement Mix of Fast Page Mode or EDO DRAM supported

**Input/Output Subsystem**

- PCI bus slots 3 x 32-bit PCI bus slots (3 masters)
- ISA bus slots 2 x 16-bit ISA slots
- Shared bus slots 1 x 32-bit PCI bus slot (master) OR 1 x 16-bit ISA slot

**Integrated IDE, Super I/O Subsystem**

- IDE support Built-in PCI IDE controller  
Two connectors supporting up to 4 IDE drives  
Support Mode 3, 4 IDE, Ultra DMA33,LS-120 floppy drive, Internal ZIP ATAPI drive & ATAPI CD-ROM  
One Floppy Port supporting 2 floppy drives of 360KB / 720KB / 1.2MB/1.44MB/2.88MB capacity.  
Two serial ports (16550 Fast UART compatibles)  
One parallel Port (Standard, ECP, EPP support)
- On board I/O

**PS/2 Mouse/Keyboard**


- PS/2 Mouse/Keyboard 6-pin Mini-DIN connectors on board

**Power Management**

- Green functions Support various Power Management schemes, WIN 95 Soft-off function  
Sleep switch for power saving  
Support Power/On switch when ATX power supply is plugged
- Power/On Switch

**HARDWARE INSTALLATION & UPGRADE**

**2.1 Layout of RHINO 18+ Main Board**

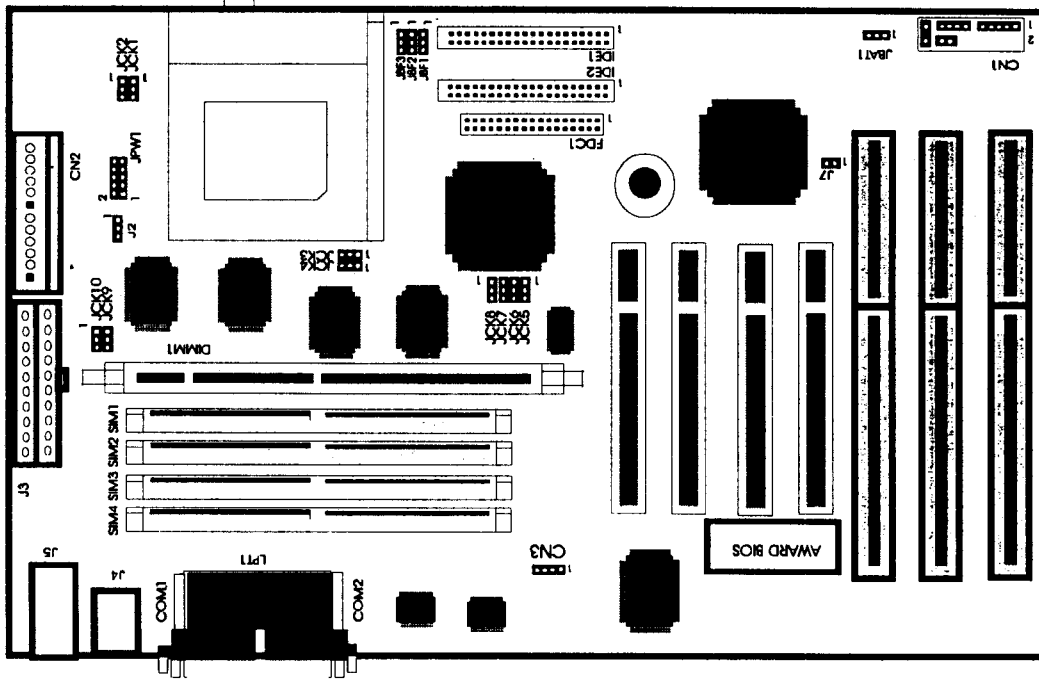

**BIOS Subsystem**

- ◆ BIOS Shadowing
- ◆ BIOS Features

Shadow RAM for System and Video BIOS

Built-in setup, Power-on self test, Drive table optimization, User-definable drive types, Password Protection, Shadowing options

**Plug & Play / BIOS Update**

- ◆ Plug & Play BIOS
- ◆ Flash EEPROM

Microsoft Windows95™ and Plug and Play BIOS compliant

Use Flash EEPROM (1M bits) to allow easy BIOS update

**USB Devices**

- ◆ USB Devices

USB v1.0 and Intel Universal HCI v1.0 compatible; 2 programmable USB ports

**Other Features**

- ◆ 3.3V/3.5V supply
- ◆ 2.8V~3.2V supply
- ◆ Switches
- ◆ Size
- ◆ Power Button
- ◆ Auto power off
- ◆ Power supply
- ◆ ACPI Ready
- ◆ PC'97 Compliant
- ◆ DMI support

Maximum rating : 30 W.

On board 2.8V~3.2V supply supports MMX grade CPUs

Reset, Keylock Switches, Power LED, HDD LED, Speaker, CPU Fan

12" x 7" (30.48cm x 17.8cm)

Wake up system

Support Power/On switch when ATX power supply is plugged

Hold 4 sec. to turn off system (soft-off) when ATX power supply is plugged

Switch system to power save mode

Automatic power off when Win95 shutdown option is selected (function with ATX power supply only)

Support both AT and ATX power supply

All factory settings are marked by \* in the following sections.

## 2.2 CPU related settings

### CPU Voltage Core Selection

RHINO 18+ supports Intel Pentium (P54C) & Pentium with MMX (P55C), AMD K5/ K6, Cyrix/IBM 6x86/6x86L/6x86MX. Both signal & dual voltage CPUs are supported. For dual voltage CPUs, JCK1/2/3/4 must be set as 2-3 to separate the core voltage & I/O voltage. The voltage selection for core voltage is as follows :

JCK1/2/3/4	JPW1	CPU Core voltage	CPU Type
1-2*	1-2	3.5V	Cyrix/IBM 6x86, AMD K5.
	3-4*	3.3V	Intel P54C
2-3	5-6	3.2V	AMD K6/233
	7-8	2.9V	AMD K6/166/200, Cyrix 6x86MX.
	9-10	2.8V	Intel P55C, Cyrix/IBM 6x68L.

**⚠ Be careful to select the appropriate Core voltage for different CPU. Improper Core voltage supplied to CPU may result in "PERMANENT DAMAGE" to CPU !**  
**⚠ The Official Name of P55C is "Pentium Processor with MMX Technology."**

### CPU Type

JBF1	JBF2	JBF3	JCK5	JCK6	JCK7	CPU CLK	CPU TYPE
2-3	2-3	Open	2-3	2-3	2-3	50MHz	Intel P54C-75,
1-2	2-3	Open	2-3	2-3	2-3		Cyrix 6x86-P120+
2-3	2-3	Open	2-3	2-3	2-3		AMD K5-PR75
1-2	2-3	Open	2-3	2-3	1-2	55MHz	Cyrix 6x86-P133+
2-3	2-3	Open	1-2	2-3	2-3	60MHz	Intel P54C-90
1-2	2-3	Open	1-2	2-3	2-3		Intel P54C-120
1-2	1-2	Open	1-2	2-3	2-3		Intel P54C-150
2-3	1-2	Open	1-2	2-3	2-3		Intel P54C-180
1-2	2-3	Open	1-2	2-3	2-3		Cyrix 6x86-P150+
1-2	1-2	Open	1-2	2-3	2-3		Cyrix/IBM 6x86MX-PR166
2-3	2-3	Open	1-2	2-3	2-3		AMD K5-PR90
2-3	2-3	Open	1-2	2-3	2-3		AMD K5-PR120
1-2	2-3	Open	1-2	2-3	2-3		AMD K5-PR150
2-3	2-3	Open	2-3	1-2	2-3	66MHz	Intel P54C-100
1-2	2-3	Open	2-3	1-2	2-3		Intel P54C-133
1-2	1-2	Open	2-3	1-2	2-3		Intel P54C-166, P55C-166
2-3	1-2	Open	2-3	1-2	2-3		Intel P54C-200, P55C-200
1-2	2-3	Open	2-3	1-2	2-3		Cyrix 6x86-P166+
1-2	1-2	Open	2-3	1-2	2-3		Cyrix/IBM 6x86MX-PR200
2-3	2-3	Open	2-3	1-2	2-3		AMD K5-PR100
1-2	1-2	Open	2-3	1-2	2-3		AMD K5-PR133
2-3	2-3	Open	2-3	1-2	2-3		AMD K5-PR166
1-2	1-2	Open	2-3	1-2	2-3		AMD K6/166
1-2	1-2	Open	2-3	1-2	2-3		AMD K6/200
2-3	2-3	Open	2-3	1-2	2-3		AMD K6/233
1-2	2-3	Open	1-2	2-3	1-2	75MHz	Cyrix/IBM 6x86-P200+
1-2	1-2	Open	1-2	2-3	1-2		Cyrix/IBM 6x86MX-PR233

## 2.3 CPU Cooling Fan and Heatsink

### CPU Fan Connector J2


Pin	Signal Name
1	GND
2	+12V
3	GND

CPU cooling fan is inevitable to the functionality of high speed CPU. The higher the core frequency of CPU, the more heat will be generated. Poor ventilation of the CPU and the voltage regulator will cause overheating. Permanent damage to the motherboard or even damage to the CPU itself will be resulted in the worst case.

Besides, the orientation of the CPU cooling fan can improve the ventilation of the motherboard in the case. The conduction of the airflow can enhance the cooling effect to the voltage regulator and onboard heatsink by continuously keeping the air-stream flows.

### ⚠ Important :

Make sure the fins of the heating beneath the CPU cooling fan is pointed to the direction of the voltage regulator.

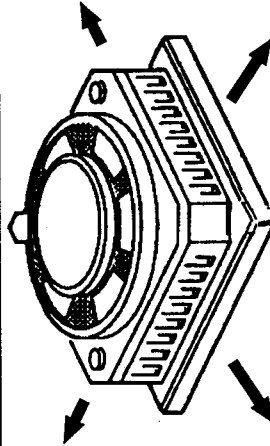

**2.4 Voltage for DIMM Sockets**

	JCK9,JCK10
3.3V*	1-2
5V	2-3

**2.6 Connectors Pinout**

**Power LED Connector(CN1 5-9)**

Pin	Signal Name
5	GND
7	NC
9	PW_LED

**Keypress Connector (CN1 1-3)**

Pin	Signal Name
1	-KB_Lock
3	GND

**Speaker Connector (CN1 13-19)**

Pin	Signal Name
13	Speaker_Data_Out
15	N.C.
17	GND
19	+5Vdc

**Reset Connector (CN1 18-20)**

Pin	Signal Name
18	Reset
20	Ground

**USB Connector (J4)**

Pin	Signal Name	Pin	Signal Name
5	VCC	1	VCC
6	Port 0-	2	Port 1-
7	Port 0+	3	Port 1+
8	Ground	4	Ground

**2.5 RESET CMOS**

	JBATI
CLEAR CMOS	2-3
NORMAL*	1-2

**HD LED Connector (CN1 23-24)**

Pin	Signal Name
23	HD_LED-
24	VCC

**PS/2 Mouse Connector (J5/upper)**

Pin	Signal Name
1	MDATA
2	N.C.
3	GND
4	+5V dc
5	MCLK
6	N.C.

**ATX Power Button(J7)**

Pin	Signal Name
1	Ground
2	Power On

**PS/2 Power Connector (CN2)**

Pin	Signal Name
1	Power Good
2	+5Vdc
3	+12Vdc
4	-12V dc
5	Ground
6	Ground
7	Ground
8	Ground
9	-5Vdc
10	+5Vdc
11	+5Vdc
12	+5Vdc

**ATX Power Connector (J3)**

Pin No.	Pin Name
1	+3.3V
2	+3.3V
3	GND
4	+5V
5	GND
6	+5V
7	GND
8	PWR GD
9	STB5V
10	+12V
11	+3.3V
12	-12V
13	GND
14	PWR ON
15	GND
16	GND
17	GND
18	-5V
19	+5V
20	+5V

**PS/2 Keyboard Connector (J5/lower)**

Pin	Signal Name
1	Keyboard data
2	Not used
3	Ground
4	VCC
5	Keyboard clock

Memory Configuration

3.1 SDRAM (Synchronous DRAM) / Fast Page mode / EDO DRAM Installation

There are four SIMM sockets and one DIMM sockets located on the RHINO 18+ motherboard, marked BANK 0, BANK 1 and BANK 2 which start from right to left consecutively. Either EDO or Fast Page Mode memory can install in BANK 1 or BANK 2.

For SIMM Modules, either Single or Double sided memory module can be installed in pairs on each Memory Bank. For DIMM Modules, either Single or Double sided memory module can be installed. Please reference to the following tables.

RHINO 18+ supports up to 256MB memory. Both SIMMs and DIMM can be installed simultaneously. Each SIMM and DIMM can support 4MB, 8MB, 16MB, 32MB, and 64MB. Any combinations of SIMM and DIMM installed should not exceed the maximum memory size.

The memory size installed can be calculated easily by applying the following formula :-

$$M = 2 \times S \times B + D$$

where M is the Total Memory Installed

S is the Memory Size of the installed SIMM

B is the no. of Memory Bank installed with SIMM

D is the Memory Size of the installed DIMM.

For example : all SIMMs are installed with 4MB modules and one 16MB EDO is installed on DIMM socket. The total memory M is :-

$$S = 4MB ; B = 2 ; D = 16MB$$

$$M = 2 \times 4 \times 2 + 16 = 32 MB$$

3.3V SDRAM/5V EDO DIMM module can be used on RHINO 18+. System BIOS will automatically detect the memory type & size.

☞ For 3.3V SDRAM module, make sure to set JCK9, JCK10 to 1-2 for 3.3V supply. It is not recommended to mix 3.3V module with 5V module at the same time.

CMOS Setup Configuration

BIOS Setup

Award's ROM BIOS provides a built-in Setup program which allows user to modify the basic system configuration and hardware parameters. The modified data will be stored in a battery backed CMOS RAM so data will be retained even when the power is turned off. In general, the information saved in the CMOS RAM stay unchanged unless there is configuration change in the system, such as hard drive replacement or new equipment change.

It is possible that CMOS had a battery failure which cause data lose in CMOS RAM. If so, re\_enter system configuration parameters become necessary.

This chapter explains the information contained in the Setup program and tell you how to modify the setting according to your system configuration.

The BIOS supports Software Turbo Speed features. Instead of processing the Turbo Speed Button on the front panel, simply press the <Ctrl>, <Alt>, and <+> keys at the same time to enable the Turbo Speed feature; and press the <Ctrl>, <Alt>, and <-> keys at the same time to disable the feature.

4.1 CMOS Setup Utility

Power on the computer and press <Del> key immediately will bring you into BIOS CMOS SETUP UTILITY.

ROM/PCI/ISA BIOS CMOS SETUP UTILITY AWARD SOFTWARE, INC.	
STANDARD CMOS SETUP BIOS FEATURES SETUP CHIPSET FEATURE SETUP POWER MANAGEMENT SETUP PNP/PCI CONFIGURATION INTEGRATED PERIPHERALS LOAD SETUP DEFAULTS	SUPERVISOR PASSWORD USER PASSWORD IDE HDD AUTO DETECTION HDD LOW LEVEL FORMAT SAVE & EXIT SETUP EXIT WITHOUT SAVING
↑ ↓ → ← : SELECT ITEM (Shift)F2 : Change Color Time, Date, Hard Disk Type..	

The menu displays all the major selection items and allow user to select any one of shown item. The selection is made by moving cursor (press any direction key) to the item and press 'Enter' key. An on\_line help message is displayed at the bottom of the screen as cursor is moving to various items which provides user better understanding of each function. When a selection is made, the menu of selected item will appear so the user can modify associated configuration parameters

## 4.2 Standard CMOS Setup

ROM PCI/ISA BIOS STANDARD CMOS SETUP AWARD SOFTWARE, INC.										
Date (mm:dd:yy) : Wed, May 8 1996										
Time (hh:mm:ss) : 15:38:55										
HARD DISKS	TYPE	SIZE	CYLS	HEAD	PRECOMP	LANDZ	SECTOR	MODE		
Primary Master	:Auto	0	0	0	0	0	0	Auto		
Primary Slave	:Auto	0	0	0	0	0	0	Auto		
Secondary Master	:Auto	0	0	0	0	0	0	Auto		
Secondary Slave	:Auto	0	0	0	0	0	0	Auto		
Drive A : 1.44M, 3.5 in.										
Drive B : None										
Video : EGA/VGA										
Halt On : All Errors										
Base Memory: 640K										
Extended memory: 15360K										
Other Memory: 384K										
Total Memory: 16384K										
ESC: Quit ↑↓→← : Select Item PU/PD/+/- : Modify										
F1 : Help (Shift)F2: Change Color										

The Standard CMOS Setup screen is displayed above. System BIOS automatically detects memory size, thus no changes are necessary. It has a few items for setting. Each item may have one or more option settings. It allows you to change the system Date and Time, IDE hard disk, floppy disk drive types for drive A- and B-, boot up video display mode, and POST error handling selection. Use the arrow keys to highlight the item and then use the <PgUp>- or <PgDn> keys to select the value you want in each item.

### Hard Disk Configurations

#### TYPE:

Select from "1" to "45" to fill remaining fields with predefined values of disk drives. Select "User" to fill the remaining fields. Select "Auto" to detect the HDD type automatically.

#### SIZE:

The hard disk size. The unit is Mega Bytes.

#### CYLS:

The cylinder number of the hard disk.

#### HEAD:

The read/write head number of hard disk. The range is from "1" to "16".

#### PRECOMP:

The cylinder number at which the disk drive changes the write timing.

#### LANDZ:

The cylinder number that the disk drive heads (read/ write) are seated when the disk drive is parked.

#### SECTOR:

The sector number of each track defined on the hard disk. The range is from "1" to "64".

#### MODE:

Select "Auto" to detect the mode type automatically. If your hard disk supports the LBA mode, select "LBA" or "Large". However, if your hard disk cylinder is more than 1024 and does not support the LBA function, you have to set at "Large".  
Select "Normal" if your hard disk supporting cylinders is below 1024.

## 4.3 BIOS Features Setup

ROM PCI/ISA BIOS BIOS FEATURES SETUP AWARD SOFTWARE, INC.	
Video Warning	: Disabled
CPU Internal Cache	: Enabled
External Cache	: Enabled
Quick Power On Self Test	: Enabled
Boot Sequence	: A, C, SCSI
Swap Floppy Drive	: Disabled
Boot Up Floppy Seek	: Disabled
Boot Up NumLock Status	: On
Boot Up System Speed	: High
Typematic Rate Setting	: Disabled
Typematic Rate (Chars/Sec)	: 6
Typematic Delay (Msec)	: 250
Security Option	: Setup
IDE Second Channel Control	: Enabled
PCI/VGA Palette Snoop	: Disabled
OS Select For DRAM > 64MB	: Non-OS2
Report NO FDD For Win95	: No
Video BIOS Shadow	: Enabled
C8000 - CFFFF Shadow	: Disabled
CC000 - CFFFF Shadow	: Disabled
D0000 - D3FFF Shadow	: Disabled
D4000 - D7FFF Shadow	: Disabled
D8000 - DBFFF Shadow	: Disabled
DC000 - DFFFF Shadow	: Disabled
ESC : Quit ↑↓→← : Select Item	
F1 : Help	PU/PD/+/- : Modify
F5 : Old Values (Shift) F2 : Color	
F7 : Load Setup Defaults	

Moving around the BIOS and Chipset Features (refer to the next section) Setup programs shown works the same way as moving around the Standard CMOS Setup program. User are not encouraged to run the BIOS and Chipset Features Setup programs. Your system should have been fine-tuned before shipping. Improper Setup may cause the system to fail, consult your dealer before making any changes.

#### Virus Warning

When enabled, you receive a warning message if a program (specifically, a virus) attempts to write to the boot sector or the partition table of the hard disk drive. You should then run an anti-virus program. Keep in mind that this feature protects only the boot sector, not the entire hard drive.

**NOTE:** Many disk diagnostic programs that access the boot sector table can trigger the virus warning message. If you plan to run such a program, we recommend that you first disable the virus warning.



### **CPU Internal Cache**

Cache memory is additional memory that is much faster than conventional DRAM (system memory). CPUs from 486-type on up contain internal cache memory, and most, but not all, modern PCs have additional (external) cache memory. When the CPU requests data, the system transfers the requested data from the main DRAM into cache memory, for even faster access by the CPU.

### **External Cache**

The External Cache field may not appear if your system does not have external cache memory.

### **Quick Power On Self Test**

Select Enabled to reduce the amount of time required to run the power-on self-test (POST). A quick POST skips certain steps. We recommend that you normally disable quick POST. Better to find a problem during POST than lose data during your work.

### **Boot Sequence**

The original IBM PCs loaded the DOS operating system from drive A (floppy disk), so IBM PC-compatible systems are designed to search for an operating system first on drive A, and then on drive C (hard disk). However, modern computers usually load the operating system from the hard drive, and may even load it from a CD-ROM drive.

### **Swap Floppy Drive**

This field is effective only in systems with two floppy drives. Selecting Enabled assigns physical drive B to logical drive A, and physical drive A to logical drive B.

### **Boot Up Floppy Seek**

When Enabled, the BIOS tests (seeks) floppy drives to determine whether they have 40 or 80 tracks. Only 360-KB floppy drives have 40 tracks; drives with 720 KB, 1.2 MB, and 1.44 MB capacity all have 80 tracks. Because very few modern PCs have 40-track floppy drives, we recommend that you set this field to Disabled to save time.

### **Boot Up NumLock Status**

Toggle between On or Off to control the state of the NumLock key when the system boots. When toggled On, the numeric keypad generates numbers instead of controlling cursor operations.

### **Boot Up System Speed**

Select High to boot at the default CPU speed; select Low to boot at the speed of the AT bus. Some add-in peripherals or old software (such as old games) may require a slow CPU speed. The default setting is High.

### **Typematic Rate Setting**

When Disabled, the following two items (Typematic Rate and Typematic Delay) are irrelevant. Keystrokes repeat at a rate determined by the keyboard controller in your system. When Enabled, you can select a typematic rate and typematic delay.

### **Typematic Rate (Chars/Sec)**

When the typematic rate setting is enabled, you can select a typematic rate (the rate at which character repeats when you hold down a key) of 6, 8, 10, 12, 15, 20, 24 or 30 characters per second.

### **Typematic Delay (Msec)**

When the typematic rate setting is enabled, you can select a typematic delay (the delay before key strokes begin to repeat) of 250, 500, 750 or 1000 milliseconds.

### **Security Option**

If you have set a password, select whether the password is required every time the System boots, or only when you enter Setup.

### **PCI/VGA Palette Snoop**

Your BIOS Setup may not contain this field. If the field is present, leave at Disabled.

### **OS Select for DRAM > 64MB**

Select OS2 only if you are running OS/2 operating system with greater than 64 MB of RAM on your system.

### **Shadow**

Software that resides in a read-only memory (ROM) chip on a device is called firmware. The Award BIOS permits shadowing of firmware such as the system BIOS, video BIOS, and similar operating instructions that come with some expansion peripherals, such as, for example, a SCSI adaptor. Shadowing copies firmware from ROM into system RAM, where the CPU can read it through the 16-bit or 32-bit DRAM bus. Firmware not shadowed must be read by the system through the 8-bit X-bus. Shadowing improves the performance of the system BIOS and similar ROM firmware for expansion peripherals, but it also reduces the amount of high memory (640 KB to 1 MB) available for loading device drivers, etc.

Enable shadowing into each section of memory separately. Many system designers hardware shadowing of the system BIOS and eliminate a System BIOS Shadow option.

### **Video BIOS Shadow**

Video BIOS shadows into memory area C0000-C7FFF. The remaining areas shown on the BIOS Features Setup screen may be occupied by other expansion card firmware. If an expansion peripheral in your system contains ROM-based firmware, you need to know the address range the ROM occupies to shadow it into the correct area of RAM.

#### 4.4 Chipset Features Setup

ROM PCI/ISA BIOS CMOS SETUP UTILITY CHIPSET FEATURES SETUP			
DRAM Auto Configuration	: 70ns	OnChip USB	: Disabled
DRAM Timing Control	: Auto		
SDRAM Cycle Length	: 3		
SDRAM Bank Interleave	: Disabled		
Sustained 3T Write	: Disabled		
2 Bank PBSRAM	: 3-1-1-1		
Read Pipeline	: Enabled		
Write Pipeline	: Enabled		
Cache Timing	: Fastest		
Video BIOS Cacheable	: Enabled		
System BIOS Cacheable	: Enabled		
Memory Hole At 15Mb Addr.	: Disabled		
		ESC : Quit	↑↓→← : Select Item
		F1 : Help	PU/PD/+/- : Modify
		F5 : Old Values (Shift) F2 : Color	F7 : Load Setup Defaults

##### Auto Configuration

Auto Configuration selects predetermined optimal values of chipset parameters. When Disabled, chipset parameters revert to setup information stored in CMOS. Many fields in this screen are not available when Auto Configuration is Enabled.

##### System BIOS Cacheable

Selecting Enabled allows caching of the system BIOS ROM at F0000h-FFFFh, resulting in better system performance. However, if any program writes to this memory area, a system error may result.

##### Video RAM Cacheable

Selecting Enabled allows caching of the video BIOS ROM at C0000h to C7FFFh, resulting in better video performance. However, if any program writes to this memory area, a system error may result.

##### Memory Hole at 15Mb Addr

You can reserve this area of system memory for ISA adapter ROM. When this area is reserved, it cannot be cached. The user information of peripherals that need to use this area of system memory usually discusses their memory requirements.

##### OnChip USB

Select Enabled if your system contains a Universal Serial Bus (USB) controller and you have USB peripherals.

#### 4.5 Power Management Setup

ROM PCI/ISA BIOS CMOS SETUP UTILITY POWER MANAGEMENT SETUP			
Power Management	: User Define	Primary INTR	: ON
PM Control by APM	: Yes	IRQ3 (COM2)	: Primary
Video Off Option	: Suspend ->Off	IRQ4 (COM1)	: Primary
Video Off Method	: V/H SYNC+Blank	IRQ5 (LPT 2)	: Primary
MODEM Use IRQ	: 3	IRQ6 (Floppy Disk)	: Primary
Soft-Off by PWRBTN	: Delay 4 Sec	IRQ7 (LPT 1)	: Primary
		IRQ8 (RTC Alarm)	: Disabled
		IRQ9 (IRQ2 Redir)	: Secondary
		IRQ10 (Reserved)	: Secondary
		IRQ11 (Reserved)	: Primary
		IRQ12 (PS/2 Mouse)	: Primary
		IRQ13 (Coprocessor)	: Primary
		IRQ14 (Hard Disk)	: Primary
		IRQ15 (Reserved)	: Disabled
HDD Power Down	: Disabled	ESC : Quit	↑↓→← : Select Item
Doze Mode	: Disabled	F1 : Help	PU/PD/+/- : Modify
Suspend Mode	: Disabled	F5 : Old Values (Shift) F2 : Color	F7 : Load Setup Defaults
		** PM Timers **	
VGA	: ON		
LPT & COM	: LPT/COM		
HDD & FDD	: ON		
DMA/master	: OFF		
RTC alarm Resume	: Disabled		

##### Power Management

This option allows you to select the type (or degree) of power saving for Doze, Standby, and Suspend modes. See the section PM Timers for a brief description of each mode.

This table describes each power management mode:

**Max Saving** Maximum power savings. Only Available for SL CPUs. Inactivity period is 1 minutes in each mode.

**User Define** Set each mode individually. Select time-out periods in the PM Timers section, following.

**Min Saving** Minimum power savings. Inactivity period is 1 hours in each mode.

##### PM Control by APM

If Advanced Power Management (APM) is installed on your system, selecting Yes gives better power savings.

##### Video Off Method

Determines the manner in which the monitor is blanked.

**V/H SYNC+Blank** System turns off vertical and horizontal synchronization ports and writes blanks to the video buffer.

**DPMS Support**  
Select this option if your monitor supports the Display Power Management Signaling (DPMS) standard of the Video Electronics Standards Association (VESA). Use the software supplied for your video subsystem to select video power management values.

**Blank Screen**  
System only writes blanks to the video buffer.

**Modem Use IRQ**  
This feature allows you to select the IRQ# to meet your modem's IRQ#.

**HDD Power Management**  
**HDD Off After**  
After the selected period of drive inactivity (1 to 15 minutes), the hard disk drive powers down while all other devices remain active. Selecting Suspend tells the drive to power down immediately.

**Doze Mode**  
After the selected period of system inactivity (1 minutes to 1 hours), the CPU clock runs at slower speed while all other devices still operate at full speed.

**Standby Mode**  
After the selected period of system inactivity (1 minutes to 1 hours), the fixed disk drive and the video shut off while all other devices still operate at full speed.

**Suspend Mode**  
After the selected period of system inactivity (1 minutes to 1 hours), all devices except the fixed disk drive and CPU shut off.

**IRQn**  
When Enabled, any activity from the selected IRQ wakes up the system or resets the inactivity timer. The following is a list of IRQs assigned to common system peripherals.

- IRQ3 (COM 2 )
- IRQ4 (COM 1)
- IRQ5 (LPT 2)
- IRQ6 (Floppy Disk)
- IRQ7 (LPT 1)
- IRQ9 (IRQ2 Redir)
- IRQ10 (Reserved)
- IRQ11 (Reserved)
- IRQ12 (PS/2 Mouse)
- IRQ13 (Coprocessor)
- IRQ14 (Hard Disk)
- IRQ15 (Reserved)

## 4.6 PnP/PCI Configuration

ROM PCI/ISA BIOS PNP/PCI CONFIGURATION AWARD SOFTWARE, INC.	
PnP OS Installed	: No
Resources Controlled By	: Manual
Reset Configuration Data	: Disabled
IRQ-3	assigned to : Legacy ISA
IRQ-4	assigned to : Legacy ISA
IRQ-5	assigned to : PCI/ISA PnP
IRQ-7	assigned to : Legacy ISA
IRQ-9	assigned to : PCI/ISA PnP
IRQ-10	assigned to : PCI/ISA PnP
IRQ-11	assigned to : PCI/ISA PnP
IRQ-12	assigned to : PCI/ISA PnP
IRQ-14	assigned to : Legacy ISA
IRQ-15	assigned to : Legacy ISA
DMA-0	assigned to : PCI/ISA PnP
DMA-1	assigned to : PCI/ISA PnP
DMA-3	assigned to : PCI/ISA PnP
DMA-5	assigned to : PCI/ISA PnP
DMA-6	assigned to : PCI/ISA PnP
DMA-7	assigned to : PCI/ISA PnP
CPU to-PCI Write Buffer	: Enabled
PCI Dynamic Bursting	: Enabled
PCI Master 0 WS Write	: Enabled
PCI Peer Concurrency	: Disabled
PCI Delay Transaction	: Disabled
PCI IRQ Activated By	: Level
PCI IDE IRQ Map To	: PCI-AUTO
Primary IDE INT#	: A
Secondary IDE INT#	: B
ACPI/IO Device Node	: Enabled
ESC	: Quit
F1	: Help
F5	: Old Values (Shift) F2 : Color
F7	: Load Setup Defaults

### Resources Controlled By

The Award Plug and Play BIOS can automatically configure all the boot and Plug and Play compatible devices. If you select Auto, all the interrupt request (IRQ) and DMA assignment fields disappear, as the BIOS automatically assigns them.

### Reset Configuration Data

Normally, you leave this field Disabled. Select Enabled to reset Extended System Configuration Data (ESCD) when you exit Setup if you have installed a new add-on and the system reconfiguration has caused such a serious conflict that the operating system cannot boot.

### IRQ n Assigned to

When resources are controlled manually, assign each system interrupt as one of the following types, depending on the type of device using the interrupt:  
Legacy ISA Devices compliant with the original PC AT bus specification, requiring a specific interrupt (such as IRQ4 for serial port 1).  
PCI/ISA PnP Devices compliant with the Plug and Play standard, whether designed for PCI or ISA bus architecture.

### DMA n Assigned to

When resources are controlled manually, assign each system DMA channel as one of the following types, depending on the type of device using the interrupt:

Legacy ISA Devices compliant with the original PC AT bus specification, requiring a specific DMA channel

PCI/ISA PnP Devices compliant with the Plug and Play standard, whether designed for PCI or ISA bus architecture.

### PCI IRQ Activated by

Leave the IRQ trigger set at Level unless the PCI device assigned to the interrupt specifies Edge-triggered interrupts.

### PCI IDE IRQ Map to

This field lets you select PCI IDE IRQ mapping or PC AT (ISA) interrupts. If your system does not have one or two PCI IDE connectors on the system board, select values according to the type of IDE interface(s) installed in your system (PCI or ISA). Standard ISA interrupts for IDE channels are IRQ14 for primary and IRQ15 for secondary.

### Primary/Secondary IDE INT#

Each PCI peripheral connection is capable of activating up to four interrupts: INT# A, INT# B, INT# C and INT# D. By default, a PCI connection is assigned INT# A. Assigning INT# B has no meaning unless the peripheral device requires two interrupt services rather than just one. Because the PCI IDE interface in the chipset has two channels, it requires two interrupt services. The primary and secondary IDE INT# fields default to values appropriate for two PCI IDE channels, with the primary PCI IDE channel having a lower interrupt than the secondary.

## 4.7 Integrated Peripherals

ROM PCI/ISA BIOS INTEGRATED PERIPHERALS AWARD SOFTWARE, INC.	
OnChip IDE First Channel	: Enabled
OnChip IDE Second Channel	: Enabled
IDE Prefetch Mode	: Enabled
IDE HDD Block Mode	: Enabled
IDE Primary Master PIO	: Auto
IDE Primary Slave PIO	: Auto
IDE Secondary Master PIO	: Auto
IDE Secondary Slave PIO	: Auto
IDE Primary Master UDMA	: Auto
IDE Primary Slave UDMA	: Auto
IDE Secondary Master UDMA	: Auto
IDE Secondary Slave UDMA	: Auto
Onboard FDC Controller	: Enabled
Onboard UART 1	: 3F8/IRQ4
Onboard UART 2	: 2F8/IRQ3
Onboard UART 2 Mode	: Standard
Onboard Parallel Port	: 378/IRQ7
Parallel Port Mode	: Normal
Normal EPP	: PC AT parallel port
ECP	: Fast, bidirectional port used primarily by non-printer peripherals, CD ROM, tape, hard drive, network adapters, etc.
	: Fast, buffered port, used primarily by new generation of printers and scanners.
4.8 Load Setup Defaults	: Load the system default data directly from ROM and initialize associated hardware properly. This function will be necessary only when the system CMOS data is corrupted.
ESC : Quit	: Select Item
F1 : Help	: PU/PD/+/- : Modify
F5 : Old Values (Shift) F2 : Color	
F6 : Load BIOS Defaults	
F7 : Load Setup Defaults	

### IDE HDD Block Mode

Block mode is also called block transfer, multiple commands, or multiple sector read/write. If your IDE hard drive supports block mode (most new drives do), select Enabled for automatic detection of the optimal number of block read/writes per sector the drive can support.

### IDE Primary/Secondary Master/Slave UDMA

The integrated peripheral controller contains an IDE interface with support for DMA33 mode. Select Enabled to activate each channel separately.

### IDE Primary/Secondary Master/Slave PIO

The four IDE PIO (Programmed Input/Output) fields let you set a PIO mode (0-4) for each of the four IDE devices that the onboard IDE interface supports. Modes 0 through 4 provide successively increased performance. In Auto mode, the system automatically determines the best mode for each device.

### Onboard FDC Controller

Select Enabled if your system has a floppy disk controller (FDC) installed on the system board and you wish to use it. If you install an add-in FDC or the system has no floppy drive, select Disabled in this field.

### Onboard UART 1/2

Select a logical COM port name and matching address for the first and second serial ports.

### Onboard Parallel Port

Select a logical LPT port name and matching address for the physical parallel (printer) port.

### Parallel Port Mode

Select an operating mode for the onboard parallel port. Select Compatible or Extended unless you are certain both your hardware and software support EPP (Enhanced Parallel Port) or ECP (Extended Capabilities Port) mode.

### Normal

PC AT parallel port

EPP : Fast, bidirectional port used primarily by non-printer peripherals, CD ROM, tape, hard drive, network adapters, etc.

ECP : Fast, buffered port, used primarily by new generation of printers and scanners.

## 4.8 Load Setup Defaults

Load the system default data directly from ROM and initialize associated hardware properly. This function will be necessary only when the system CMOS data is corrupted.



#### 4.9 Supervisor/ User Password

When you select this function, a message appears at the center of the screen:

ENTER PASSWORD:

Type the password, up to eight characters, and press Enter. Typing a password clears any previously entered password from CMOS memory. Now the message changes:

CONFIRM PASSWORD:

Again, type the password and press Enter.

To abort the process at any time, press Esc.

In the Security Option item in the BIOS Features Setup screen, select System or Setup:

System  
Enter a password each time the system boots and when ever you enter Setup.

Setup  
Enter a password when ever you enter Setup.

**NOTE:** To clear the password simply press Enter when asked to enter a password. Then the password function is disabled.

#### 4.10 IDE HDD Auto Detection

ROM PCI/ISA BIOS  
STANDARD CMOS SETUP  
AWARD SOFTWARE, INC.

HARD DISKS TYPE SIZE CYLS HEAD PRECOMP LANDZ SECTOR MODE

Primary Master :

Select Primary Master Option (N=Skip): N									
OPTIONS	SIZE	CYLS	HEAD	PRECOMP	LANDZ	SECTOR	SECTOR	MODE	
2(Y)	540	524	32	0	1047	63	LBA		
1	540	1048	16	65535	1047	63	NORMAL		
3	540	524	32	65535	1047	63	LARGE		

Note: Some Oses (like SCO-UNIX) must use "NORMAL" for installation

The IDE Hard Disk Drive Auto Detection feature automatically configurations your new hard disk. Use it for a quick configuration of new hard drives. This feature allows you to set the parameters of up to four IDE HDDs. The option with "(Y)" are recommended by the system BIOS. You may also keys in your own parameters instead of setting by the system BIOS. After all setting, press ESC key to return the main menu. For confirmation, enter the Standard CMOS Setup feature.

#### 4.11 Save and Exit Setup

After you have made changes under Setup, press <ESC> to return to the main menu. Move cursor to "Save and Exit Setup" or press "F10" and then press "Y" to change the CMOS Setup. If you did not change anything, press <ESC> again or move cursor to "Exit Without Saving" and press "Y" to retain the Setup settings. The following message will appear at the center of the screen to allow you to save data to CMOS and exit the setup utility:

SAVE to CMOS and EXIT (Y/N)?

#### 4.12 Exit without Saving

If you select this feature, the following message will appear at the center of the screen to allow you to exit the setup utility without saving CMOS modifications:

Quit Without Saving (Y/N)?

## Quick Manual for RHINO 18+

