

This publication, including all photographs, illustrations and software, is protected under international copyright laws, with all rights reserved. Neither this manual, nor any of the material contained herein, may be reproduced without the express written consent of the manufacturer.

The information in this document is subject to change without notice. The manufacturer makes no representations or warranties with respect to the contents hereof and specifically disclaims any implied warranties of merchantability or fitness for any particular purpose. Further, the manufacturer reserves the right to revise this publication and to make changes from time to time in the content hereof without obligation of the manufacturer to notify any person of such revision or changes.

### **Trademarks**

VGA, and PS/2 are registered trademarks of International Business Machines.

Intel, Pentium, Pentium-II, Pentium-III, MMX, and Celeron are registered trademarks of Intel Corporation.

Microsoft, MS-DOS and Windows 95/98/NT are registered trademarks of Microsoft Corporation.

Sound Blaster is a trademark of Creative Technology Ltd.

A3D is a registered trademark of Aureal Inc.

PC-cillin is a trademark of Trend Micro Inc.

Gamut is a registered trademark of Formosoft International Inc.

SuperVoice is a registered trademark of Pacific Image Communications Inc.

MediaRing Talk is a registered trademark of MediaRing Inc.

WordPerfect is a registered trademark of Corel Corporation Ltd.

WinDVD is a registered trademark of Intervideo Incorporated.

Award is a trademark of Award Software Inc.

Other names used in this publication may be trademarks and are acknowledged.

**Copyright © 2000  
All Rights Reserved  
BKI810, V3.3A  
March 2000**

**Macrovision Corporation Product Notice**

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

---

## Table of Contents

---

<b>Chapter 1: Getting Started.....</b>	<b>1-1</b>
Introduction.....	1-2
The Ideal Environment.....	1-3
Where to Put the System.....	1-3
Extra Protection.....	1-3
Maintaining and Caring for the System.....	1-4
Cleaning the System.....	1-4
Transporting the System.....	1-4
Backups.....	1-5
Shock Precautions.....	1-5
Care of the Computer.....	1-5
Unpacking.....	1-6
Checklist.....	1-6
Installing the System.....	1-7
Introducing the System.....	1-8
Looking at the Front.....	1-9
Looking at the Back.....	1-10
Connecting the Cables.....	1-12
<b>Chapter 2: Using the system.....</b>	<b>2-1</b>
Ready for Power.....	2-2
To Power Up for the First Time.....	2-2
To Power Down.....	2-3
About the Software.....	2-4
About the Drives.....	2-5
Hard Disk Drive.....	2-5
Diskette Drive.....	2-6
CD-ROM Drive.....	2-6
Using the Drive:.....	2-7
About Memory.....	2-9

About the Audio and Video Onboard.....	2-9
About the LAN Onboard.....	2-9
About the Modem Onboard.....	2-10
<b>Chapter 3: Installing the Software.....</b>	<b>3-1</b>
Installing the Windows 98 Operating System.....	3-2
Installing the Bundled Software.....	3-2
Installing the Drivers under Windows 98.....	3-2
Table of contents of the support CD.....	3-4
Installing the Applications.....	3-6
<b>Chapter 4: Going inside.....</b>	<b>4-1</b>
Introduction.....	4-2
Important Precautions.....	4-2
Opening and Closing the Unit Case.....	4-3
To Open the System Unit Case.....	4-3
To Close the System Unit Case.....	4-4
Inside the System.....	4-5
Removing the Drive Cage.....	4-5
Mainboard Items.....	4-6
Upgrading.....	4-7
Changing the CPU.....	4-7
Changing System Memory.....	4-8
Changing the Drives.....	4-9
The Drive Cage.....	4-9
Connectors.....	4-9
Changing the Hard Disk Drive.....	4-9
Changing the CD-ROM/DVD Drive.....	4-10
Changing the Diskette Drive.....	4-11
<b>Chapter 5: Peripheral Device Setup.....</b>	<b>5-1</b>
Setup the Television as System Console.....	5-2
How to install your system with television console.....	5-2
How to adjust the best video quality of your TV Output.....	5-3
Setup the SPDIF-Out for the Audio System.....	5-16
How to setup the SPDIF-Out function in Win98.....	5-16
How to setup the SPDIF-Out function in WinDVD.....	5-17

Setup the SCART TV as System Console.....	5-19
How to install your system with SCART TV console.....	5-19
<b>Appendix A: Problem Solving.....</b>	<b>A-1</b>
Q & A.....	A-2
The computer doesn't work.....	A-2
The keyboard doesn't work.....	A-2
The Mouse doesn't work.....	A-2
The CD-ROM/DVD drive does not operate properly.....	A-2
The audio doesn't work.....	A-2
How do I use the Four Channel Speaker feature?.....	A-3
How do I set up the video output selection?.....	A-3
The DVD title playback seems slow or not smooth.....	A-3
The hard disk drive access indicator light stays on.....	A-3
The diskette drive indicator light stays on.....	A-3
How to upgrade the Flash BIOS?.....	A-4
How do I backup my data files to prevent loss of data?.....	A-4
<b>Appendix B: Gamut Documentation.....</b>	<b>B-1</b>
Introduction.....	B-2
Produce MP3 files – Use CD-Cashier.....	B-3
Play MP3 files – Use Musician.....	B-5
Play music CDs – Use 3D <sub>FS</sub> -ACD.....	B-6
Play MIDI files – Use Midier.....	B-7
Regulate the audio sources – Use Mixer.....	B-7
Recording audio data—Use Voice-Catcher.....	B-8
<b>Appendix C: WINDVD Documentation.....</b>	<b>C-1</b>
The WinDVD Controls.....	C-2
Start/Eject.....	C-2
Navigation Buttons.....	C-3
Sliders.....	C-3
Counter.....	C-4
Navigation Arrows.....	C-4
Numeric Keypad.....	C-4
Menu Items.....	C-4
The Right-Mouse Click Menu.....	C-5
Using WinDVD.....	C-6
Viewing a DVD Title.....	C-6
Creating a Playlist.....	C-6
Loading a Previously Saved Playlist.....	C-6

Changing Your Settings.....	C-6
Setting Parental Control.....	C-7
Ejecting a Disk.....	C-7
Hiding and Viewing the Player.....	C-7
Enabling the Toolbar and Status bar.....	C-8
Viewing a DVD Movie or Video CD.....	C-8
Playing a DVD Interactive Title.....	C-8
Vocal options.....	C-8
Changing the Parental Control Password.....	C-8
Closing WinDVD.....	C-9
Understanding the DVD System.....	C-10
Region Codes.....	C-10
NTSC and PAL.....	C-11
Aspect Ratios.....	C-11
DVD Audio.....	C-11
Parental Control Properties.....	C-12
Quality Setting.....	C-12
Hotkey Definitions for the WinDVD Operation.....	C-12
Set the DMA Mode for the CD-ROM/DVD-ROM.....	C-13
<b>Appendix D: S-YXG50 Documentation.....</b>	<b>D-1</b>
Features.....	D-2
Specifications.....	D-2
Installation.....	D-3
Performance Settings.....	D-3
Functions.....	D-4
S-YXG50 Player Operation Panel.....	D-6

---

# **Chapter 1**

## **Getting Started**

---

This chapter allows you to become familiar with the basic parts of your system and tells you how to set up your Book PC.

## **Introduction**

---

The key features of this Book PC include:

- The Book PC uses the Intel 810 chipset.
- Supports **PPGA Celeron**, **FCPGA Pentium III** processors, from 300 up to 800 MHz.
- Supports maximum installed memory up to 512 MB.
- Support for Bus mastering and UltraDMA 33 modes.
- Support for Green PC standard, keyboard power on/off, and Wake on Modem/LAN/Alarm.
- Built-in Graphics System supports up to 1600 x 1200 resolution in 8-bit color at 85Hz-refresh rate. Provides TV encoder for NTSC, PAL and SCART (for Europe only) TV support (AV/S-Video).
- Built-in Sound System meets PC98 audio specification.
  1. HRTF 3D professional audio supports both Direct Sound 3D<sup>®</sup> and A3D<sup>®</sup> compatible interface, and support for **Four Channel Speakers**.
  2. Provides Digital Audio Interface (SPDIF In/Out) with **24-bit stereo**, 44KHz sampling rate and measured **120dB** audio quality.
  3. Optional optic fiber interface which enables communication with MiniDisk or high-end audio systems.
- Provides a floppy disk drive, a hard disk drive, and a CD-ROM or DVD drive.
- Built-in **10/100Base LAN adapter** and **56K V.90 fax/modem**.
- Built-in **Trend's Chip Away Virus** ensures that the boot process is protected from viruses. The bundled **PC-Cillin** software provides automatic virus protection under Windows 95/98.
- The Book PC is bundled with the **SuperVoice** for fax/modem communications, **MediaRing Talk** for PC to PC internet phone communication, **Gamut** for professional audio management, including MP3 encoding and playback, **WordPerfect Suite 8**, the renowned office application suite, and optional **Windows 98** operation system and **WinDVD** application for DVD playback.



## **The Ideal Environment**

---

Before anything else you should decide on a place to set up your new computer. Below you can find a few tips to keep in mind when choosing the ideal spot.

Your Book PC computer is engineered to provide years of reliable service. However, give it the same care and protection as you would any other valuable piece of electronic equipment. Most of the good care rules are common sense.

### **Where to Put the System**

---

A cleared-off desk or table is a perfect location. Look out for the proximity of power supply, telephone and/or network cables.

You should try to avoid dirt, dust and smoke, since these might cause system failure. Also, keep your computer away from strong magnetic fields. This includes fans, air conditioners, radios, large speaker systems, and other electric motors.

Do not set up your system in a room with extreme conditions of temperature and humidity. Too hot or too cold temperature in a room causes your computer to misbehave. Dampness causes oxidation, and dryness causes static electricity.

Heat is probably the single most damaging environmental element to a computer. Because of this, never push the rear of the unit against a bookcase, wall, or anything that restricts the air from circulating freely around the entire case. If the fan outlet in the back of the computer system is blocked, heat builds up inside the computer. A marginal heat problem can be aggravated by accumulated filth from dirt, dust and smoke.

Likewise, do not stack magazines on top of, under, or behind the computer system or the video monitor.

Do not place the computer in direct sunlight, near a radiator, lamp, or a heat vent. Remember that heat causes electronic circuitry to behave in strange ways. When computer components heat up, they tend to fail. If this happens, it may not be a permanent failure, but could lead to one.

### **Extra Protection**

---

Electrical surges and spikes can cause serious damage to your system. Use a power filter/surge protector on the system unit and everything connected to it. If just one device is not connected, damaging surges can enter the system through unprotected peripheral and damage everything connected to it.

A power strip/surge protector provides protection against many types of voltage spikes that can travel on the power line and damage your system, but it isn't much help against lightning. If severe weather or an electrical storm threatens, it's a good idea to unplug the entire system from the power, and telephone and/or network lines, before the storm starts.

## **Maintaining and Caring for the System**

---

Follow the suggestions below to keep your valuable system in good condition.

### **Cleaning the System**

---

Use a damp, lint-free cloth to clean the system unit and monitor. Avoid abrasives or solvents, they can permanently damage the finish. Use a soft cloth and window cleaner to clean the monitor. Turn off the monitor. Then squirt a little cleaner on the cloth and apply it to the screen.

All diskette drives and tape backup units should be cleaned periodically. Cleaning kits are available from a variety of sources. Carefully follow the instructions supplied with the cleaning kit you use.

Subjecting a system to a dusty or smoky environment significantly shortens its life and increases the probability of failure. If you use the system in a dirty environment, open it periodically and vacuum the board and components with a small vacuum designed for this kind of work. Don't loosen anything in the process.

If the mouse pointer or cursor starts jumping when you move the mouse, it is probably caused by a build-up of dirt on the rollers inside the mouse.

If you spill liquid inside the keyboard, unplug the keyboard immediately and turn it upside down to allow the liquid to drain out. Let the keyboard dry overnight before attempting to use it again.

### **Transporting the System**

---

Dropping or jarring the system can damage the hard disk drive, particularly if the drive is reading or writing when it is dropped. Hard disk drives are less vulnerable to shock when they are shut off. Consequently, you should always power down the system unit before moving it.

During transport, pack the system unit in its original packing boxes and cushioning materials.

## **Backups**

---

There hasn't been a hard disk made that is guaranteed not to lose its data. Hard disk reliability has improved significantly in the last few years, and it is unlikely that yours will malfunction and lose its data. Still it is not impossible. It is a good idea to make backup copies of your files on a regular basis. You can obtain a tape or backup unit, or optical storage device, or another device that will allow you to save your whole configuration of files at once. Software can be used to make that process automated. You should try to back up your files on a regular basis.

## **Shock Precautions**

---

This list is important to protect yourself from electrical shock and your system from damage.

- Be sure all cables are free from table or desk legs resting on them. Arrange cables out of traffic areas.
- Unplug all power cords from their power sources if severe weather threatens. When you disconnect a cable, always pull on the plug or connector, not on the cable itself.
- Know the static electricity precautions.
- Always disconnect the power before opening the system unit. Just because the power is off does not necessarily mean the computer is harmless. Never take chances with the hazards of electricity.
- Plug all three-prong cable into properly grounded power sources. Computers prefer steady and reliable electricity. Use a power filter/surge protector for protection against electrical surges. Do not use adapter plugs or remove the grounding prong. Try to connect everything without the use an extension cord. If you must use one, use a three-wire cable with grounded plugs.

## **Care of the Computer**

---

- Do not set up your system in a room with extreme conditions of temperature and humidity.
- Do not allow heat to build up inside of the system unit.
- Never turn the power button off or move the system while the hard disk drive is reading or writing.

- Do not spray any kind of cleaning liquid directly on the case, keyboard or monitor. Instead apply it to a soft cloth. Always turn the power off and unplug each power cable from its power source before cleaning.
- Use the computer in as clean an environment as possible. Cover the keyboard, monitor and system unit.
- Never push foreign objects into the slots on the riser card. Doing this may short out interior components and could cause a fire.
- Do not open the diskette drive door while the drive is active, the indicator LED will be lit. This damages the disk and/or the drive.
- Avoid dropping or jarring your computer. This loosens memory chips, expansion cards, and can severely damage the hard disk drive. Always shut down the computer when moving it, even if it's only to the other side of the your desk.
- Keep your computer away from magnetic fields.
- Do not eat or drink while using the computer.

## **Unpacking**

---

If your system arrives in very cold or damp weather, you should not apply power to the system unit until it has reached room temperature, and no condensation is present. Exposing a cold computer to a warm room causes condensation that could damage the computer or shorten its life. Allow the box to warm up to room temperature for several hours before opening them. Do not plug in the system until all moisture from any condensation has completely dried.

## **Checklist**

---

Some vendors may ship certain components as standard, while other vendors treat the same components as optional. In its most basic configuration, your Book PC should include the following:

- A **Book PC** computer with built-in processor, system memory, hard disk drive, CD-ROM (or DVD) drive, and diskette drive.
- A system unit **power cord** and a **telephone line** for modem connection
- A **support CD-ROM** and/or disk(s) with system drivers and bundled software.
- Documentation, including this **User's manual**, the **WordPerfect manual**, **Quick Reference Setup Sheet** and the **Stand Setup Sheet**.

The following are normally optional, but some vendors may include them in the basic package. Some items may not be available in certain countries, or some vendors may choose not to carry all the optional items:

- A **Windows software package**, including manual and CD-ROM
- Keyboard and/or mouse
- Video monitor
- Audio speakers
- Additional peripheral devices and/or cables

**Note:** *Contact your system vendor for information on the availability of optional items.*

Until the system is up and running, it's a good idea to leave all the software packages intact. All of it is pre-installed and automatically starts when you turn on the power. They are provided for backup purposes only.

Arrange all the unpacked items on an uncluttered desk or table when you plan to set up and use the system computer. Each piece should be close enough together so that cables can reach to the appropriate connectors. Be sure there is a wall outlet close to the table or desk.

## **Installing the System**

---

Most of the work of setting up your system computer is already done. Before shipping your system, we installed all the software and specified the correct hardware configuration in the setup program.

The part we have left for you is comparatively easy. Anyone who can orient cables to mate with connectors can set up this Book PC computer. You won't have to open the computer to plug anything in. The steps on the next few pages are easy to follow, and there are lots of pictures to help show you the correct way.


First we introduce you to the system components, and then we will help you set up the system and install all the cables.

**Warning:** *In this section you are instructed to connect several cables. To avoid damage to your computer and peripherals, never plug in or unplug a cable when the system unit power is ON. Always shut off the system first, only then make any necessary cable connections or changes.*

## **Introducing the System**


---

Before you actually set up your system and plug everything in, it's a good idea to locate all its features, switches and controls. The next few illustrations familiarize you with the system computer external features.

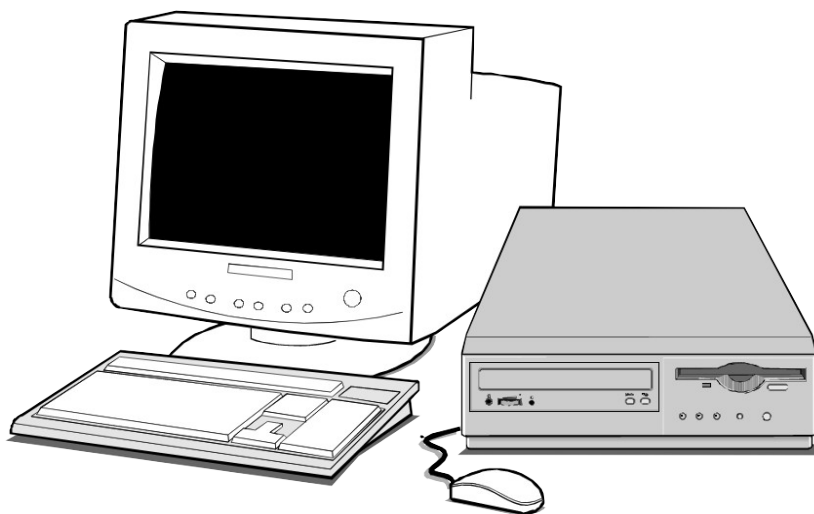


## Looking at the Front

With your computer in front of you, use the picture below to locate each of the labeled parts. Chapter 2 goes into more detail on some of the labeled parts and their usage.

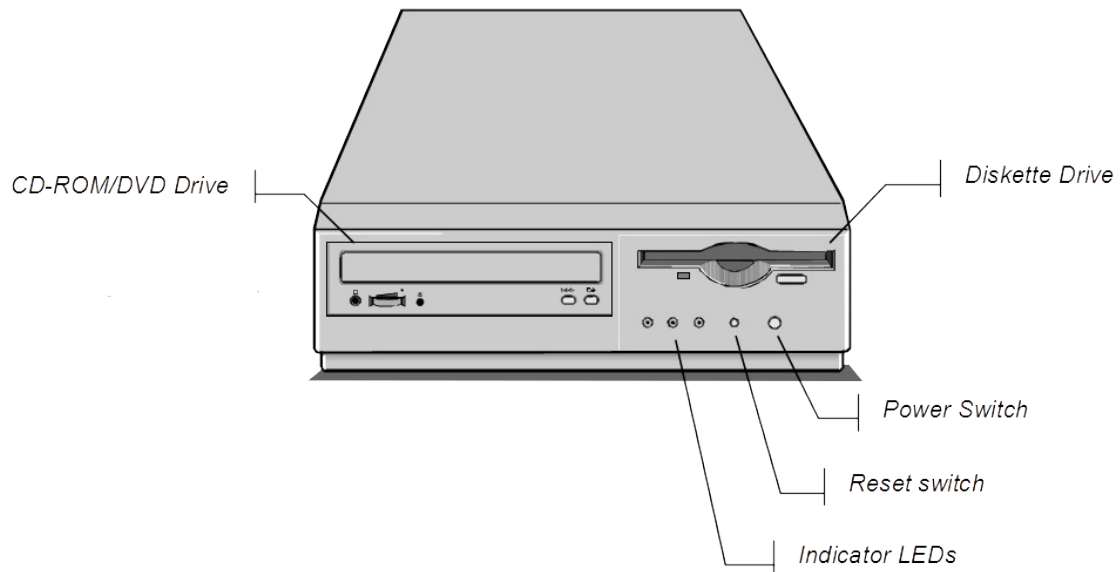


- **Power switch** – The power switch is located on the right-hand side of the front panel. Press the power switch once to turn your computer on, and press it again to turn your computer off.
- **Reset switch** – Use this switch to ‘reboot’ the system instead of using the power switch button.
- **Indicator LEDs** – The front panel has three indicator lights. The indicator LEDs turn on to show that a particular function is active. From right to left the LEDs indicate the following: the **Power** LED turns green as the system is powered on; the **HDD** LED lights up if any hard disk activity is detected; the **Suspend** LED blinks if the system is suspended.
- **Diskette Drive** – The diskette drive, on the right side of the front panel, can read from, or write to, 3.5” diskettes with capacities of either 720K or 1.44 MB. The diskette drive provides a convenient way of storing and transferring short files.

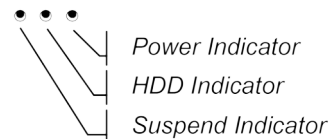

- **CD-ROM/DVD Drive** – The drive bay on the left hand side is either installed with a CD-ROM or DVD drive. This option is factory installed. CD-ROM disks can store over 600 MB of audio, video, or data. DVD disks can store up to 4 GB and are currently commonly used to distribute high-quality video. Usually your system identifies the CD-ROM/DVD drive as drive D:. Access to a CD/DVD-ROM is quite fast. CD and DVD disks are used to distribute large software applications, and audio and video files that require a lot of capacity. You can play audio and video files using the supplied Gamut audio player or the optional WINDVD software.




## Looking at the Back

The back of the system is where most external connectors are.

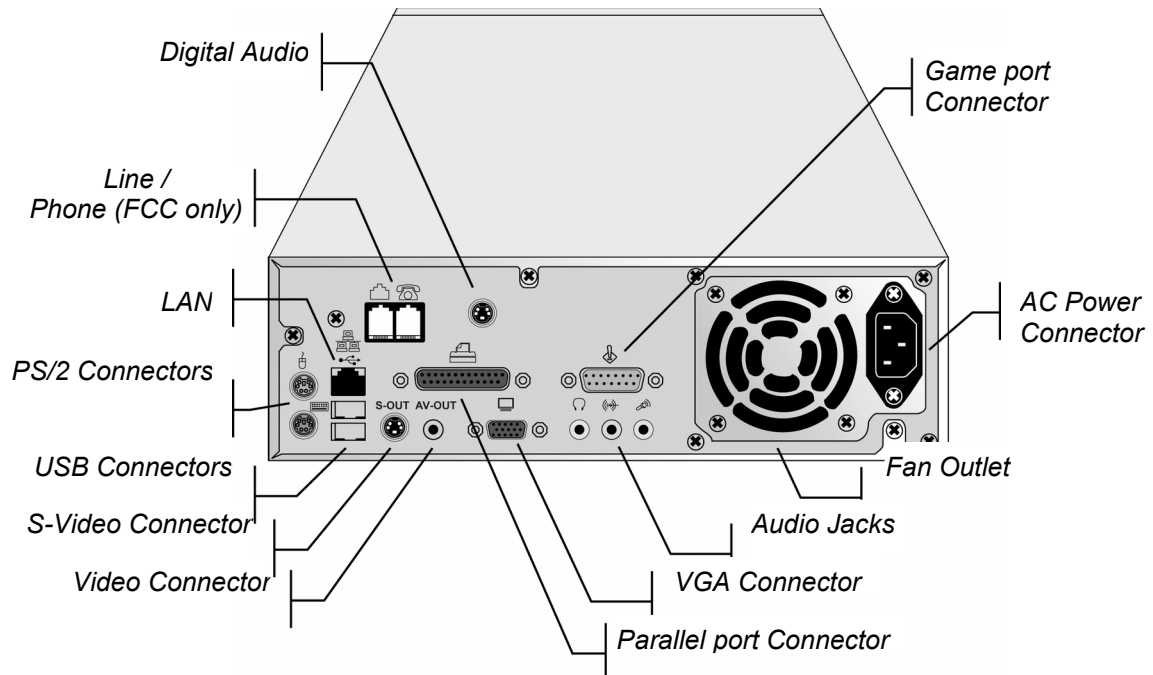

- **AC Power Connector** – Plug the main power cord in here. Within the range of 115 or 230V AC, the power adapter will automatically sense and adapt to the input power voltage.
- **Fan Outlet** – A fan inside the case cools the internal parts. Do not block this outlet.

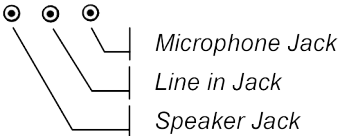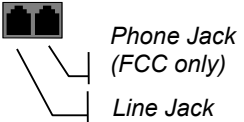


- **Game port Connector** – The 15-pin Game port can be used to connect your computer to an IBM-compatible joystick or similar device, or to a MIDI device such as a synthesizer.
- **Audio Jacks** – The three audio jacks provide you with the ability to connect an external audio source or an external microphone to the system. From right to left, the **Microphone** jack is used to input sound from an external microphone into your Book PC; the **Line in** jack is used to input stereo sound from other devices, such as a radio or tape recorder, into your computer; and the **Speaker** jack is used to output sound generated by your computer to an external device, such as stereo loudspeakers.
- **Parallel Port Connector** – The parallel port provides a connection for a parallel printer or other parallel communications device.
- **VGA Connector** – The external monitor port allows you to connect any standard computer monitor to your system.
- **Video Connector** – The RCA video jack can be used to output video to devices that use RCA plugs such as most TV receivers.
- **S-Video Connector** – The S-video jack can be used to output video to devices that use S-video plugs such as camcorders and some TV receivers.
- **Digital Audio Jack** – The Digital Audio jack provides a digital (SPDIF) interface with an optional external audio device, and at the same time serves as an auxiliary Line in port to import sounds while Four Speakers mode is enabled. An optional device and optic fiber cable are needed in order to make use of the digital interface.
- **Line/Phone Jacks** – The RJ-11 jacks can be used to connect a phone line to the internal modem device. Use the **Line** jack to connect a wall socket line to the Book PC. The **Phone** jack is only available in FCC type modem, use it to export the line to a telephone receiver.
- **LAN Jack** – The RJ-45 jack can be used to connect the Book PC to an ethernet network.
- **USB Connectors** – The USB (Universal Serial Bus) port can be used to connect to USB devices.
- **PS/2 Connectors** – The two PS/2 ports can be used to connect an external pointing device and keyboard.

## Connecting the Cables


This section of setting up your new computer is very important. It talks about attaching all the cables so that you can begin using the system.

The procedure is straightforward and easy to do, however, be sure to follow each step carefully and don't leave any steps out.

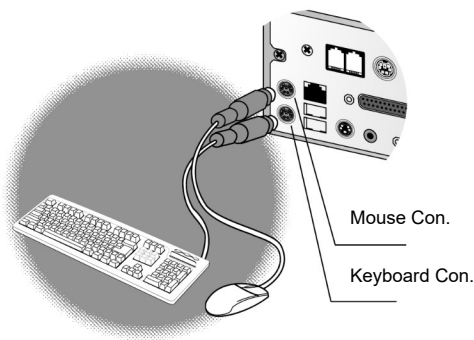


1. Connect a keyboard and pointing device through the PS/2 connectors


2. Connect any speakers and/or microphones that you might have.

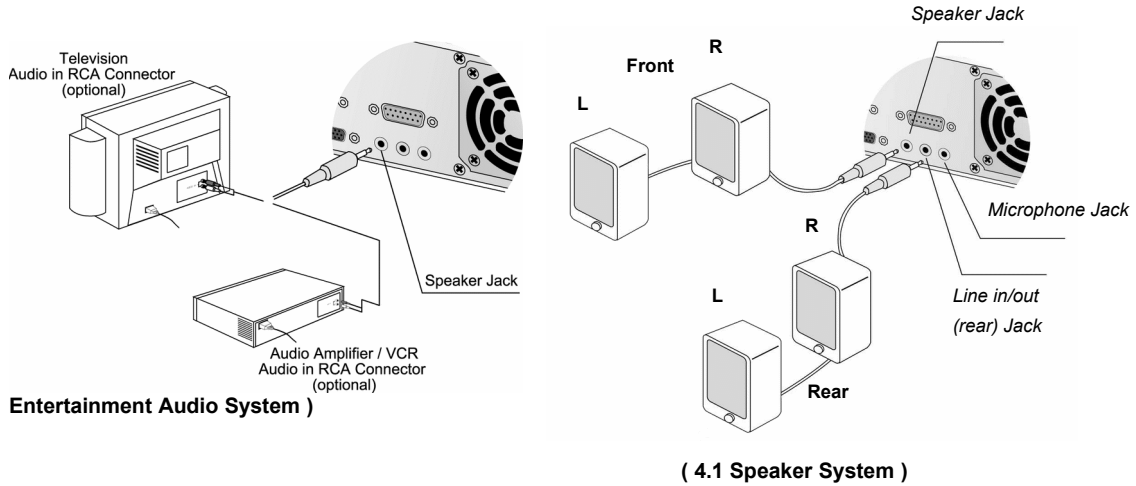


3. Connect a computer monitor to the VGA connector.

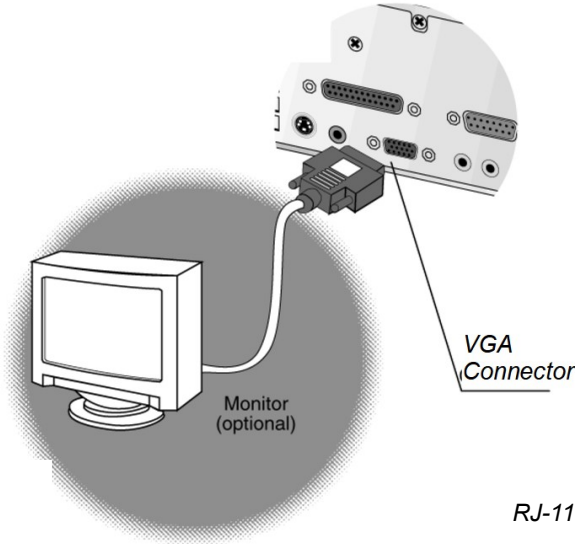


4. Connect phone lines to the Line /Phone jacks.

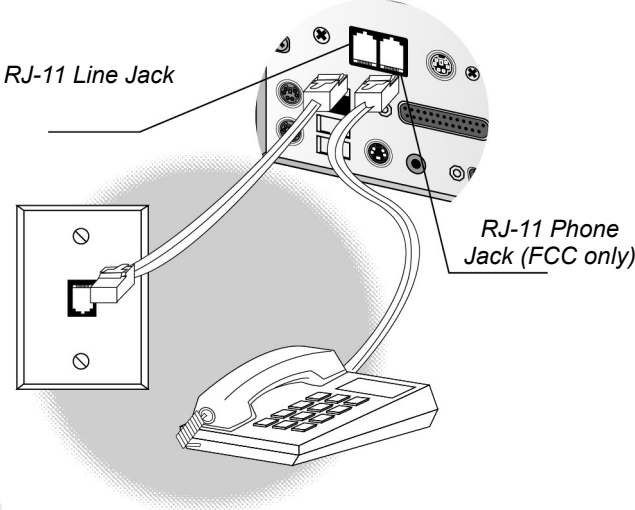


5. Connect any USB devices you want to use with your system.

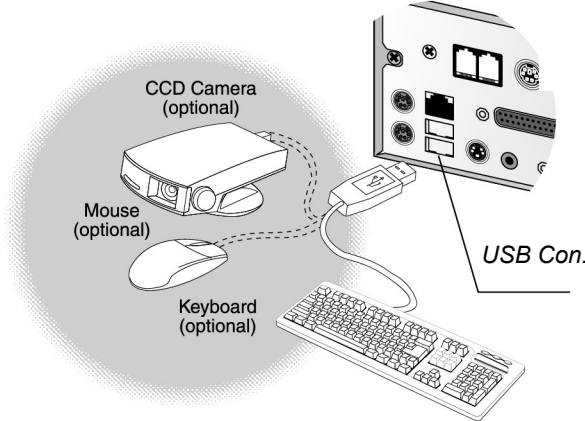

6. Connect any printer or other parallel device you might want to use to the Parallel port.

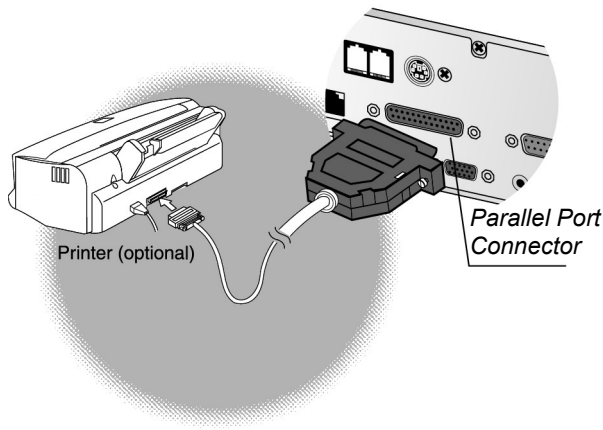


7. Connect a TV receiver to the Video or S-Video Connectors.


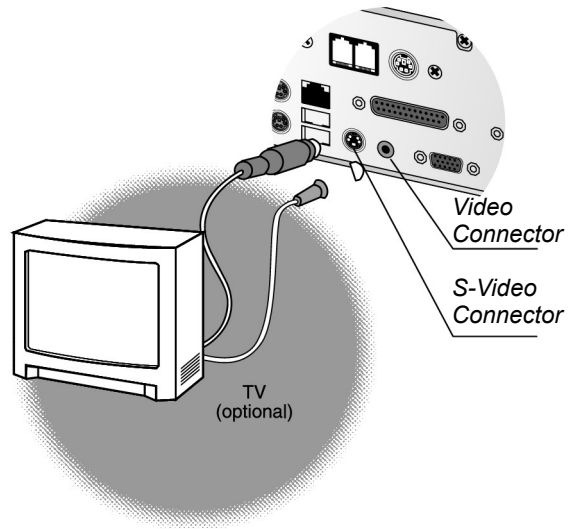


- 8.

Connect a network cable to the LAN connecto

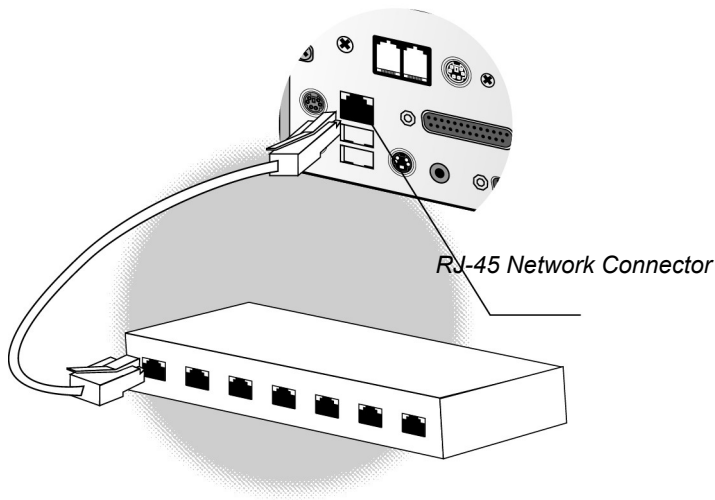

9. Connect any Game/MIDI devices you might want to use.

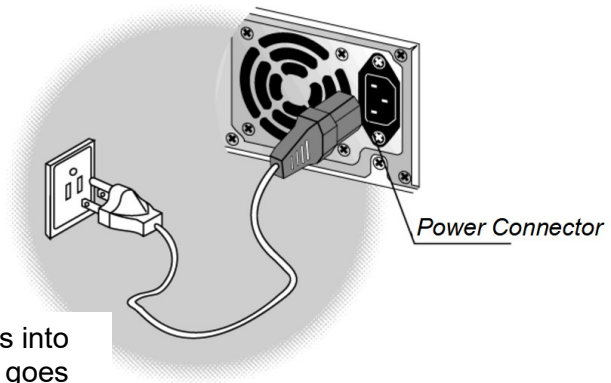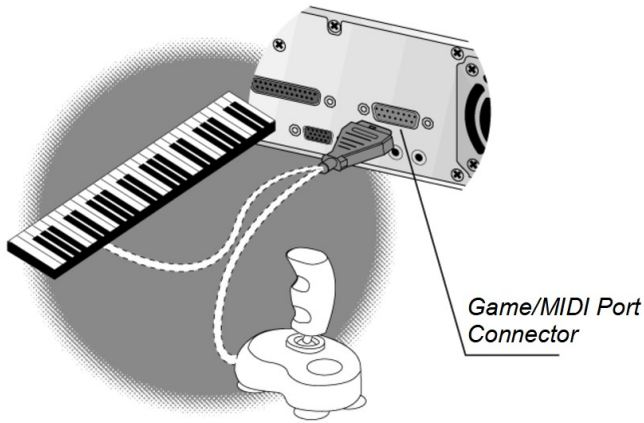

10. Plug in the power cable, one end goes into the back of the system, the other end goes into a grounded outlet or power strip/surge

11. Make sure all other peripheral devices are properly connected to a power source if they do not draw their power from the system.

You are now ready to start up your system. Check Chapter 2 for detailed information on starting up your system for the first time.

---

# **Chapter 2**

## **Using the system**

---

This chapter helps you starting up your system and allows you to become familiar with some of the main features.

## Ready for Power

---

Once you have completed the setup of the system unit as described in Chapter 1, it is ready for power up.

### To Power Up for the First Time

---

1. Turn on your monitor first.
2. Next power up all other peripheral devices attached to the system.
3. Be sure there are no diskettes and/or CD-ROM/DVD disks in any of the drives.
4. Power up the computer by pushing the power button on the front of the case. The power indicator will light. You will hear a distinct sound as the power supply turns on and the hard disk spins up to speed.

**Note:** *If your system does not power up as described here, check to make sure you have made all the connections properly. Double check to see all the cables are still securely attached to the appropriate connectors.*

5. The hard disk and other drive indicators will blink briefly as the system checks them quickly.
6. Various messages appear on the display, including the BIOS version and the memory count.
7. Your system should continue to load the Windows operating software automatically. When you first start your new system, you will need your Windows manual. On its cover is your registration number for Windows.
8. During this first setup, you can click on the Next button to move to the next step. Clicking on the Back button allows you to return to the previous step and review the information entered during that step.
9. You will be asked to type your name and the name of your company, if applicable. Be careful to enter this information correctly, since this information will be entered to the Windows Registry for your system. Correcting a misspelled name at a later date could prove challenging, even for an experienced user of Windows.

10. You will be shown the End User's License Agreement. After reading this agreement carefully you can then accept its terms by clicking on the "*I accept the agreement*" checkbox.
11. In the next window you will be asked to enter the registration number, i.e. Product Key, which can be found on the *Certificate of Authenticity* on the front cover of your Windows 98 manual.
12. Setup will then configure your system, registering your hardware and software into the Windows Registry. The system might restart to finish the configuration process.
13. Next you will be prompted to enter a user name and password. If you don't want to log on with a password, only enter a user name and leave the password box blank. This way you'll never see this prompt again, unless you activate it again later.
14. Next you will be asked to setup your printer. If you do not have a printer, you can skip this step. If you are familiar with the process of setting up your printer, you can complete that setup now.
15. This finalizes the Windows setup procedure. Your system is now running and ready to use. After Windows 98 is completely installed and running, a welcome screen appears which allows you to take a guided tour of the newly installed operating system.

**Note:** *To learn more about the Windows operating system, read the Microsoft Windows User's Guide included with your system.*

## **To Power Down**

---

To shut down the computer, follow these instructions:

1. Close any applications that are running.
2. Shut down Windows, by clicking on the **Start/Shut Down** item and then selecting the option you want.
3. Make sure that the hard disk activity indicator is not lit or flashing.
4. Next power down the monitor and any other peripheral device, if applicable.



## About the Software

---

As described above, your system comes pre-installed with the Windows operating system. In addition, the hard disk of your system might also already have the necessary drivers for your system hardware and even some bundled software packages installed. In addition to the software that you run and see, there is some preloaded software that runs in the background. Specific drivers, files that allow pieces of hardware to communicate effectively with the computer and operating system, will probably have been preloaded for the various hardware units that have been packaged with your system. These drivers are also important in allowing you to alter certain aspects of your system, such as the resolution of your video image.

If you ever need to reinstall all the pre-installed software, you can use the master diskette(s) and/or CD-ROM(s), which contain copies of all the bundled drivers and software for your system.

If you purchased any other additional software with your system, you will need to install that software yourself before you can use it, which is discussed below.

The installation of software can be done through the **Add/Remove Program** icon in the **Start/Settings/Control Panel**. Once you are in the Add/Remove window, click on install in the **Install/Remove** menu, and follow the instructions.

Another way of installing software in Windows involves clicking on **Run** in the **Start** menu, and typing in the necessary program information. Most programs will install directly from within Windows. If your program must be installed from within DOS you can run a DOS session within Windows by selecting the MS-DOS option in the **Start/Programs** menu.

You should always read the installation instructions provided by the software manufacturer.

The Book PC system is designed to run straight out of the box. If you are an experienced user, you should be ready to go. You can find additional information about specific features of your system below. If you are not an experienced user you should take some time to review and familiarize yourself with some basic aspects of computing with your system.

---

## About the Drives

---

The most common combination of internal drives you will find in this system will be one hard disk drive, a diskette drive, and either a CD-ROM or DVD drive. Other combinations are possible, but here we will only talk about these most common drives.

### Hard Disk Drive

---

The hard disk drive is the fixed disk, which provides the primary storage medium for your data. Most of your programs will be stored on the hard disk drive. The programs you run and the data you create will be stored on the hard disk and take up some of the available space. Programs tend to take up a lot of disk space, while the files that you create will generally take up much less.

Your hard disk drive is usually the C: drive in your system. There are a number of tools that will allow you to keep track of disk usage and keep your hard drive running effectively.

You can find out what is stored on this drive by double-clicking on the **My Computer** icon and then double-clicking on the C: drive icon. You can find out the capacity, used space and available space on the C: drive by right clicking on the **C:** icon and then selecting properties.

The Windows Explorer (**Start/Programs/Windows Explorer**) provides an alternative way of seeing the contents of the C: drive. See the Windows 98 documentation for information on how to use this program.

Hard disks can fail. While some data recovery is sometimes possible even from a faulty drive, you can save yourself a lot of trouble if you are careful to back up your hard drive on a regular basis.


When the system is reading from, or writing to, a hard disk drive, the hard disk indicator light on the front panel will turn on. Never turn the power button off or move the system while the hard disk drive is reading or writing.

**Note:** *Most of the software provided for this computer, and most of the software that you might purchase for installation on this computer, is only licensed for a single installation on one hard disk drive. If you are creating more than one hard disk drive, you may not be entitled to install all the programs that are installed on the original hard disk drive. Check the software license before you install any program on more than one hard disk.*

## Diskette Drive

---

The diskette drive, on the right side of the front panel, can read from, or write to, 3.5" diskettes with capacities of either 720K or 1.44 MB. The diskette drive provides a convenient way of storing and transferring small files. Your computer identifies the diskette drive as drive **A**:

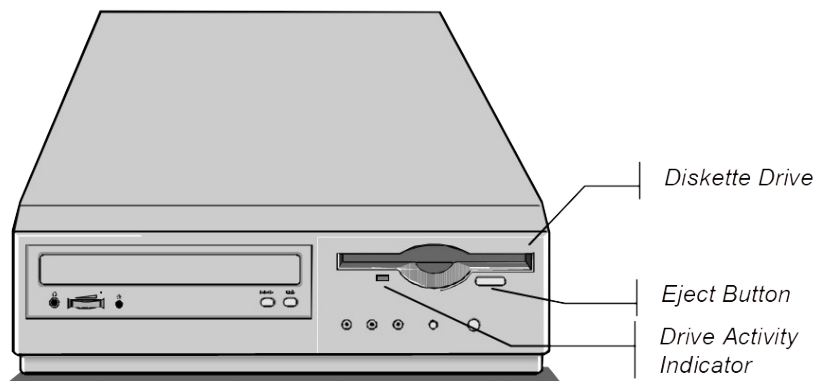

To use the floppy diskette drive, insert a diskette into the drive slot, label side up. The diskette slides all the way into the drive. You can then use your computer to read or write data to or from drive A. Log your computer on to the A drive. To remove a diskette from the drive, press the eject button on the front of the floppy drive module. The diskette ejects, and you can pull it out of the drive.

When the system is reading from, or writing to, a diskette, the light underneath the diskette drive will turn on. Do not try to eject the diskette when the light is on or you may lose data.

If you have stored important information on a diskette, you can protect it from accidental erasure by using the Write Protect sliding shutter on the reverse side of the diskette.

## CD-ROM Drive

---


The Book PC is installed with either a CD-ROM or a DVD drive. This option is factory installed. The CD-ROM/DVD drive is an internal component, and is located on the left side on the front of the system. It cannot be used to write data to a recordable compact disk.

The **CD-ROM** drive can be used to read data, or it can be used to play audio or video CDs (e.g. movie titles which use MPEG-1 compression). Compact Disks store massive amounts of data, and provide relatively fast access.

**DVD** (Digital Video/Versatile Disc) is a new technology that packs much more data onto the disc, so that more data, more audio, or better quality video can be stored on the disc. Usually your system identifies the CD-ROM/DVD drive as drive D:. Access to a CD/DVD-ROM is quite fast.

### Using the Drive:

1. Press the open tray button on the front panel of the CD-ROM/DVD drive. The tray will slide out from the computer. If your computer is not standing on a smooth surface, you might need to raise the right edge of the computer slightly so that the tray is not impeded.
2. Carefully pull the tray out to its fullest extent and place the disk into the tray. Hold disks by the edge so that you don't smear the storage surface. Normally the disks install with the label side facing upwards. The disk fits into the circular depression in the tray, and the spindle of the tray fits into the hole in the center of the disk.

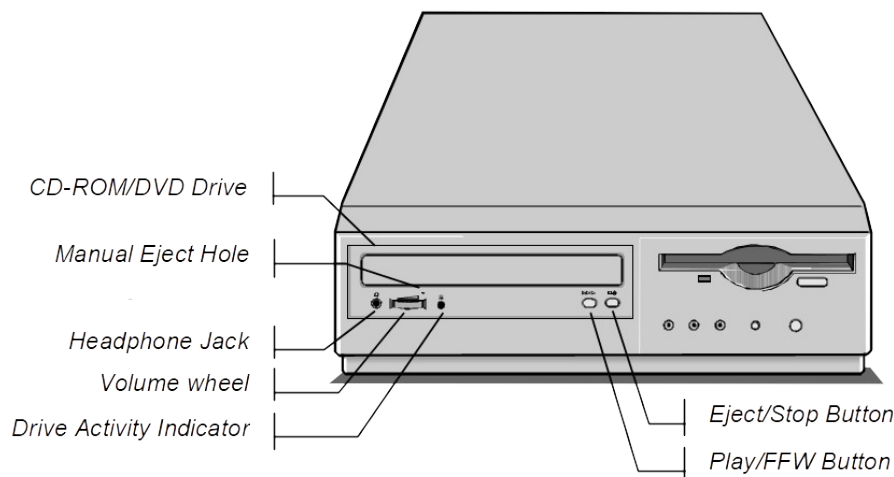

**Note:** Please note that the drive in the illustration may not be identical to the drive in your system.

3. Carefully slide the tray back into the computer until it is flush with the left edge of your notebook.

How you access titles on the disk depends on the format. If the disk has DOS formatted files, you can access the files by logging on to drive D:. You can log on to the drive from the DOS command line, or by using Windows Explorer.

If you wish to play an audio CD-ROM, you can use the Gamut software application. See appendix B for more information on using the Gamut application.

**Note:** *When playing an audio CD-ROM, you can use the extra control buttons that may be available on the front panel of the CD-ROM/DVD drive, as indicated in the picture above. If you have headphones, you can also listen to audio tracks by plugging it into the headphones jack of the drive. Use the volume control wheel to adjust the volume.*

To play movies or access multimedia files on a CD-ROM/DVD disk, you can use the optional WINDVD software application. See appendix C for more information on using the WINDVD application.

Both the Gamut audio application and, if the system comes with the optional DVD drive, the WINDVD multimedia application are bundled with the Book PC, and are either preinstalled on the hard disk or available for installation from a support disk.

Alternatively you can use the standard Windows Media Player, which has similar but somewhat limited functions as the software applications mentioned above.

1. In Windows Start menu, point to the Programs, Accessories, and Entertainment headings to display the Media Player name and icon. Click on Media Player to open the Media Player utility.
2. In Media Player, point to the Device item to display the Device menu. Select the kind of device that you want to play.
3. If you have selected a movie or audio title, your computer automatically locates the CD-ROM title in the CD-ROM drive.
4. When you select a file to play, Media Player displays a dialog box that allows you to select the drive and file name that you wish to play.
5. Before you click on the Play button in Media Player, you may wish to open the Audio Accessories program group and display the volume control utility so you can adjust the sound level and balance. You can use the Properties option in the Device menu to configure the way your computer plays certain media files.

If you need to open the drive tray while the power is turned off, or because the eject tray switch is not working, you can insert a straightened paper clip into the manual eject hole.

## **About Memory**

---

RAM (Random Access Memory), also known as system memory, is the active memory of your computer. It is used to hold programs and data that are currently in use. The more RAM your system has, the more space it has to run programs. Your system comes with a certain amount of RAM, but that is not the limit of memory used by Windows. Windows will set up a swap file on your hard disk drive to provide additional 'virtual memory'.

When the programs you are running need more memory than available in RAM on your system, Windows will swap some programs from RAM to that hard drive. When those bits of memory are needed, Windows will swap them back into RAM. Even with the fast data bus and fast hard drive in your system, the reading and writing to the disk is slower than having the data available in RAM. If you find that your computer is doing a lot of swapping and this is slowing down the response time of your system, you should consider upgrading the total amount of memory in your system. This will optimize the performance of system.

See chapter 4 of this user's manual for information on upgrading your Book PC's memory.

## **About the Audio and Video Onboard**

---

The system mainboard has an audio and video chipset onboard, which means your system is all set to go without adding in any extra sound and/or video graphics cards.

You just need to plug a monitor into the external monitor port in the back of the system, and connect external speakers and/or a microphone or other audio devices to the audio ports located the rear side of the system.

In addition to the standard audio jacks, the Book PC also features a digital audio jack, which allows for high quality audio transfer between your system and a peripheral device.

## **About the LAN Onboard**

---

The system mainboard has an Ethernet 10/100 Base-T adapter chipset onboard. This means your system is ready to join a network without adding in any other hardware cards.

Use the LAN jack in the rear of the system to plug a network cable. Contact your local network administrator for help on setting up your network environment.

## **About the Modem Onboard**

---

The system mainboard has a 56K (V90) fax/modem chip onboard. This means your system is ready to dial into the Internet or any other computer, or to send faxes, without adding any other hardware cards.

In some countries, local regulations may not permit the use of the fax/modem that is designed for this system.

The fax/modem is capable of running in two modes, both as a fax and as a modem, which can be used to connect to other computers. The fax/modem can send and receive data at up to 56 Kbps and send and receive faxes at up to 14.4 Kbps.

In order to use the fax/modem you need to first plug a telephone cable into the RJ-11 socket at the rear side of the Book PC, and then use the fax or communications software to operate the device.

---

# **Chapter 3**

## **Installing the Software**

---



This chapter provides information on how to reinstall the software on the hard disk in case of disk failure.

## **Installing the Windows 98 Operating System**

---

You will be using the Windows 98 CD disk that came with your system to install the operating system. For detailed information on how to install the operating system, refer to chapter 2 of the **Windows 98 Getting Started** manual, which is bundled with the Windows 98 CD.

***Note:** Before you start installing the Windows operating system to your Book PC's hard disk drive, make sure that you have access to the CD-ROM/DVD drive. If necessary, install the proper CD-ROM/DVD driver first. You can find the necessary files on the support CD.*

## **Installing the Bundled Software**

---

The support CD shipped with your system contains an original copy of all the software that was preinstalled on the hard disk drive, including all the drivers and the application software. You can use it to restore the Book PC's hard disk to its original form.


Before you proceed to install any of the bundled software, make sure to have installed the Windows 98 operating system first.

## **Installing the Drivers under Windows 98**

---

During the Windows 98 installation the setup program will already try to identify and match the proper drivers for the hardware connected to your system. Even so, Windows might not automatically detect all your new hardware. This means you might have to install some driver software in order for all your hardware to be recognized and work properly together.

The support software CD-ROM disc loads automatically under Windows 98. When you insert the CD-ROM disc in the system CD-ROM drive the Autorun feature will automatically bring up the install screen. The screen has three buttons on it, Setup, Browse CD and Exit. See the following screen illustration.

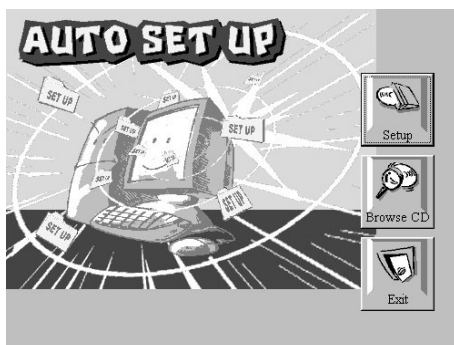

When you click on the **Setup** button the software installation program will run and you can select what kind of installation you want to do, as explained later in this section.

The **Browse CD** button is the standard Windows command that allows you to examine the contents of the disc using the Windows 98 file browsing interface.

The **Exit** button closes the Auto Setup window. To run the program again, reinsert the CD-ROM disc in the drive or click on AutoRun in the context sensitive menu for the CD-ROM drive icon in a file browser window.


### **Installing Software with Auto Setup**

To install support software for the system board follow this procedure:

1. Click on the **Setup** button. The install program will load and display the following screen. Click the **Next** button.



2. Select the items that you want to setup by clicking on it (the default options are recommended). Click the **Next** button to proceed.

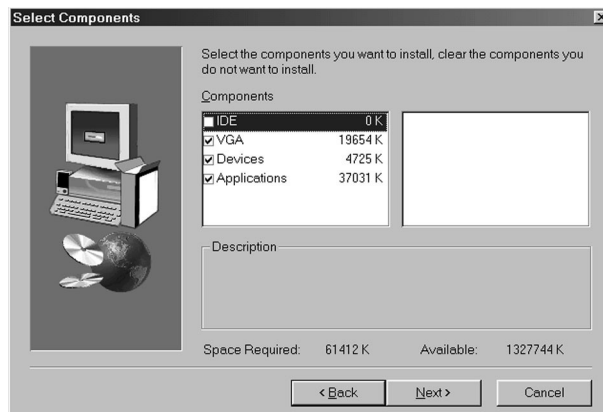

3. The support software will automatically install.

Once any of the installation procedures start, software is automatically installed in sequence. You will need to follow the onscreen instructions, confirm commands and allow the computer to restart as few times as is needed to complete installing whatever software you selected to install. When the process is finished, all the support software will be installed and working.

If your operating system is not Windows 98, you have to manually install for your drivers, refer to the Table of contents of the support CD section below. When put the support CD in the CD-ROM drive, the system might get an error message. Don't care the message, and don't execute the Auto Setup program.

### Table of contents of the support CD

---

**Note:** The correct path name for each software driver is provided, where **D:** identifies the CD-ROM drive letter – modify if necessary.

#### Bus Master IDE Driver

The IDE Bus Master Driver allows the system to properly manage the IDE channels on the mainboard. You need to install two drivers if you are using Windows 9x.

- Win9x – D:\IDE\BKI810\WIN9x\Install\SETUP.EXE and then  
D:\IDE\BKI810\WIN9x\Utility\SETUP.EXE

### **USB Driver**

The USB Driver allows the system to recognize the USB ports on the mainboard. You need to install this driver if you are running Windows 95.

This driver is available for:

- Windows 95 – D:\BKI810\USB\EUSBSUPP\USBSUPP.EXE
- Windows 95 (Chinese) – D:\BKI810\USB\CUSBSUPP\CUSBSUPP.EXE

### **Sound Driver**

The Sound driver allows the system to generate optimal sound effects. This driver is available for:

- DOS – D:\SOUND\Driver\DOSDRV\
- Windows 9x – D:\SOUND\Driver\W95-98\
- Windows NT – D:\SOUND\Driver\NT40\

There is also an Audio Rack application program available for:

- Windows 9x – D:\SOUND\Gamut\Audio Player\

### **Graphics Drivers and Software**

Find the Graphics drivers and software here:

- D:\VGA\BKI810\Win9x\Graphics\SETUP.EXE  
(D:\VGA\BKI810\SCART Win9x\Graphics\SETUP.EXE, for SCART TV only)

### **Fax/Modem Drivers and Software**

Find the fax/modem drivers and software here:

- D:\Modem\Driver\Win9x\
- D:\Modem\SuperVoice\

### **MediaRing Talk Software**

MediaRing Talk provides an internet telephone for the onboard modem.

- D:\Modem\MediaRingTalk\

### **Network Adapter Driver**

Find the network adapter driver here:

- D:\LAN\DAVICOM9102

### **BIOS Update Utility**

The BIOS Update utility allows you to update the BIOS setup file on your mainboard to a newer version. You can download the latest version of the BIOS setup available from the website.

- D:\UTILITY\AWDFL711.EXE

### **PC-Cillin Software**

The PC-Cillin software program provides anti-virus protection for your system.

This program is available for:

- DOS – D:\PC-CILLIN\DOS\PCSCAN.EXE
- Windows 95 – D:\PC-CILLIN\WIN95\DISK1\SETUP.EXE
- Windows 98 – D:\PC-CILLIN\WIN98\SETUP.EXE

### **WordPerfect Suite 8**

The WordPerfect Suite 8 is a set of office applications for Windows.

**Must sure in 800x600 display mode before you install it.**

- Windows 95/98/NT – D:\Corel\Suite8\AppMan\Setup\SETUP.EXE

### **Installing the Applications**

---

The installation of application software can be done through the **Add/Remove Program** item in the **Start/Settings/Control Panel**.

Once you are in the Add/Remove window, click on **Install** in the **Install/Remove** menu, and follow the instructions.

Another way of installing software is through the **Run** option in the **Start** menu. After you click Run, a small window pops up and you can either type or browse to the location of the installation file of the application software you want to add. When available, make sure to read the installation instructions provided by the software manufacturer.

---

# **Chapter 4**

## **Going inside**

---

This chapter takes a look inside the system and talks about upgrading certain key components

## **Introduction**

---

You probably won't need the information in this chapter right away, but if you ever plan to upgrade your system configuration, e.g. adding memory, this chapter shows you how to open your computer and explains a little about the inside.

If you are unfamiliar with the hardware inside your computer system, this chapter offers a basic introduction.

## **Important Precautions**

---

Many of the computer system's internal components are extremely sensitive to static electricity. The following techniques reduce the possibility of damaging components with electrostatic discharge or static.

- Before handling any components or touching anything inside the system unit, discharge your body's static electric charge by touching a grounded surface. Wear a grounding wrist strap if one is available.
- Do not take hard drives, memory chips, or the like from their antistatic containers or bags until you are ready to install them. When removing cards or chips from a system, immediately place them in an antistatic bag.
- When handling cards, hold them by their edges, and avoid touching the circuitry.
- Do not slide cards or ICs over any surface.
- Limit your movements during installation reduces static electricity.


**Warning:** *Always disconnect the computer system from AC power before opening the system unit cover.*

## Opening and Closing the Unit Case

Unlike many electronics devices, your Book PC was designed to be opened up by you. Whether you need to install additional options, change jumper settings, or just want to have a look inside, you can open the case without breaking your warranty.


### To Open the System Unit Case

1. Power down the system.
2. Disconnect the power cable.
3. Observe the static electricity precautions stated above.
4. Use a Philips-head screwdriver to remove the screws on the back.

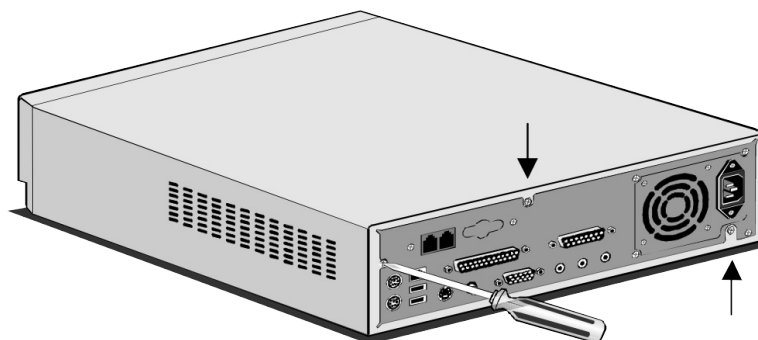

Remove Screws

5. Slide the case cover backward.

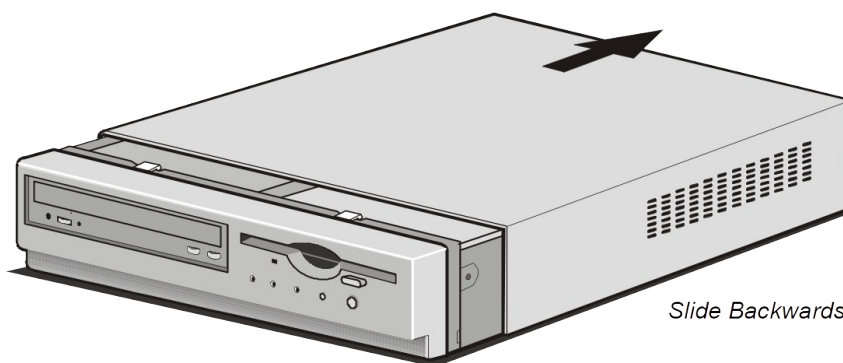


Slide Backwards

6. Guide the cover away from the chassis.



7. Remove the front cover by releasing the latches at the top. Slowly rotate the front cover away from the chassis until the latches at the bottom give way.

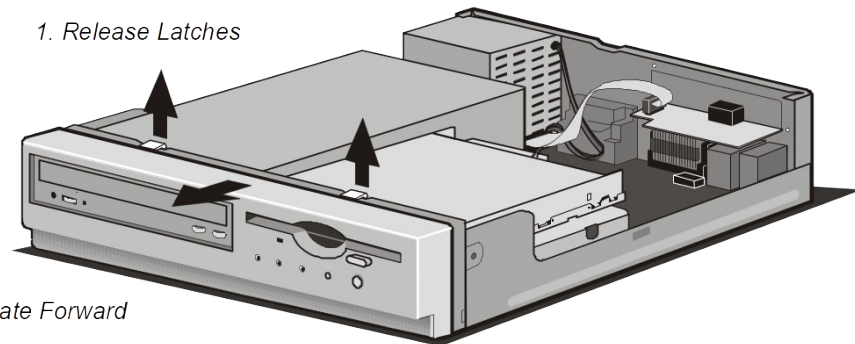

8. Set it aside. Look inside the unit and find the components labeled in the illustrations below.


### **To Close the System Unit Case**

---

1. Replace the front cover by first fixing the latches at the bottom of the chassis. Gently push the top of the front cover towards the chassis until the latches at the top snap to it.
2. Place the top cover over the chassis.
3. Slide the cover forward.
4. Replace the screws on the back.


## Inside the System

With your open Book PC in front of you, use the pictures below to locate each of the labeled parts.

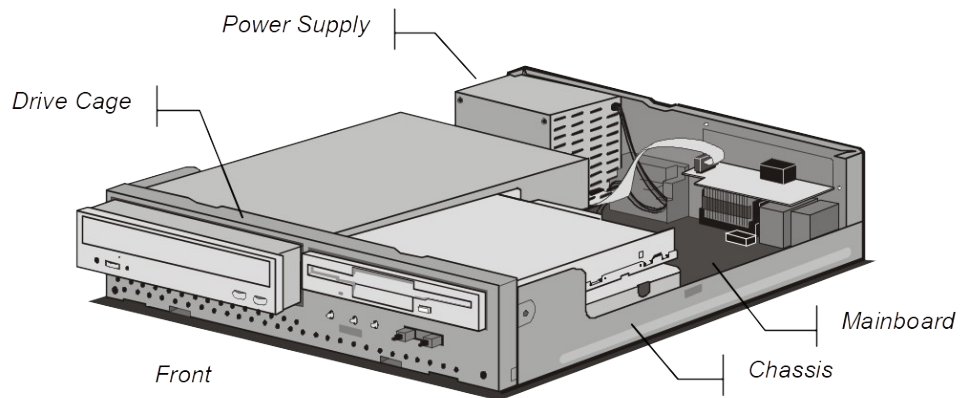


### Removing the Drive Cage

1. Use a Philips-head screwdriver to remove the screws on each side of the chassis.

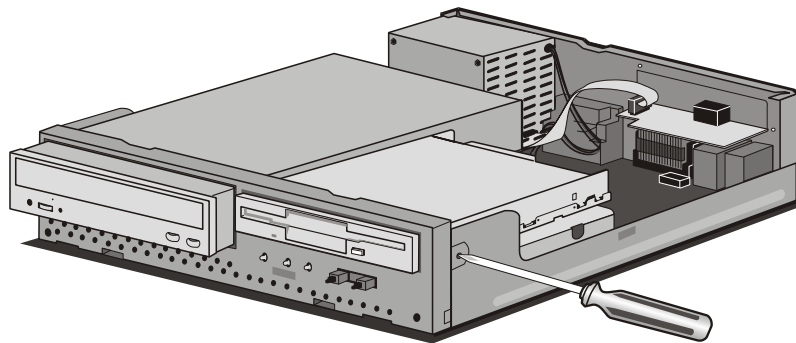


2. Disconnect all the connectors and power supply cables from the drives in the drive cage. Also disconnect the indicator panel connector cable.
3. Pull the drive cage out of the chassis from the front, and gently slide it out until it is completely free.

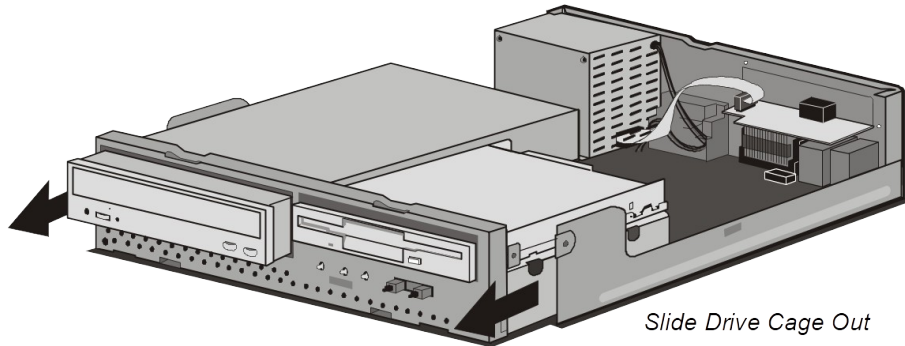



### Mainboard Items

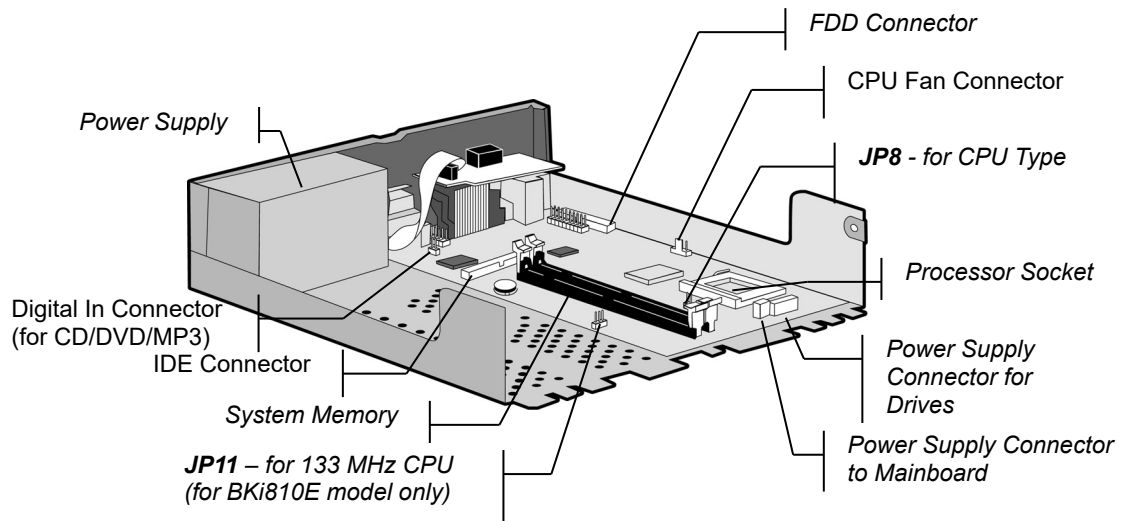With the drive cage removed, use the pictures below to locate the labeled mainboard items.



#### Jumper Settings:

JP8 – CPU Type Selector 		JP11 – 133 MHz CPU Selector  (for BKi810E model only)	
Pentium III CPU	Short Pins 1-2	133 MHz CPU	Short Pins 1-2
Celeron CPU	Open Pins 1-2	66/100 MHz CPU	Short Pins 2-3

## Upgrading

In this chapter we will limit ourselves to talking about upgrading or changing the CPU, system memory, and the drives.

### Changing the CPU


The Book PC features a Socket-370 for housing the system's processor. Take care that you do not try to install a Socket-7 processor such as the Pentium MMX, or the AMD K5/K6 into the Socket-370, since it will not fit.

The following list of processors is currently supported by the Socket-370: PPGA Celeron 300A to 600 MHz or FCPGA Pentium III 500 to 800 MHz.

**Note:** *New processors may be released after this manual is printed*

The processor installs into the ZIF (Zero Insertion Force) Socket-370 on the mainboard.

1. Locate the Socket-370 on the motherboard.
2. Pull the locking lever out from the socket and swing it to the upright position.
3. On the processor, identify the pin-1 corner by noting that it has a slight bevel.
4. On the Socket-370, identify the pin-1 corner. The pin-1 corner is on the same side as the locking lever, closest to the top of the lever when it is in the locked position.
5. Match the pin-1 corners and insert the processor into the socket. No force is required and the processor should drop into place freely.
6. Swing the locking lever down and hook it under the catch on the side of the socket. This locks the processor in the socket.
7. Locate the jumper **JP8** and **JP11** (if your model is BKi810E). Use these jumpers to select the installed CPU type and the 133 MHz FSB CPU or not. See the Jumper Settings section in the above.
8. If the processor is installed with a cooling fan assembly, connect the cable from the fan to the CPU fan power connector CPUFAN1.
9. While power-on your system, press "DEL" key to enter BIOS SETUP.

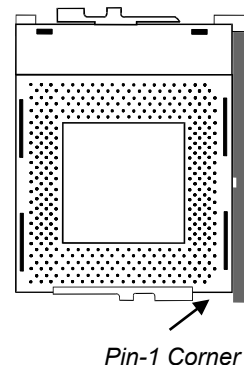

10. Set the **CPU Host/SDRAM/PCI Clock** item to Default (the BIOS will automatically detect the kind of processor) and the **CPU Ratio** item to match in the clock multiplier of the installed CPU in the **CPU Frequency Control** page.
11. Press “ECS” key, and then press “F10” key to save and exit the setup program.

### Changing System Memory


---

The Book PC mainboard has two 168-pin, 3.3 V DIMM (Dual In-line Memory Modules) slots, which can be installed with SDRAM (Synchronous Dynamic Random Access Memory) memory modules. You can use either 66 or 100 MHz memory modules.

You must install at least one memory module in order to use the Book PC. You can install the memory module into any of the two DIMM slots. Each module can have a capacity from 16 MB up to 256 MB, for a maximum system capacity of 512 MB.

The edge connectors on the memory modules have cut outs, which coincide with struts in the DIMM slots, so the memory modules can only be installed in the correct way.


On the DIMM slot, pull the locking latches at either end of the slots outwards. Position the memory module correctly and insert it into the DIMM slot. Press the module down into the slot so that the locking latches lever inwards and lock the module in place.

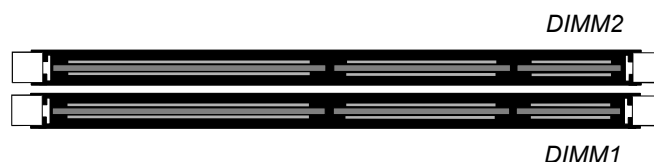

## Changing the Drives


All the drives within the system are located in the drive cage. You can refer to the picture above to see how to separate the drive cage from the chassis once the case cover is removed.

### The Drive Cage

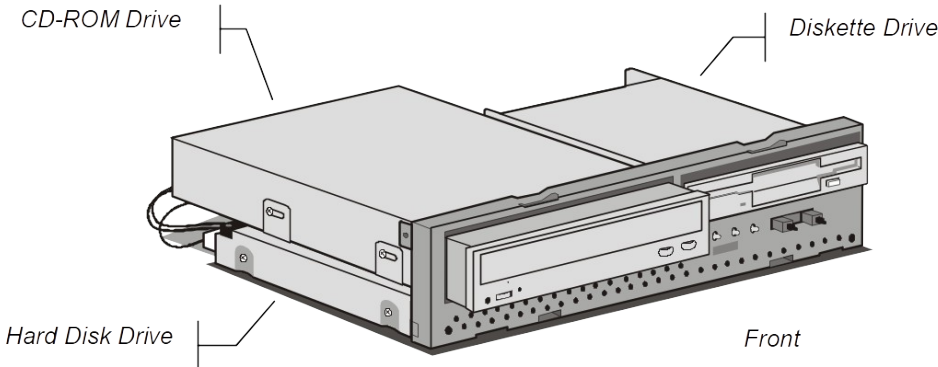

### Connectors


The connectors for the drives are located on the mainboard.

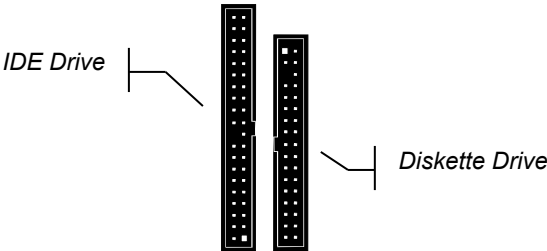


### Changing the Hard Disk Drive

Locate the IDE connector on the mainboard. A single IDE cable is provided with the mainboard. Connect the cable to the IDE connector. The cable has two connectors for IDE devices. If you connect two devices, you must configure one device as Master, and one device as Slave. See the documentation provided with the devices for information on this.

1. Place the hard disk drive in the drive chassis at the bottom side of the drive cage.

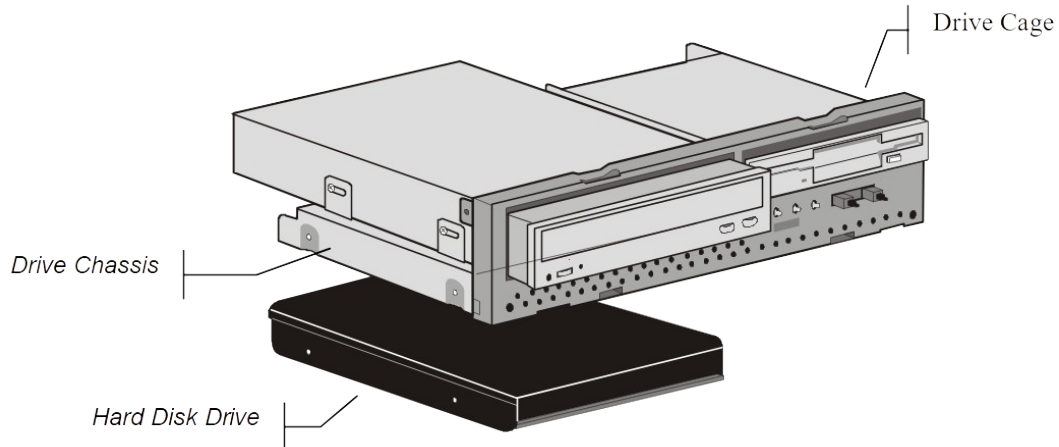

2. Using a Philips-head screwdriver and screws, secure the hard disk drive in the drive cage.

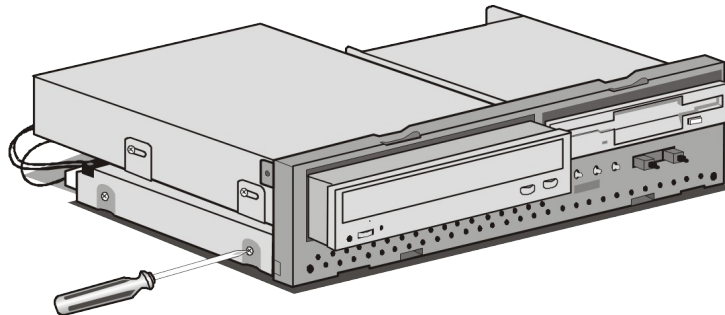


3. Connect the IDE cable to the mainboard.
4. Connect a power supply connector to the hard disk drive.

### Changing the CD-ROM/DVD Drive

---

Locate the IDE connector on the mainboard. A single IDE cable is provided with the mainboard. Connect the cable to the IDE connector. The cable has two connectors for IDE devices. If you connect two devices, you must configure one device as Master, and one device as Slave. See the documentation provided with the devices for information on this.

1. Place the CD-ROM/DVD drive in the drive chassis by sliding it in from the front.

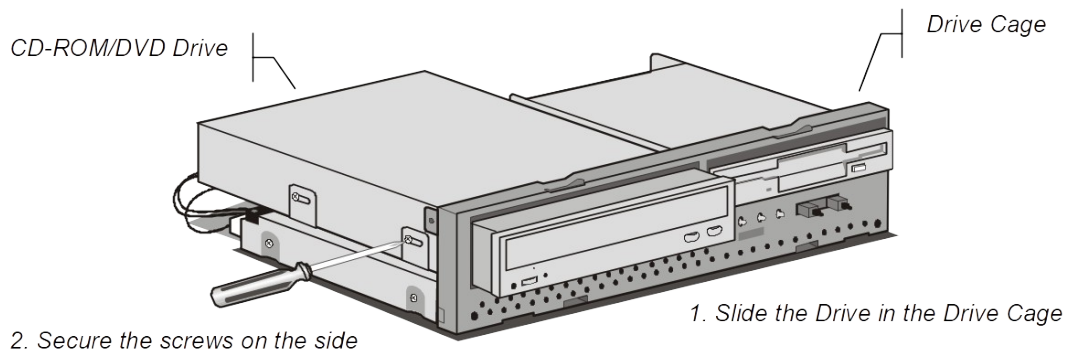


2. Using a Philips-head screwdriver and screws, secure the drive in the drive cage.
3. Connect the IDE cable to the mainboard.
4. Connect a power supply connector to the drive.

**Note:** The most common setup of this system will include a CD-ROM drive, but this slot in the drive cage can also hold alternative devices such as a DVD player.

### Changing the Diskette Drive

Locate the diskette drive connector on the mainboard.

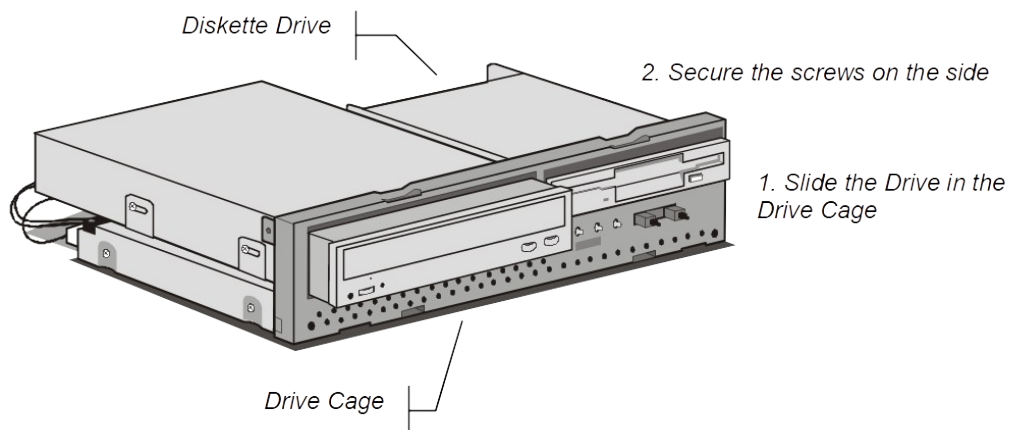

1. Place the diskette drive in the drive chassis by sliding it in from the front.
2. Using a Philips-head screwdriver and screws, secure the diskette drive in the drive cage.



***Book PC***

---

3. Connect the diskette drive connector cable to the mainboard.
4. Connect a power supply connector to the diskette drive.

---

# **Chapter 5**

## **Peripheral Device Setup**

---

This chapter provides information on how to setup the peripheral device.

## Setup the Television as System Console

---

**Note:** Selecting TV to be the display equipment is an optional choice.

### How to install your system with television console?

---

Selecting your television to NTSC or PAL mode.

Step 1: Make sure your system's power is off.

Step 2: Connecting video cable between the Television and Book PC.

**Note:** 1. The video cable is an optional accessory.

2. S-video cable is recommended to use between the Television and Book PC to get better video quality.

Step 3: Power-on your system.

Step 4: Press "DEL" key to enter BIOS SETUP mode, while the "Press DEL to enter SETUP" message is displayed on the screen.

Step 5: Move the cursor to the item, "Integrated Peripherals", then press "Enter" key to select the "Integrated Peripherals" setup.

CMOS Setup Utility – Copyright ( C ) 1984-1999 Award Software	
Standard CMOS Features	CPU Frequency Control
Advanced BIOS Features	Load Fail-Safe Defaults
Advanced Chipset Features	Load Optimized Defaults
<b>Integrated Peripherals</b>	Set Supervisor Password
Power Management Setup	Set User Password
PnP/PCI Configurations	Save & Exit Setup
PC Health Status	Exit Without Saving

Step 6: In “TV System Selection”, select the television mode to NTSC or PAL depended on your TV.

CMOS Setup Utility – Copyright ( C ) 1984-1999 Award Software Integrated Peripherals		
		Item Help
OnBoard IDE Channel	Enabled	
IDE Master PIO	Auto	
IDE Slave PIO	Auto	Menu Level
IDE Master UDMA	Auto	
IDE Slave UDMA	Auto	
USB Controller	Enabled	
USB Keyboard Support	Disabled	
Onboard Audio/Modem Chip	Enabled	
Onboard Lan Chip	Disabled	
IDE HDD Block Mode	Enabled	
POWER ON Function	Hot Key	
KB Power ON Password	Enter	
Hot Key Power ON	Ctrl-F1	
<b>TV System Selection</b>	<b>NTSC</b>	
Onboard FDC Controller	Enabled	
Onboard IR Port Select	Disabled	
IR Mode Select	IrDA	
IR Duplex Mode	Half	
Onboard Parallel Port	3BC/IRQ7	

**Note:** 1. If you do not know which system your TV provides, please check with your TV supplier.

2. If you use the SCART TV, select the television mode to PAL.

Step 7: Press “ECS” key to return the BIOS SETUP Main menu.

Step 8: Press “F10” key to save and exit the setup program.


## How to adjust the best video quality of your TV Output?

This section explains how to adjust the computer’s display settings under Microsoft Windows to optimize them for use with a television as the display device. Follow the procedure outlined here to make the necessary settings.


### I. Set the display font to the largest size.

Please follow this procedure to adjust the display font size.

1. Open the Control Panel. Click on the Start button and then point to Settings and click on the Control Panel item in the menu that appears.

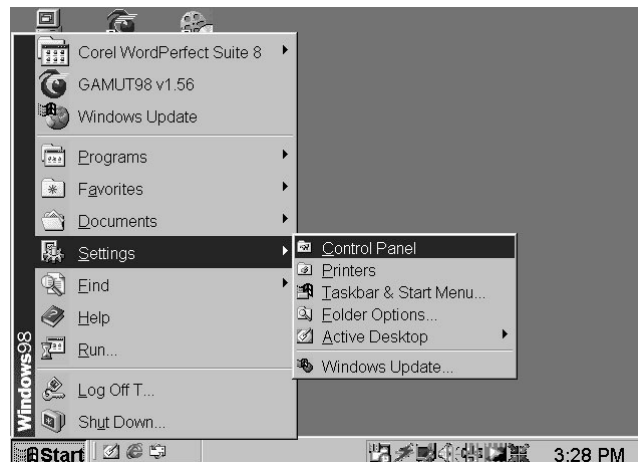

2. Find the **Display** item in the Control Panel window and double-click on it to open it. The Display Properties control panel will appear.

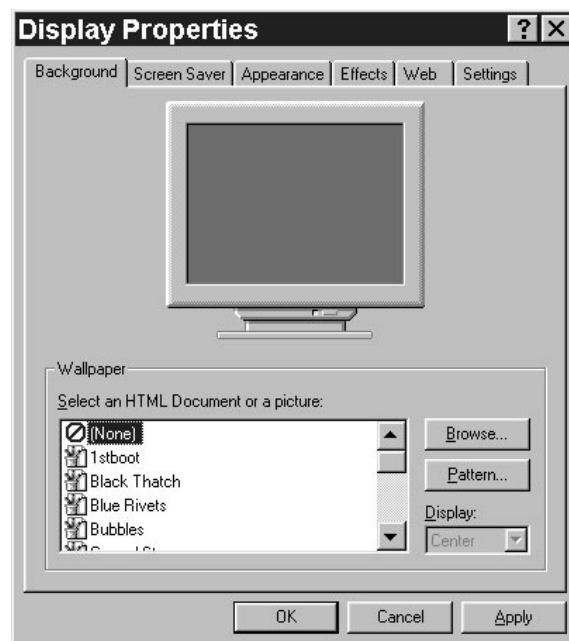

3. Click on the **Appearance** tab to bring it to the front.




4. Change the appearance Scheme setting to **Windows Standard (extra large)**. Click on the **Scheme** scroll arrow to display the Scheme list and scroll down to the setting and click on it.
5. Click on the **Apply** button to apply the new appearance setting. Leave the Display Properties window open and proceed to the next step.


## II. Set TV as the display device

Please follow this procedure to set the display device.


1. Click on the **Settings** tab in the Display Properties window to bring it to the front.

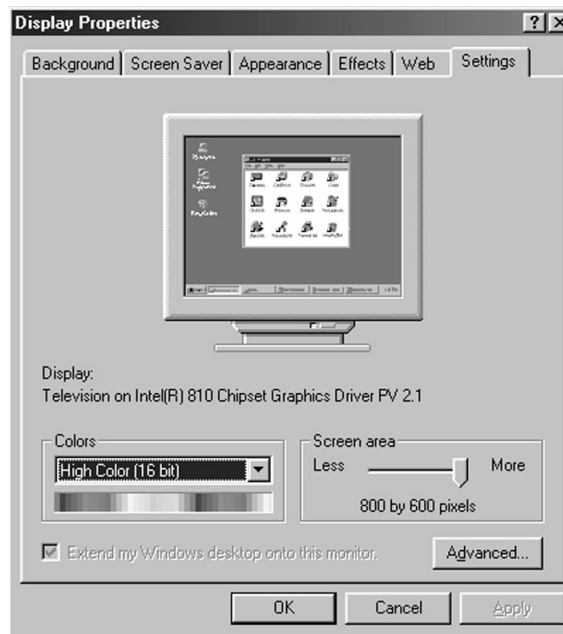

2. Click on the **Advanced** button to bring up the Driver Properties window. The General tab will be at the front. The **Font Size** setting should be set to **Large Fonts** for 800x600 screen resolution. If you will use 640x480 resolution, set the font size to **Small Fonts**.

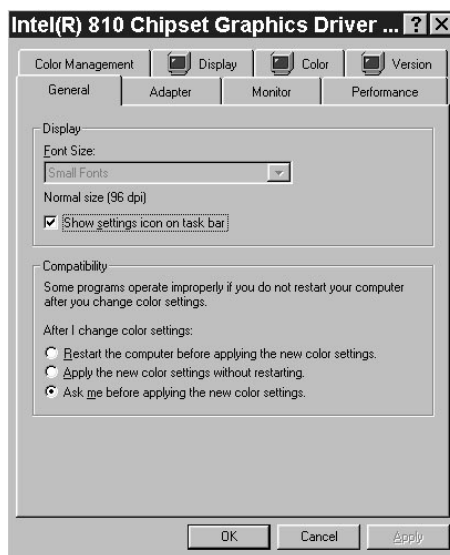

3. Click on the **Monitors** tab to bring it to the front. Click on the **Change** button.

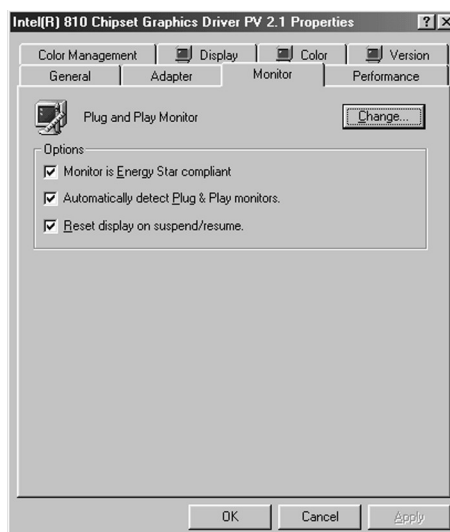



4. The Update Driver Wizard window will appear. Click on the **Next** button to proceed.



5. In the window that appears, select the item to display a driver list. Click on the radio button to its left to select it. A black dot will appear in the circle. Click the **Next** button to proceed to the next step.



6. Click on the **Next** button again to skip to the next window.

7. If the hardware list appears, scroll down the hardware list, select the **Monitors** item by clicking on it and then click on the **Next** button to proceed.



If the window below appears, click on the **Show all hardware** radio button to select it.



- The window will display a list of display hardware by manufacturer and model. Click on Standard monitor types in the **Manufacturers** list and then click on **Television** or **Generic Television** (varies by OS version) in the Models list. Click on the **Next** button to proceed.




- When the next window appears, click on the **Next** button to confirm the configuration created by the Wizard.



10. Click on the **Finish** button in the next window to complete configuring TV as the display device. The Wizard window will close and return to the driver properties window with the Monitor tab displayed.




11. Click on the **Apply** button at the lower right to apply the new setting.

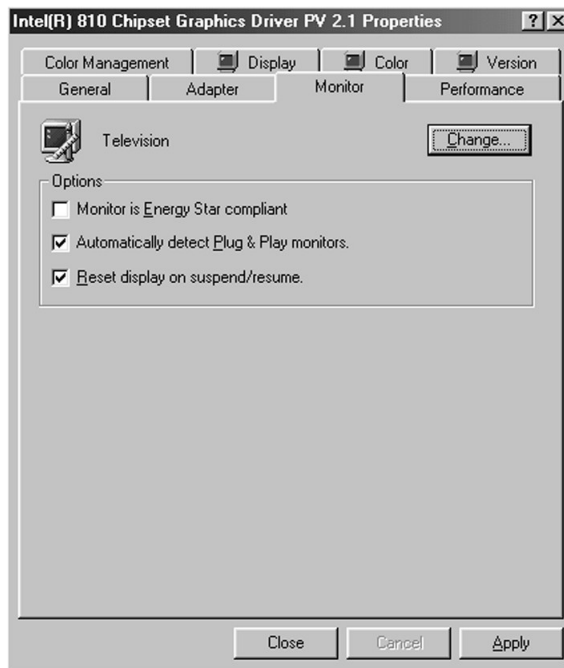


### III. Adjusting TV Out Settings Under Windows

Please follow the procedure below to adjust the display settings for a television connected to the TV Out port.

1. Click on the **Display** tab in the Display Properties window.

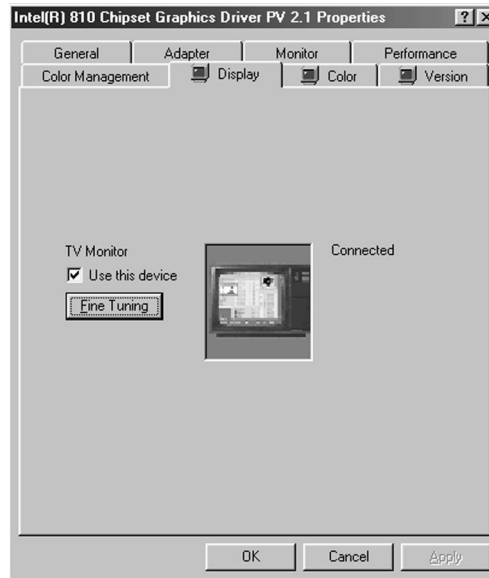


2. Click on the check box for Use this device under **TV Monitor**. A check should appear in the box. Click on the **Fine Tuning** button. The Fine Tuning Dialog Box will appear.

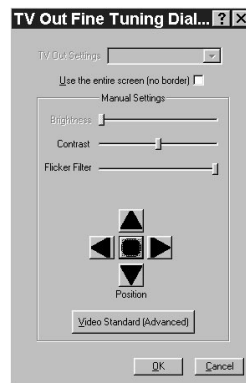


3. Adjust the **Contrast**, **Flicker Filter** and **Position** settings.  
Set the contrast to the middle position by clicking on the adjustment bar and dragging it into position. You can adjust this later to suit your preference.

Adjust the flicker filter to at least 80%. The right end of the slider is 100%.  
Adjust the position of the screen image using the Position control. Click on the circle in the middle to automatically adjust the image position and then make further adjustments with the directional arrows if needed.

4. Click on the **Okay** button to close the dialog box and return to the Driver Properties window.
5. Click on the **Color** tab in the Driver Properties window.

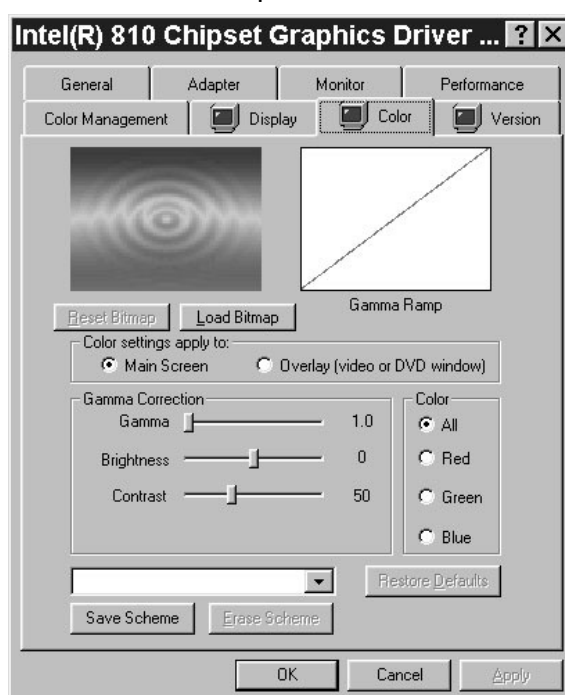


6. Adjust the **Gamma Correction** controls for **Gamma**, **Brightness** and **Contrast** to the suggested settings.  
Set Gamma to 1.0  
Set Brightness to -10  
Set Contrast to 45  
When you're done, click on the **Okay** button to confirm the settings and return to the Display Properties window.
7. Set the **Screen area** setting in the Display Properties window to **800x600 pixels** by sliding the setting bar to the left. Click the Okay button when you're done.

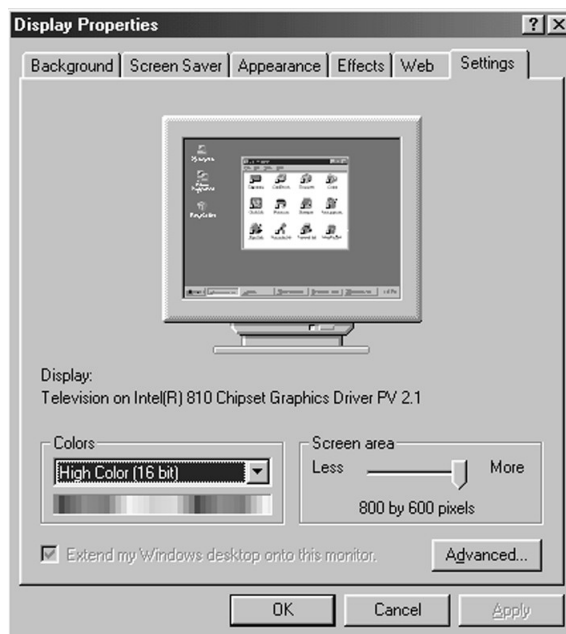


8. Click the **Okay** button in the next dialog box to confirm the desktop size change. The screen area will reset to the 800x600 resolution you selected.



- Click on the **Yes** button to accept the new setting.

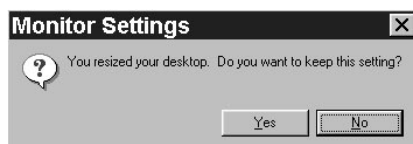

- The Display Properties window will close. Close the Control Panel.
- Restart the computer by clicking on the **Start** button and then the **Shut Down...** command. Click on the **Restart** radio button to select it if it isn't already selected and then click on the **Okay** button to confirm you want to restart the computer.

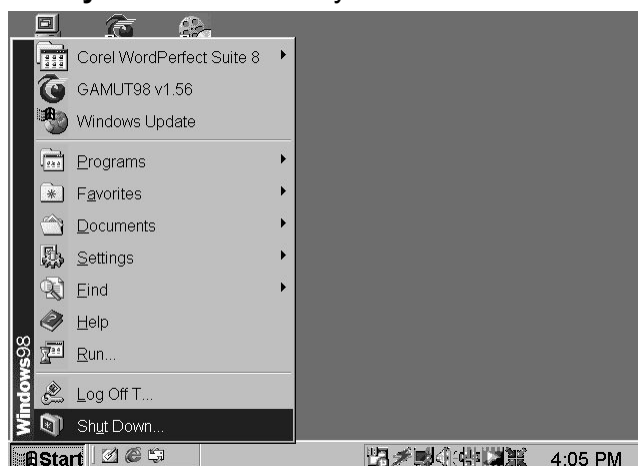

**Please Note:**

**Make sure to also adjust the *Brightness and Contrast* controls on the television to an intermediate setting. Adjust *Sharpness ( or Detail )* settings to their maximum settings. You can adjust these settings to adjust the screen image to suit your preference. If onscreen text is not clear enough, try reducing the contrast setting.**




## Setup the SPDIF-Out for the Audio System

**Note:** Selecting SPDIF-Out for the audio system is an optional choice, and that might cause invalidly the Analog audio (Speaker, Line in, Microphone).

### How to setup the SPDIF-Out function in Win98?

Please follow this procedure to setup the SPDIF-Out function.

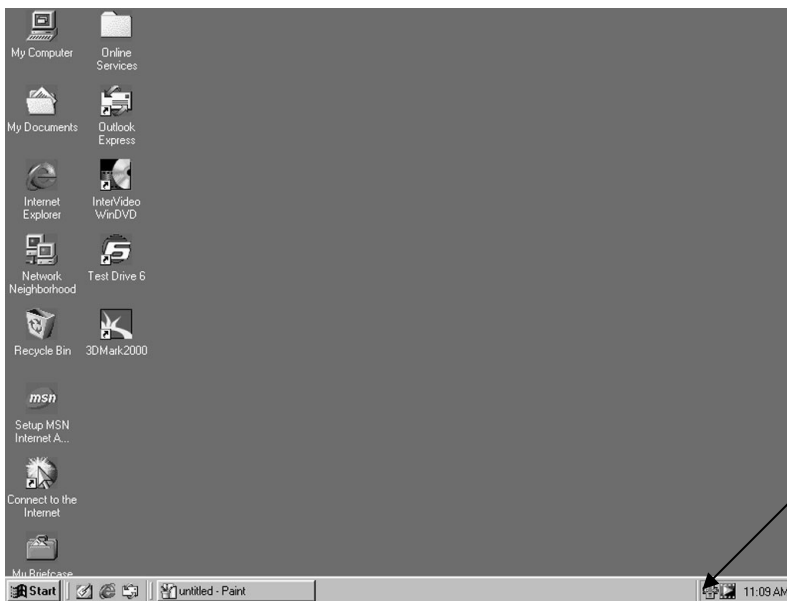


1. Click on the **Sound** icon at the lower right to open the Sound Properties.



2. Click on the **Advanced** button at the lower left to bring up the Advanced window.

- Click on the check box for **Enable SPDIF OUT** under **SPDIF** as following illustration.

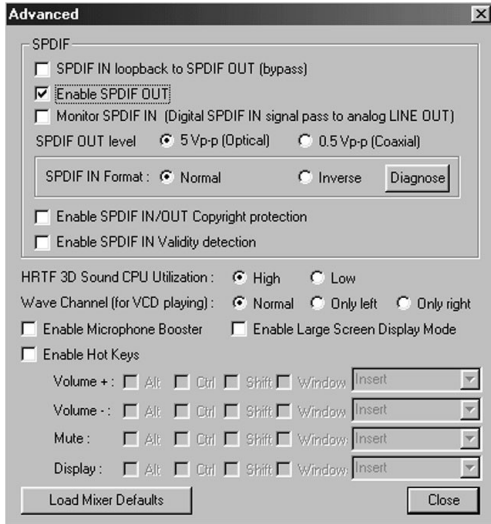


- Click the Close button to complete enabling SPDIF Out function for the audio system.

**Note:** Enabling this function might cause invalidly the analog audio.


## How to setup the SPDIF-Out function in WinDVD?

Please follow this procedure to setup the SPDIF-Out function.

- Under the WinDVD control panel, click on the Properties icon  to open Properties window.



2. Click on the **Audio** tab to bring it to the front.

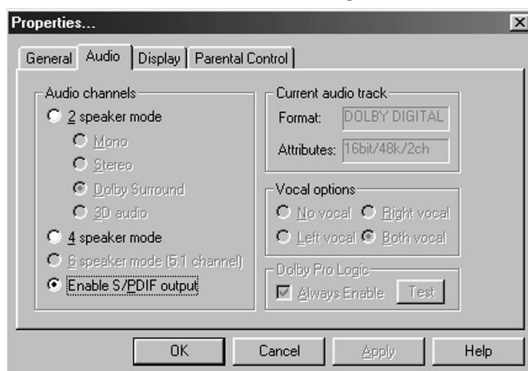

3. Click on the check box for **Enable S/PDIF output** under **Audio channels**. (If the used CD/DVD ROM does not support SPDIF function, the Enable S/PDIF output item might be hidden.)
4. Click on the OK button to complete enabling SPDIF Out function for the WinDVD.

**Note:**

1. *Enabling this function might cause invalidly the Microphone function in the KARAOKE mode.*
2. *Make sure to disable this function before use the CD/DVD ROM that does not support SPDIF function.*


## Setup the SCART TV as System Console

**Note:** Selecting SCART TV to be the display equipment is an optional choice.

### How to install your system with SCART TV console?

Selecting your system to SCART TV mode.

1. Connecting SCART cable between the Television and Book PC.

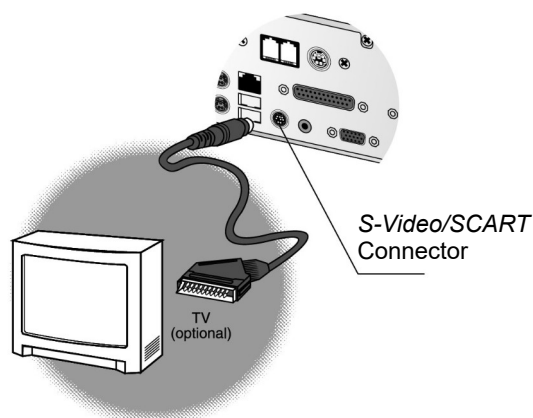

2. Power-on your system.
3. Press “DEL” key to enter BIOS SETUP mode, while the “Press DEL to enter SETUP” message is displayed on the screen.
4. Move the cursor to the item “Integrated Peripherals”, then press “Enter” key to enter the “Integrated Peripherals” setup page.
5. In item “TV System Selection”, select “PAL” for the SCART TV, refer to Chapter 5.
6. Press “ECS” key to return the BIOS SETUP Main menu.
7. Press “F10” key to save and exit the setup program.
8. Restart the system and boot to Win98 system.
9. Setup the driver for the SCART TV. Refer to the Graphics Drivers and Software in Chpter 3.

---

# **Appendix A**

## **Problem Solving**

---

This chapter contains a troubleshooting section that can help you solve common problems that you might encounter when using the Book PC. Read this information carefully as it might help you on your way. If you encounter a problem that you cannot solve, contact your vendor for assistance.

## **Q & A**

---

### **The computer doesn't work.**

---

Make sure the power cord is firmly plugged into the wall outlet and the rear side of the computer.

Next check that the wall outlet is working properly.

### **The keyboard doesn't work.**

---

Make sure that the keyboard is firmly and securely connected to the proper connector on the rear side of your computer. Do not plug it into the designated PS/2 port for the pointing device.

### **The Mouse doesn't work.**

---

Make sure that the mouse is firmly and securely connected to the proper connector on the rear side of your computer. Do not plug it into the designated PS/2 port for the keyboard.

Next check to see if the mouse needs cleaning.

### **The CD-ROM/DVD drive does not operate properly.**

---

Open the tray and take the CD-ROM/DVD disk out. Check to see if the disk is properly placed in the tray, most of the times this means putting the disk in with the printed side up.

Next check to see if the disk is dirty or defected. Try again with another disk.

### **The audio doesn't work.**

---

Make sure that the speakers are properly connected to the Line Out connector (or to the Line In connector if four channel speaker mode is enabled).

Check the volume settings of your system. Click on the speaker icon located on the Windows taskbar, and make sure sound is not muted. Turn up the volume.

### **How do I use the Four Channel Speaker feature?**

---

Connect the front speakers to the Line Out jack, and connect the rear speakers to the Line In jack, on the rear side of the system. Click on the speaker icon located on the right side of the Windows taskbar. Make sure to check the Four Channel Speaker item and make sure the Mute bottom is not checked. Set the volume level to a proper level.

Most distributed music was originally recorded in stereo format (two channels). Playing this kind of music quality will cause the rear speakers to output identical sound as the front speakers.

Whenever you play a DVD title, using the DVD drive, make sure that the DVD audio output is selected to the AC-3 or 5.1 Channel. Some titles still default to stereo quality sound, even though they can support the Four Channel Speaker feature.

### **How do I set up the video output selection?**

---

After all the video display devices are properly connected to the system, power up the system, and the Book PC will automatically detect the connected devices and distribute the video display to them. If both a monitor and a TV receiver are hooked up to the Book PC, the system will only select the monitor by default.

### **The DVD title playback seems slow or not smooth**

---

Make sure to quit all running tasks and/or to close applications running in the background before you start the DVD playback.

### **The hard disk drive access indicator light stays on**

---

There might be some lost allocations units within your hard disk drive, or some files stored in the disk may have been corrupted. You can check on this by using Disk Defragmenter. This is a Windows 98 program that can be found at **Start/Programs/Accessories/System Tools**.

### **The diskette drive indicator light stays on**

---

Check to see that the diskette is inserted properly. Eject the disk and insert it again. Try again using another disk. You can also run Scan Disk. This is a Windows 98 program that can be found at **Start/Programs/Accessories/System Tools**. This program can detect if your disk is defective.

## **How to upgrade the Flash BIOS?**

---

The setup program on the Flash BIOS chip holds basic information on your system. Normally you do not need to access it, since all hardware settings are automatically recognized by default.

***Note:** If your system runs without problems, there is no need to upgrade the Flash BIOS. Incorrect installation of the Flash BIOS might cause you system to malfunction. If you are not familiar with this procedure, contact a certified technician familiar with the system for assistance.*

Follow these steps to upgrade the Flash BIOS:

1. Obtain the latest version from your system vendor or download it from the manufacturer's web site.
2. Make a bootable diskette. E.g. at a DOS prompt, use the following command:  
format a: /s  
(where A: is the diskette drive)
3. Copy the downloaded files to the diskette.
4. Next copy the BIOS flash utility program (Awdfl711.exe for Award BIOS) from the support CD to the diskette.
5. At the DOS prompt, generate the auto execute command:  
Awdfl711 [binary\_file\_name] /sn /py
6. Make sure the diskette is in the drive, then restart the system.
7. As the system restarts, it will automatically upgrade the Flash BIOS. Follow the instructions on the screen.

## **How do I backup my data files to prevent loss of data?**

---

You can backup your personal data by using the backup feature of Windows 98. Click on **Start/Programs/Accessories/System Tools**, then choose **Backup**. Choose the files you want to backup. Select the destination path name, the target drive should be a disk or partition other than the one your are backing up from. Set the conditions, security and report of the backup file. Next start the backup.

To recover files from a backup file, return to the Backup program, and choose the restore function.



---

# **Appendix B**

## ***Gamut* Documentation**

---

Copyright © 1999 Formosoft International Inc. All rights reserved.  
The contents of the associated Gamut software are the property and  
copyright of Formosoft International Inc. Any reproduction in whole  
or in part is strictly prohibited.

This chapter contains documentation for the GAMUT application. FORMOSOFT's GAMUT provides users with high compression audio CD recording, incredible music playing quality, and versatile music management for various applications. The recording, playing, and music management capabilities of GAMUT lead to a completely new audio experience, and turns your Book PC into a professional audio device.


## Introduction

---

GAMUT integrates all aspects of sound recording and playback, combining high-tech digital sound effects with state-of-the-art audio encoding and decoding technology. It makes your PC the control center of your home audio equipment.

With high compression rate MP3 technology, GAMUT performs efficiently on storing and managing music on your PC. Designed to exploit the latest MP3 technology, it can dynamically synchronize MP3 files with a user-friendly Wizard interface.

GAMUT consists of seven tools: Musician, CD-Cashier, Music-Box, 3D<sub>FS</sub>-ACD, Midier, Voice-Catcher, and Mixer.



- **Musician** – Play MP3 files and provides digital sound effect functions.
- **CD-Cashier** – Produces and compresses MP3 files.
- **Music-Box** – Manages MP3 files.
- **3D<sub>FS</sub>-ACD** – Plays audio CDs and provides digital sound effect functions.
- **Midier** – Plays MIDI music with high quality and offers playlist to control the playing order.
- **Voice-Catcher** – Records compressed audio files.
- **Mixer** – Checks the functions and controls all the Book PCs audio options.

## Produce MP3 files – Use CD-Cashier


Start CD-Cashier from the GAMUT Menu Bar or click **Start/Program Files/GAMUT/CD-Cashier**.




1. Place an audio CD into CD-ROM/DVD drive and click the Start button on the CD-Cashier panel. Follow the Wizard instructions, and continue by clicking Next after each step.
2. Select 'Digital recording from Audio CD' to capture the audio track with high quality digital technology.

If the CD-ROM drive doesn't provide CDDA audio track capture function, select 'Analog recording from Audio CD' to record MP3 files with analog technology. However, analog technology may not result in the same quality as digital technology recording does.

3. Select the audio tracks in 'Check the track(s) you want to compress' window.

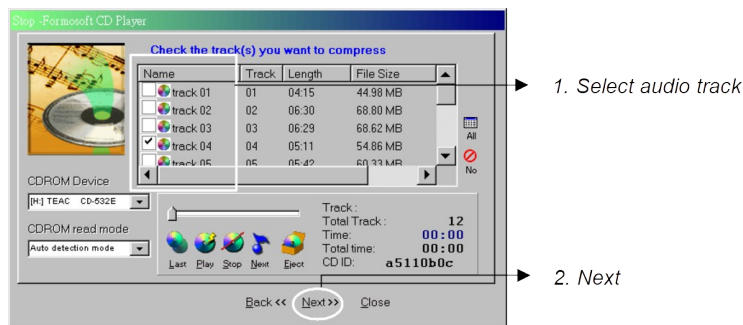

4. Choose a directory for saving the MP3 files.
5. Select the default 'Variable bit rate (Guaranteed audio quality)' option to enable the best quality audio compression. Then click Encode to begin the production of the MP3 files.

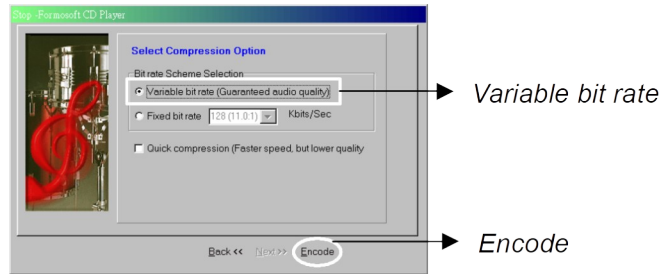


6. Next, a window will appear that allows you to track the encoding progress.



## Play MP3 files – Use Musician

Start Musician from the GAMUT Menu Bar or click **Start/Program/GAMUT/ Musician**.

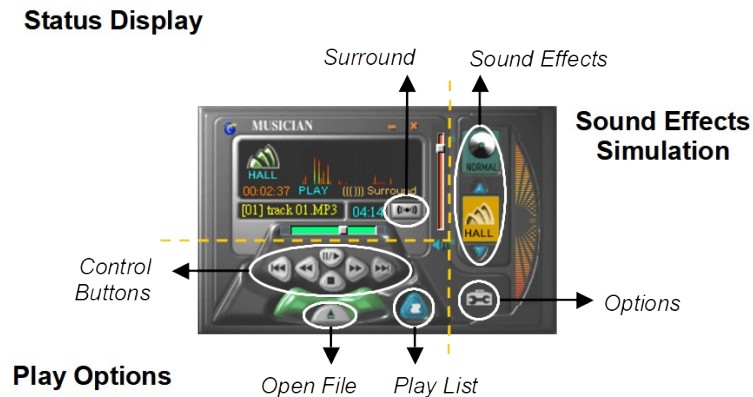

The panel consists of 3 individual parts:


- **Status Display** shows the current progress of playing, selected sound effects and sound files.
  - **Play Options** consists of control buttons.
  - **Sound Effects Simulation** allows you to set up sound effects.
1. Press the 'Open File' button to select MP3 files.
  2. After selecting the MP3 files, Musician will start playing the music automatically. You can read the track progress from the Status Display. You can also adjust the sound effects to your needs.
  3. Press the 'Surround' button to activate the Four Channels Speaker feature.

Sound Effects Simulation provides selective simulated digital sound effects such as HALL, VOCAL, SOFT, ROCK and BASS. Review the available sound effects by switching the blue up and down arrows, enable the selected sound effect by clicking on the associated icons. Selecting the Normal icon disables all other sound effects.

## Play music CDs – Use 3D<sub>FS</sub>-ACD

Start 3D<sub>FS</sub>-ACD from the GAMUT Menu Bar or click **Start/Program/Gamut/3DFS-ACD**.

1. After 3D<sub>FS</sub>-ACD is activated, the program will detect any audio CD in the CD-ROM/DVD drive automatically. The number of tracks will be shown in the 'Status Display Area'. You can start the music by clicking on the track number.
2. Through the control buttons (play, stop, rewind, and forward) you can gain full control of music playback.

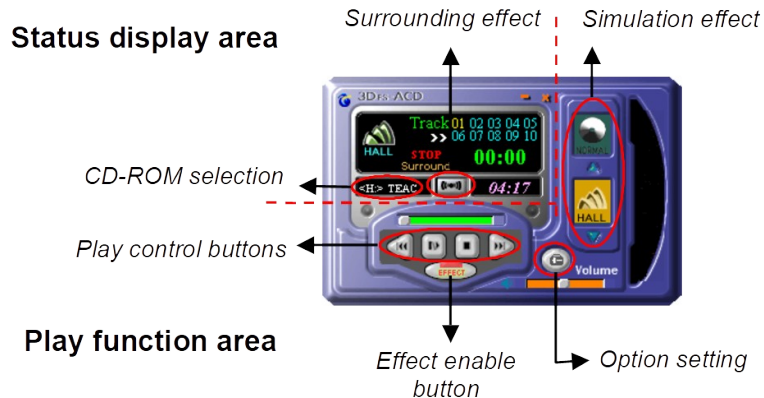


3. Click on the 'Effect enable' button to select simulation effects. After the effect is enabled, you can click on the 'surrounding effect' in the Play Function area to enable it.
4. On the right side of the main panel, the 'simulation effect' area, you can set various digital effect options including HALL, VOCAL, SOFT, ROCK and BASS.
  - NORMAL sets the default effect.
  - HALL simulates effect of concert hall.
  - VOCAL enhances vocal clarity and the quality of the voice.
  - SOFT enhances the listening effect, especially suitable for Jazz and New age music.
  - ROCK creates Rock effect, suitable for dancing and dynamic music.
  - BASS enhances the bass effect.

When you are using the "Effect enable" mode, or are switching from one effect to another, there is a 1 to 3 seconds delay. The delay time differs from one sound card to another.

## Play MIDI files – Use Midier

Start Midier from the GAMUT Menu Bar or click **Start/Program/GAMUT/Midier**.

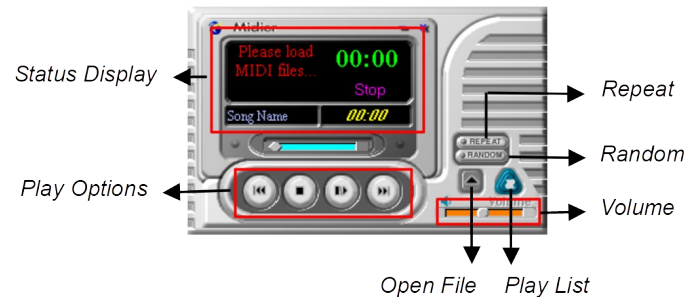

1. Press the 'Open File' button to select the required MIDI files.
2. Midier will automatically play the selected files and display their current status, such as track name and time, on the panel. The control buttons on the 'Play Options' area allow you to navigate the files.
3. The 'Play List' allows you to manage the selected tracks. It's easy to add or delete tracks, or to change the order.

## Regulate the audio sources – Use Mixer

Start Mixer from the GAMUT Menu Bar or click **Start/Program/GAMUT/Mixer**.

Mixer is used to control the audio sources for playing and recording using your Book PC computer. The supported sound sources include Wave-out, CD, MIDI, etc. The categories of the audio sources vary with each sound card. Mixer can automatically detect and show the sound sources for the specific sound card in a computer.


The 'Mute' button enables or disables the associated audio source. You can control the volume and balance level of each sound source, using the vertical and horizontal scrollbars. You can also select 'Playback' or 'Record' to regulate the conditions for each environment.

## Recording audio data—Use Voice-Catcher

Start Voice catcher from the GAMUT Menu Bar or click **Start/Programs/Gamut/Voice Catcher**.



1. Make sure that your recording environment setup is ready. Then click on the 'Start recording' button to start.
2. Next select the recording format. The system default GM2 is a compressed format.
3. Next type the name of the recorded file or browse to find an existing file.
4. Select the recording source, and adjust the volume, then select the desired recording mode and compression ratio.

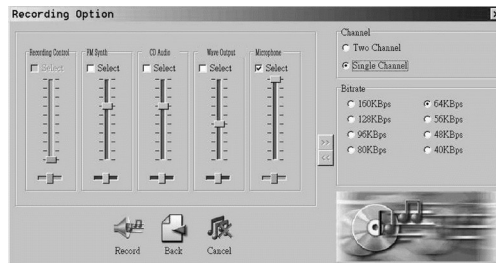

**Note:** Normally, when recording vocal audio, select Single Channel 64K BPS. A one-hour recording will take up about 28 MB. For recording common music files, Two Channel 128K BPS is suggested. A one-hour recording will take up about 56 MB.

5. After the setup is done, single click the 'Record' button to start recording.
6. Once you have finished recording, click the 'Stop' button. Click on the 'Play' button to play the recorded file.



---

# Appendix C

## *WINDVD* Documentation

---

Copyright © 1998 Intervideo, Inc. All rights reserved.  
The contents of the associated WINDVD software are the  
property and copyright of Intervideo, Inc. Any reproduction in  
whole or in part is strictly prohibited.  
Manufactured under license from Dolby Laboratories.

This chapter contains documentation for the WinDVD application. InterVideo Inc.'s WinDVD is a simple-to-use DVD player with all the features you would expect to find in a standard consumer DVD player, in addition to some very advanced functionality, such as full VCD 2.0 support, full precision video decode, a choice of user interfaces, and video display options. You can play DVD titles or Video CDs - WinDVD automatically determines the type of disk in the DVD drive and uses the correct playback method.





Each DVD (Digital Video Disk or Digital Versatile Disk) is designed by the a different author, who can create different features for each disk. WinDVD handles all features commonly used today. Most DVD disks have menus, which you can navigate. WinDVD recognizes these features and lets you access them through the WinDVD user interface.

## The WinDVD Controls

Once WinDVD is launched and active, use the controls on the WinDVD panel to navigate through the DVD Title. The WinDVD controls are designed to look like a standalone DVD player, so they may already look familiar to you. Keep in mind that not all options are available with all DVD Titles. If a feature is not available with a particular title, it will be grayed out. Below is a description of each section of the full WinDVD control panel.
















### Start/Eject

-  Power off, closes the WinDVD application.
-  Opens the Playlist window, letting you select a specific order and group of files. Select from .vob, .dat, .mpg, and .ac3 files. You cannot select a file while a movie is playing.
-  Opens the Properties window.
-  Minimizes, maximizes, and closes the WinDVD video window.







## Navigation Buttons

---

	Eject.
	Stop.
	Starts playback of the disk.
	Pauses the current playback.
	Single frame advance while in Pause mode
	Loops current title or chapter.
	Jumps to previous chapter.
	Jumps to next chapter.
	Plays the disk in fast reverse mode.
	Plays the disk in fast forward mode.
	Restarts the same chapter.
	Opens the Audio and Video adjustment window.
	Opens the online help system.

## Sliders

---

	Moves to a specific time in the title.
	Increases or decreases the brightness of the video output.
	Increases or decreases the audio output.
	Color Control Bar 1. Adjusts the relative strength (balance) between video colors blue and yellow.
	Smooth slow motion and smooth fast forward.
	Color Control Bar 2. Adjusts the relative strength (balance) between video colors red and green.

## Counter


---



The counter shows the chapter currently being played, and how much time has elapsed since the Title began playing.

## Navigation Arrows

---

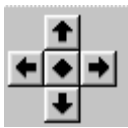


Use the navigation arrows just as you would use a mouse button or the Tab key.

The arrows represent (clockwise from top): Navigate up, Navigate right, Navigate down, Navigate left. Center: Select or Enter.

## Numeric Keypad

---



The numeric keypad provides you with a method of selecting numbers. This is more likely to be used while playing a Video CD than a DVD disk. Any time that you enter a numeric value, click the corresponding key on the numeric keypad and then click the green checkmark to accept that number.

## Menu Items

---

- MENU** ▶ Displays all of the menus available (Root, Audio Language, Subtitles, etc.) on the DVD disk currently being played and allows you to select a menu to navigate.
- TITLE** ▶ Opens a submenu showing you all of the titles available on the DVD disk currently being played and allows you to select a new title to play back.
- CHAPTER** ▶ Opens a submenu showing you the chapter currently being played. You can select another chapter from this menu.
- AUDIO** ▶ Displays the current DVD disks audio track options. If multiple audio tracks or languages are available, use this menu to select your choice.
- SUBTITLE** ▶ Displays the subtitle menu. If multiple language subtitles are available, use this menu to select your choice.
- ANGLE** ▶ When available, select the angle to view from a list of optional angles.

## The Right-Mouse Click Menu

While you are viewing a movie, you can put the cursor on the display window and right-mouse click to see a 'video menu'.

The commands on this menu are the same as those in the regular menu. You can also use this window to show the main WinDVD control panel when it has been hidden by viewing full-screen video, or as set in the Properties section.

The Video menu is shown as below:

Play	<b>Play</b> – plays the current title, restores play after a pause.
Stop	<b>Stop</b> – stops the current playback.
Pause	<b>Pause</b> – pauses the current playback.
Fast Forward	<b>Fast Forward</b> – plays the disk in fast forward mode.
Fast Backward	<b>Fast Backward</b> – plays the disk in fast reverse mode.
Previous Chapter	<b>Previous Chapter</b> – jumps to the previous chapter.
Next Chapter	<b>Next Chapter</b> – jumps to the next chapter.
Repeat	<b>Repeat</b> – repeats the disk play
Mute	<b>Mute</b> – mutes the sound on the disk currently playing.
Eject	<b>Eject</b> – ejects the disk from the drive.
Menu ▶	<b>Menu</b> – shows menu selections
Title ▶	<b>Title</b> – shows title information
Chapter ▶	<b>Chapter</b> – shows chapter selections
Subtitle ▶	<b>Subtitle</b> – shows subtitle selections
Audio ▶	<b>Angle</b> – shows angle selections
Angle ▶	<b>Properties</b> – opens the Properties window
Properties...	<b>View</b> – shows tool bar, status bar and player
Adjustment...	<b>About</b> – shows version and copyright information.
View ▶	<b>Exit</b> – closes WinDVD.
About...	
Exit	

## Using WinDVD

---

### Viewing a DVD Title

---

To view a DVD title, put the disk into the DVD drive. WinDVD will automatically begin playing the disk. To launch WinDVD manually:

1. Select **Start/Program/WinDVD**, or if you have created one, click the WinDVD desktop shortcut.
2. Make your selections from the menu within the WinDVD window, or click the **Play** icon on the control panel.

### Creating a Playlist

---

1. With the disk in the drive, click the **Playlist** icon.
2. The Playlist window opens. Select **File** from the lower right set of options (File or Disk). Move to the drive and directory in which the files are stored. Select the first file to be played.
3. Click **Add**. Repeat this procedure with as many files as you want. Remember that these files will now play in the order in which they appear. Delete and replace files to create the correct order, if needed.
4. Click **Save** to save your playlist for future use. Click **Close** to close the window. When you click **Play**, the playlist automatically plays the files in the order specified. You can play .mpg, .vob, and .ac3 files.

### Loading a Previously Saved Playlist

---

1. With the disk in the drive, click the **Playlist** icon.
2. The Playlist window opens. Click **Load Playlist**.
3. The list of saved playlists appears. Select the playlist to load.
4. Click **Close** to close the window. When you click **Play**, the playlist automatically plays the files in the order specified. You can play .mpg, .vob, and .ac3 files.

### Changing Your Settings

---

You may want to enable or disable certain features of your WinDVD. To change any properties and features of your WinDVD:

1. Launch WinDVD and view the main control panel.
2. Click the **Properties** icon. The **Properties** window appears.
3. Tap to the desired properties to be changed. Select from General properties, Audio properties, Parental Control properties, and Display properties.
4. Select the properties you want. If you are unsure about what a particular property means, see the online help for that properties property page, or check the glossary. You can change these properties at any time.
5. Click **OK** again to accept your changes.

### **Setting Parental Control**

---

Parents may want to set the parental controls, allowing only those movies and titles that are age-appropriate to be viewed. (In some cases, movies can be shown in modified form to allow different ratings for the same movie.) To set movie rating limits on your WinDVD:

1. Launch WinDVD and view the main control panel.
2. Click the **Properties** icon. The **Properties** window appears.
3. Tap to the desired properties to be changed. Select **Parental Control Properties**.
4. Select the desired age-appropriate level. This will be the highest level allowed. No titles with movie ratings higher than the one selected will be viewable. You can change this again at any time.
5. If you have set a password, enter the password now, then click **OK**. You can change your password at any time.
6. Click **OK** again to accept your changes. The parental control feature will now use the new settings.

### **Ejecting a Disk**

---

To eject a disk from the player, click the **Eject** button from the video viewing window or the toolbar.

### **Hiding and Viewing the Player**

---

You can choose to only see the Video Viewing window. To hide the Player:

1. Open the Properties page.

2. Tap to General. Disable (remove the checkmark) **View Player**.
3. The player is now hidden. Enable the option again to view the player. You can open the properties page from the right-click menu or from the toolbar on the video viewing window.

### **Enabling the Toolbar and Status bar**

---

You can choose to include a toolbar and a status bar when using the Video Viewing window.

1. Open the Properties page.
2. Tap to General. Enable **View Toolbar** to see the toolbar in the video viewing window, and **View Statusbar** to see the status bar on the window.
3. You can remove the toolbar or status bar from the video viewing window by disabling the selected feature.

### **Viewing a DVD Movie or Video CD**

---

Insert the Title into the CD-ROM/DVD Drive. WinDVD reads the format of the disk and starts automatically.

### **Playing a DVD Interactive Title**

---

Interactive DVD or MPEG2 video based titles require no special action from the user. Just install the application and it should properly call the WinDVD drivers to playback the DVD or MPEG2 video files embedded in the application.

### **Vocal options**

---

When you insert a karaoke or other vocal disk into the DVD drive, WinDVD automatically reads and correctly decodes the type of disk. The audio output is determined by the **Vocal Options** properties you have selected.

### **Changing the Parental Control Password**

---

To create a new password:

1. From the Parental Control window, click **Change Password**.
2. Type your desired password directly into the **New Password** text area.



3. Type the same password again in the **Confirm New Password** text area. Be sure to type it exactly the same both times, or it will not be accepted.

To change your password:

1. From the Parental Control window, click **Change Password**.
2. Type your current password in the **Old Password** text area.
3. Type your desired password directly into the **New Password** text area.
4. Type the same password again in the **Confirm New Password** text area. Be sure to type it exactly the same both times, or it will not be accepted.

### **Closing WinDVD**

---

To close WinDVD:

1. Stop any DVD disk in the DVD drive.
2. Click the **Close** icon.

## Understanding the DVD System

---

Digital Video Disk (DVD) stores and plays digital information, such as a movie, on a disk similar in size to the common CD-ROM disk. DVD output is clearer, sharper, and uses a higher color resolution than previous formats. Audio content is also sharper. DVD disks store up to nine hours of exceptionally high quality video and multi-channel surround-sound audio, interactive multimedia computer programs, or 30 hours of CD-quality audio.

DVD allows features that were impossible with movies (or games) on tape. DVD players can play from any point on the disk. It can also pause, play in slow motion or fast forward, or freeze frames. These random access features allow previously unheard of features such as multiple endings for a movie, first-person interactive video games, and multiple camera angles.

DVD can store multiple sound tracks, it supports up to eight languages for a single movie. In addition, the format supports 32 closed caption tracks.

### Region Codes

---

Motion picture studios want to control the home release of movies in different countries because theater releases aren't simultaneous. They have required that the DVD standard include codes that can be used to prevent playback of certain disks in certain geographical regions. The player will refuse to play disks that are not allowed in that region.

Regional codes are entirely optional for the maker of a disk. Disks without codes will play on any player in any country. Most DVD-ROM drives let you change the region code a few times, usually between 5 and 9. Once a drive has reached the limit it can't be changed again unless the vendor or manufacturer resets the drive. There are 6 regions:

- 1 Canada, U.S., U.S. Territories
- 2 Japan, Europe, South Africa, Middle East (including Egypt)
- 3 Southeast Asia, East Asia (including Hong Kong)
- 4 Australia, New Zealand, Pacific Islands, Central America, Mexico, South America, Caribbean
- 5 Former Soviet Union, Indian Subcontinent, Africa, N. Korea, Mongolia)
- 6 China

## **NTSC and PAL**

---

When the National Television Systems Committee (NTSC) prepared the standards for commercial television broadcasting in the United States, Canada, Japan, and parts of Central and South America, they decided on 525 lines of display at thirty frames per second. In most of Europe, Australia, and parts of Central and South America, however, the Phase Alteration Line (PAL) standard, 625 lines at 25 frames per second was used.

## **Aspect Ratios**

---

Video can be stored on a DVD in any one of four ways:

- **“Standard”**, which has a ratio of 4 to 3,
- **“Wide screen”**, with a ratio of 16 to 9;
- **“Letterbox”**, which uses a 16 to 9 ratio but displays in a standard size screen;
- **“Pan & scan”**, which crops parts of the display out of the visible image in order to fit into a standard size display.

## **DVD Audio**

---

A DVD-Video disk can have up to 8 audio tracks, with each track being PCM, MPEG-2, or Dolby Digital.

- **PCM** is uncompressed digital audio - the same format used on CDs. Using from one to eight channels, it can be sampled at 48 or 96 kHz with 16, 20, or 24 bits per sample.
- **MPEG** audio is multi-channel digital audio, using compression with sample rate of 48 kHz at 16 bits. Both MPEG-1 and MPEG-2 formats are supported.
- **Dolby Digital** is multi-channel digital audio, with a sample rate of 48 kHz at up to 24 bits. The bit rate is 384 Kb/s being the normal rate for 5.1 channels and 192 being the normal rate for stereo, although most Dolby Decoders support a slightly higher bit rate.

## Parental Control Properties

---

You can set password-protected parental controls on your WinDVD. From the list of ratings, select the one you want to allow for viewing.

**G** - suitable for general audiences

**PG** - parental guidance suggested

**PG-13** - parental guidance suggested, not suitable for children under 13

**R** - restricted

**NC-17** - adult theme or content, not suitable for children under 17

## Quality Setting

---

- **Low** - When this selection is enabled, all features displayed in Custom Quality settings are turned off.
- **High** - When this selection is enabled, all features displayed in Custom Quality settings are turned on.
- **Custom** - Unlocks the Custom Quality section of Display Properties. Select the specific features such as smooth scaling or software de-interlacing.

## Hotkey Definitions for the WinDVD Operation

---

Play/Pause – **[Space] key**

Stop – **[End] key**

Eject/Close – **“E” key**

Fast forward – **“F” key**

Rewind – **“R” key**

Next chapter – **[PgDn] key**

Previous chapter – **[PgUp] key**

Brightness up – **[+] key**

Brightness down – **[-] key**

Resume – **[Ctrl] + [Enter] keys**

Vocal change – **“V” key**

Mute/Unmute – **“M” key**

Menu – **[Ctrl] + “M” keys**

Numeric keypad – **“1”~“9”**

Navigate select – **[Enter] key**

Subtitle – **“S” key**

Audio select – **“A” key**

Title – **“T” key**

Next Audio – **[Ctrl] + “A” keys**

Exit Application – **“X” key**

Volume up – [Shift] + [↑] keys

Volume down – [Shift] + [↓] keys

Next subtitle – [Ctrl] + “L” keys

Navigate left/right/up/down – [←]/[→]/[↑]/[↓]

Title menu – [Ctrl] + “T” keys


Next angle – [Ctrl] + “V” keys

Subtitle On/Off – [Ctrl] + “O”

***If the version of the Drivers Support CD is lower than V1.6, we suggest that you should set the DMA mode for the DVD-ROM first, before you running the WinDVD.***


## **Set the DMA Mode for the CD-ROM/DVD-ROM**

1. Open the Control Panel. Click on the Start button and then point to Settings and click on the Control Panel item
2. Find the **System** item in the Control Panel window and double-click on it to open it.
3. Click on the **Device Manager** tab to bring it to the front.

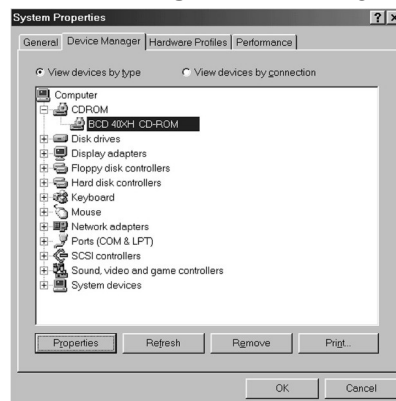

4. Double-click on the **CDROM/DVDROM** item to bring out the used device.
5. Click on the used device and click **Properties** button. The device Properties window will appear.

6. Click on the **Settings** tab to bring it to the front.

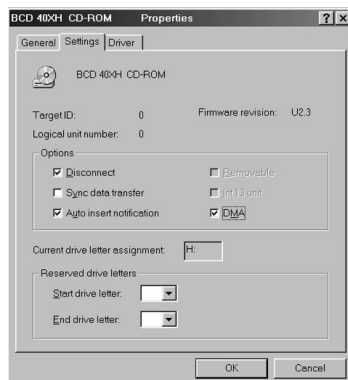

7. Click on the check box for **DMA** under **Options**. A check should appear in the box.

8. Click **OK** button to accept the new setting. And the system will be restart.

**Confidential Unpublished Works**

Copyright 1992-1997 Dolby Laboratories, Inc. All rights reserved.



"DVD" and the DVD logo are copyright The DVD Forum.



This product includes technology manufactured under license from Dolby Laboratories. "Dolby" and the "Double-D" symbol are trademarks of Dolby Laboratories.

---

# **Appendix D**

## **S-YXG50 Documentation**

---

\* Copyright 1996,1997,1999 - Yamaha Corporation , All Rights Reserved. No parts of this publication may be reproduced in any form or for any purpose without prior written authorization from Yamaha Corporation .

This chapter contains documentation for the S-YXG50 application.

## Features

---

The Yamaha Soft Synthesizer S-YXG50 allows you to play back MIDI files on your computer without using a hardware tone generator. Its high fidelity sounds, match the sounds from an authentic tone generator, are based on and realized by advanced MMX technology. The S-YXG50 lets your computer be a music synthesizer.

## Specifications

---

### Tone Generator

Type	Wave table synthesis
Wave Size	2MB
Maximum Polyphony	128 notes
No. of Voices	676 voices + 21 drum kits
Sampling Rate	44kHz / 22kHz / 11kHz
Output	Stereo

### Dynamic Filter

Filter	Time-variable dynamic filter for each note
--------	--

### Effects

Effect Set	Three blocks (Reverb, Chorus, Variation)
Types	Reverb : 8 types
	Chorus : 8 types
	Variation : 36 types

### MIDI Input Driver

Recognized MIDI Messages:	GM System Level 1
	XG System Exclusive Message
	TG300B Mode



## Installation

---

Double-click the Setup.exe file in the S-YXG50 folder and answer the displayed prompts, and installation will be performed automatically. However if another soft synthesizer is already installed, the program will automatically decide to halt installation.

To uninstall the software, choose <Start - Program - YAMAHA Soft Synthesizer S-YXG50 - Uninstall S-YXG50 >.

(All deletions will be completed when Windows is restarted.)

*Even if you have deleted only the Yamaha folder or the Syxg50 folder, use the above procedure to uninstall the software.*

## Performance Settings

---

You can select the desired performance appropriately for the computer or applications. (By optimize Polyphony, CPU load, Sampling Late, DirectSound).

### To make settings


Choose < Start - Settings - Control panel > and double-click the XG Synth Driver icon



or

Choose < Start - Programs - YAMAHA S-YXG50 - S-YXG50 setup > and make the settings in the window that appears as below.

(This screen shot is a sample. The version number etc. of the product you are using will be different.)

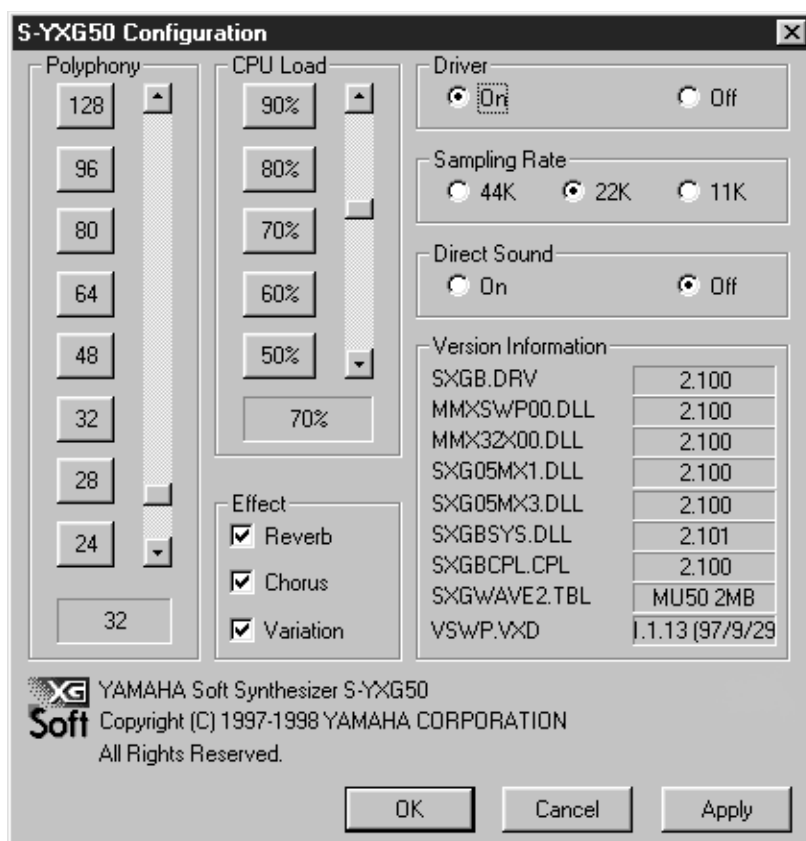

## Functions

The S-YXG50 has two playback modes -- XG and TG300B -- and will startup in XG mode.

When playing song data from commercially available XG collections or GM collections, a signal (System exclusive message) recorded at the beginning of the data will specify the playback mode, so that S-YXG50 will automatically switch to the appropriate playback mode.

Even when you create your own song data, you can insert a system exclusive message such as XG System On etc. at the beginning of your data to switch the playback mode.

- \* Starting up your computer will automatically initialize all settings.
- \* Changing modes requires about half a second. We recommend that you insert at least one blank measure between the playback mode message(s) and the beginning of the musical data.

### **XG Mode**

In XG mode the S-YXG50 will play XG-compatible midi data, as well as multitimbral data created for the GM System Level 1 format.

In XG mode the S-YXG50 can:

- \* Play up to 16 Parts.
- \* Choose from 480 Normal Voices and 11 Drum Voices.
- \* 3 effect sends.

### **TG300B Mode**

In this mode, S-YXG50 can be used as an XG compatible multitimbral tone generator.

For **Voices and Elements, Normal Voices and Drum Voices, Part Priority, Element Reserve, Selecting Voices** and **Effect Types** detail description, please check the online help to get more information.

## S-YXG50 Player Operation Panel

---

Clicking on an item displays help information about it.



[ 1. Ambient ] **Song Name display box**: By clicking in this window, you can switch between the song name display and the level meter display.

[POWER] **button**: Clicking on this button quits S-YXG50 Player.

[ - ] **Minimize button**: Clicking on this button minimizes the S-YXG50 Player to an icon.

[SONG] **button**: Clicking on this button displays the Set Play List dialog box.

[ ▶ ] **Play button**: Clicking on this button loads the MIDI file displayed in the Song Name display panel, and starts playback.

[ || ] **Pause button**: Clicking on this button pauses the song.

[ ■ ] **Stop button**: Clicking on this button stops the song.

[ ⏮ ] **First song select button**: Clicking on this button jumps to the first song in the Play List.

[ ⏪ ] **Previous song button:** Clicking on this button jumps to the song immediately before the current song.

[ ⏩ ] **Next song button:** Clicking on this button jumps to the song immediately following the current song.

[ ⏮ ] **Last song select button:** Clicking on this button jumps to the last song in the Play List.

[ ▲ ] **Tempo Up button:** Each time this button is clicked, the tempo increases.

[ ▼ ] **Tempo Down button:** Each time this button is clicked, the tempo decreases.

[SET] **button:** Clicking this button opens the Sound Device Setup dialog box.

[ ? ] **Help button:** Clicking on this button displays the Help text.

[ 🔊 ] **Master Volume slider:** Dragging the slider up or down or clicking at the appropriate position increases or decreases the volume level of the song being played.

## **YAMAHA SOFT SYNTHESIZER LICENSE AGREEMENT**

---

**IMPORTANT-READ CAREFULLY:** This YAMAHA License Agreement ("AGREEMENT") is a legal agreement between you (either an individual or a single entity) and YAMAHA for YAMAHA Software identified above which may include associated software components, media, printed materials, and "online" or electronic documentation ("SOFTWARE PRODUCT"). By installing, copying, or otherwise using the SOFTWARE PRODUCT, you agree to be bound by the terms of this AGREEMENT. If you do not agree to the terms of this AGREEMENT, do not install or use the SOFTWARE PRODUCT.

The SOFTWARE PRODUCT is protected by copyright laws and international copyright treaties, as well as other intellectual property laws and treaties.

1. GRANT OF LICENSE. The SOFTWARE PRODUCT is licensed as follows:

- \* Installation and Use. YAMAHA grants you the right to install and use copies of the SOFTWARE PRODUCT on your computers running validly licensed copies of the operating system for which the SOFTWARE PRODUCT was designed[e.g., Windows(r) 95; Windows NT(r), Windows 3.x etc.].
- \* Backup Copies. You may also make copies of the SOFTWARE PRODUCT as may be necessary for backup and archival purposes.

2. PROHIBITIONS AND RESTRICTIONS

- \* Maintenance of Copyright Notices. You must not remove or alter any copyright notices on all copies of the SOFTWARE PRODUCT.
- \* Distribution. You may not distribute copies of the SOFTWARE PRODUCT to third parties.
- \* Rental. You may not rent, lease, or lend the SOFTWARE PRODUCT.
- \* Prohibition on Reverse Engineering, Decompilation, and Disassembly.

You may not reverse-compile, disassemble, reverse-engineer, or use any other method to convert the SOFTWARE PRODUCT into a human-readable form, nor may you allow another person to do so. The SOFTWARE PRODUCT may not be duplicated, corrected, modified, or disposed of in any other way in part or in whole. The creation of derivative works based on the content of the SOFTWARE PRODUCT is also prohibited.

### 3. TERMINATION.

Without prejudice to any other rights, YAMAHA may terminate this AGREEMENT if you fail to comply with the terms and conditions of this AGREEMENT. In such event, you must destroy all copies of the SOFTWARE PRODUCT.

### 4. COPYRIGHT.

All title, including but not limited to copyrights, in and to the SOFTWARE PRODUCT and any copies thereof are owned by YAMAHA or its suppliers. All title and intellectual property rights in and to the content which may be accessed through use of the SOFTWARE PRODUCT is the property of the respective owner and may be protected by applicable copyright or other intellectual property laws and treaties. This AGREEMENT grants you no rights to use such content. All rights not expressly granted are reserved by YAMAHA.

### 5. NO WARRANTIES AND LIMITATION OF LIABILITY

The SOFTWARE PRODUCT and any related documentation were developed at, and are copyrighted by, YAMAHA. The SOFTWARE PRODUCT is offered "AS IS" and YAMAHA makes no warranty as to its use or performance. THE ENTIRE RISK ARISING OUT OF USE OR PERFORMANCE OF THE SOFTWARE PRODUCT REMAINS WITH YOU.

YAMAHA AND ITS SUPPLIERS DO NOT AND CANNOT WARRANT THE PERFORMANCE OR RESULTS YOU MAY OBTAIN BY USING THE SOFTWARE OR DOCUMENTATION. YAMAHA AND ITS SUPPLIERS MAKE NO WARRANTIES, EXPRESS OR IMPLIED, AS TO NONINFRINGEMENT OF THIRD PARTY RIGHTS, MERCHANTABILITY, OR FITNESS FOR ANY PARTICULAR PURPOSE. IN NO EVENT WILL YAMAHA OR ITS SUPPLIERS BE LIABLE TO YOU FOR ANY CONSEQUENTIAL, INCIDENTAL OR SPECIAL DAMAGES, INCLUDING ANY LOST PROFITS OR LOST SAVINGS, EVEN IF AN YAMAHA REPRESENTATIVE HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, OR FOR ANY CLAIM BY ANY THIRD PARTY.

6. GENERAL.

If any provision of this AGREEMENT is held unenforceable, that provision shall be enforced to the maximum extent permissible so as to give effect the intent of this AGREEMENT, and the remainder of this AGREEMENT shall continue in full force and effect. This AGREEMENT shall be governed by the laws of Japan without reference to conflict of laws principles.