
#### **PC BRAND**

## TRUMP-386 MAINBOARD

**Processor** 80386DX **Processor Speed** 25MHz **Chip Set** C & T Max. Onboard DRAM None Cache None **BIOS** Unidentified **Dimensions** 330mm x 218mm

I/O Options 32-bit external memory card slots (2)

**NPU Options** 80287/80387

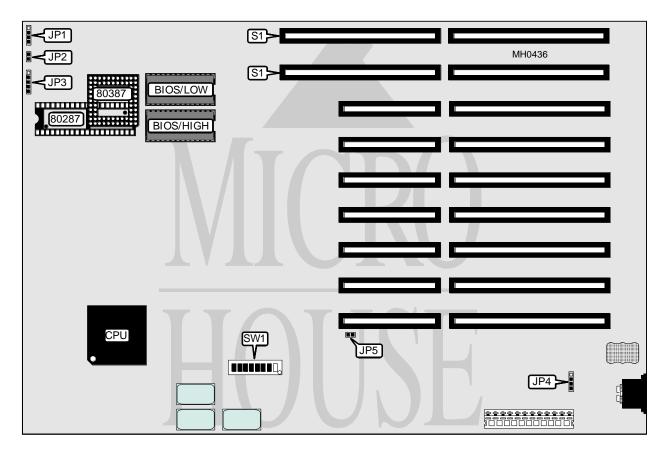

CONNECTIONS			
Purpose	Location	Purpose	Location
Speaker	JP1	External battery	JP4
Reset switch	JP2	Turbo LED	JP5
Power LED & keylock JP3		32-bit external memory cards	S1

Continued on next page . . .

#### **PC BRAND**

## TRUMP-386 MAINBOARD


. . . continued from previous page

USER CONFIGURABLE SETTINGS			
Function	Switch	Position	
í Battery type select internal	SW1/3	On	
Battery type select external	SW1/3	Off	
í Monitor type select color	SW1/6	On	
Monitor type select monochrome	SW1/6	Off	

POWER SIGNAL CONFIGURATION			
Setting	SW1/1	SW1/2	
Power good signal detect from power supply	On	Off	
Power good signal detect from board	Off	On	

CPU SPEED CONFIGURATION			
Speed	SW1/7	SW1/8	
20MHz	On	Off	
25MHz	Off	On	

NPU CONFIGURATION			
Type	SW1/4	SW1/5	
None	On	Off	
80287	On	Off	
80387	Off	On	

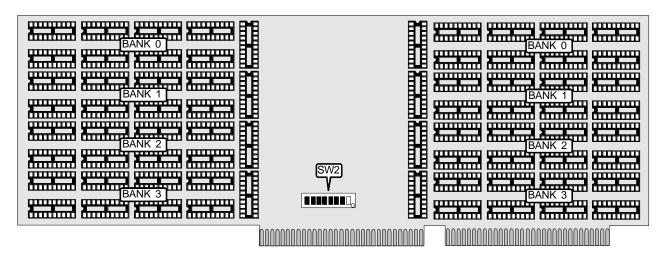

Continued on next page . . .

## **PC BRAND**

# TRUMP-386 MAINBOARD

. . . continued from previous page

DRAM CONFIGURATION				
Size	Bank 0	Bank 1	Bank 2	Bank 3
2MB	(18) 44256	NONE	NONE	NONE
4MB	(18) 44256	(18) 44256	NONE	NONE
6MB	(18) 44256	(18) 44256	(18) 411000	NONE
8MB	(18) 44256	(18) 44256	(18) 411000	(18) 411000
8MB	(18) 441000	NONE	NONE	NONE
10MB	(18) 441000	(18) 411000	NONE	NONE
12MB	(18) 441000	(18) 411000	(18) 411000	NONE
14MB	(18) 441000	(18) 411000	(18) 411000	(18) 411000
16MB	(18) 441000	(18) 441000	NONE	NONE

Note: Two memory cards may be installed.

> On the first card, SW2/switches 1-4 should be closed, and SW2/switches 5-8 should be open. On the second card, SW2/switches 1-4 should be open, and SW2/switches 5-8 should be closed.