
SINGA

286-NEAT

80286 **Processor Processor Speed** 8/16/20MHz **Chip Set C&TNEAT** Max. Onboard DRAM 8MB Cache None **BIOS** CEI

330mm x 219mm **Dimensions**

I/O Options None **NPU Options** 80287

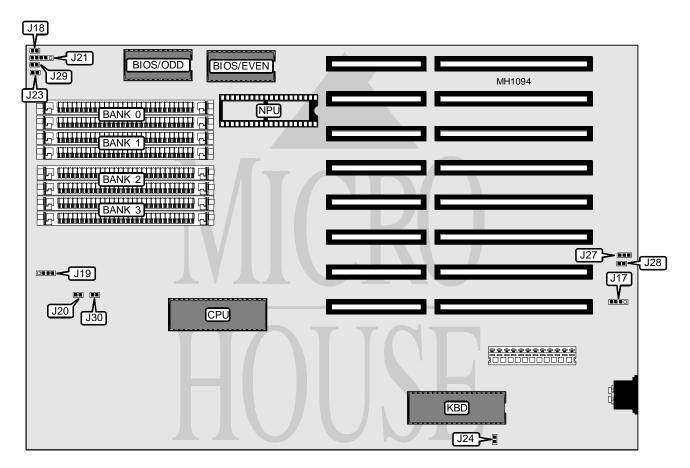

CONNECTIONS						
Purpose	Location	Purpose	Location			
External battery	J17	Power LED & keylock	J21			
Reset switch	J18	Turbo LED	J23			
Speaker	J19	Turbo switch	J29			

Continued on next page . . .

SINGA 286-NEAT

. . . continued from previous page

USER CONFIGURABLE SETTINGS					
Function	Jumper	Position			
í CPU speed select switchable at turbo switch	J20	pins 1 & 2 closed			
CPU speed select switchable at keyboard	J20	pins 2 & 3 closed			
í Monitor type select color	J24	Closed			
Monitor type select monochrome	J24	Open			
í Battery type select internal	J27	pins 1 & 2 closed			
Battery type select external	J27	Open			
í Battery charging mode select normal	J28	pins 1 & 2 closed			
Battery charging mode select fast	J28	pins 2 & 3 closed			
í Factory configured - do not alter	J30	Open			

DRAM CONFIGURATION					
Size	Bank 0	Bank 1	Bank 2	Bank 3	
1MB	(2) 256K x 9	(2) 256K x 9	NONE	NONE	
2MB	(2) 256K x 9				
4MB	(2) 1M x 9	(2) 1M x 9	NONE	NONE	
8MB	(2) 1M x 9				