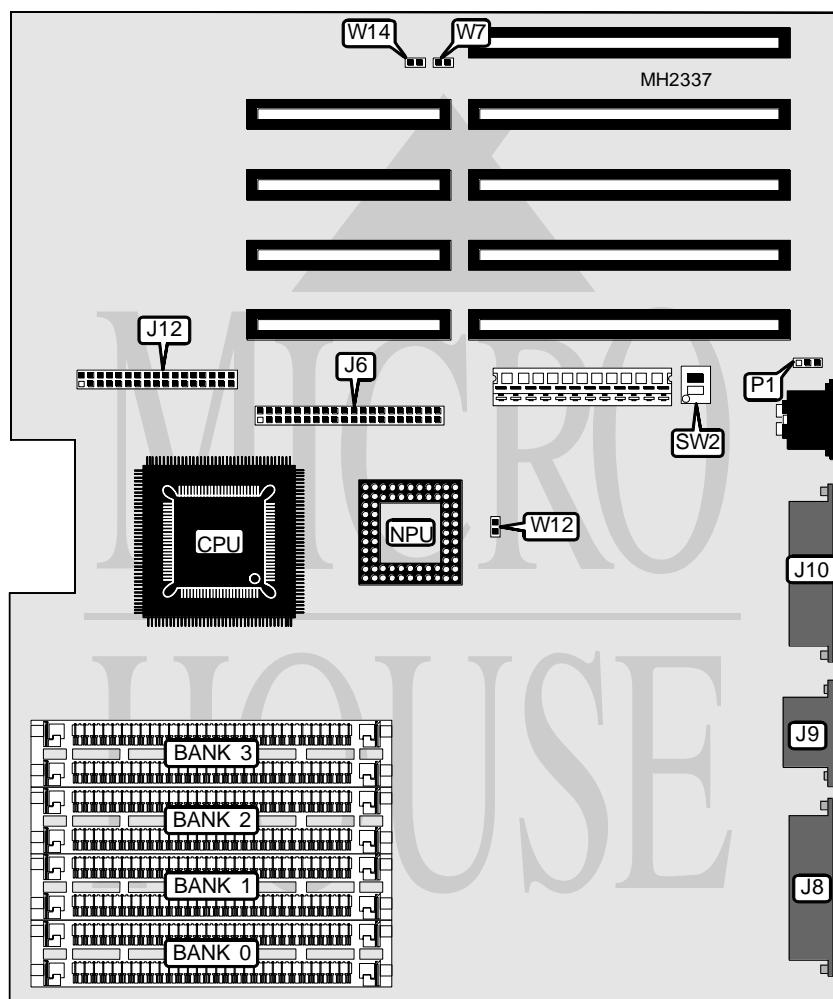


**MAGNAVOX****386 SX**

<b>Processor</b>	80386SX
<b>Processor Speed</b>	8/16MHz
<b>Chip Set</b>	Unidentified
<b>Max. Onboard DRAM</b>	8MB
<b>Cache</b>	None
<b>BIOS</b>	Unidentified
<b>Dimensions</b>	270mm x 218mm
<b>I/O Options</b>	Floppy drive interface, IDE interface, parallel port, serial ports (2)
<b>NPU Options</b>	80387SX

**CONNECTIONS**

Purpose	Location	Purpose	Location
IDE interface	J6	Parallel port	J10
Serial port 1	J8	Floppy drive interface	J12
Serial port 2	J9	External battery	P1

*Continued on next page...*

**MAGNAVOX****386 SX***... continued from previous page***USER CONFIGURABLE SETTINGS**

Function	Jumper/Switch	Position
í Factory configured - do not alter	SW2/1	N/A
í Monitor type select color	SW2/2	On
Monitor type select monochrome	SW2/2	Off
í IDE interface enabled	W7	Open
IDE interface disabled	W7	Closed
í NPU enabled	W12	Open
NPU disabled	W12	Closed
í Floppy drive interface enabled	W14	Open
Floppy drive interface disabled	W14	Closed

**DRAM CONFIGURATION**

Size	Bank 0	Bank 1	Bank 2	Bank 3
1MB	(2) 256K x 9	(2) 256K x 9	NONE	NONE
1.5MB	(2) 256K x 9	(2) 256K x 9	(2) 256K x 9	NONE
2MB	(2) 256K x 9			
2.5MB	(2) 1M x 9	(2) 256K x 9	NONE	NONE
3MB	(2) 256K x 9	(2) 256K x 9	(2) 1M x 9	NONE
4MB	(2) 1M x 9	(2) 1M x 9	NONE	NONE
4.5MB	(2) 1M x 9	(2) 1M x 9	(2) 256K x 9	NONE
5MB	(2) 256K x 9	(2) 256K x 9	(2) 1M x 9	(2) 1M x 9
6MB	(2) 1M x 9	(2) 1M x 9	(2) 1M x 9	NONE
8MB	(2) 1M x 9			