


# ICL ERGOPRO D5/60 REV. 1

|                          |  |
|--------------------------|--|
| <b>Processor</b>         | Pentium  |
| <b>Processor Speed</b>   | 60MHz  |
| <b>Chip Set</b>          | OPT1   |
| <b>Max. Onboard DRAM</b> | 128MB  |
| <b>Cache</b>             | 512KB  |
| <b>BIOS</b>              | ICL  |
| <b>Dimensions</b>        | 432mm x 368mm  |
| <b>I/O Options</b>       | PS/2 mouse port, parallel port, serial ports (2), VGA port, VGA feature connector, floppy drive interfaces (2), SCSI interface (2), microphone port, headphone port, CD ROM audio port |
| <b>NPU Options</b>       | None   |

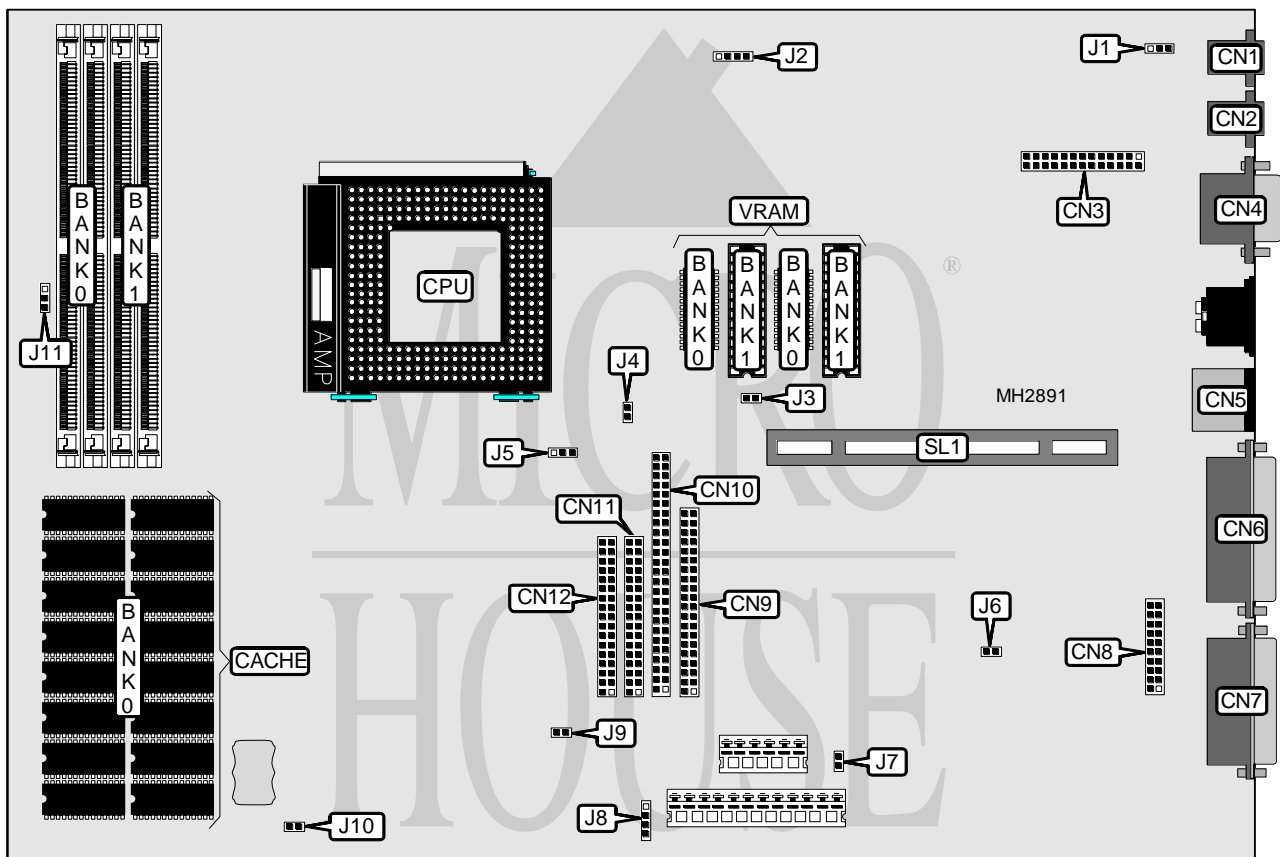

Continued on next page . . .

# ICL ERGOPRO D5/60 REV. 1

... continued from previous page

| CONNECTIONS            |          |                        |          |
|------------------------|----------|------------------------|----------|
| Purpose                | Location | Purpose                | Location |
| Microphone port        | CN1      | Floppy drive interface | CN12     |
| Headphone port         | CN2      | CR ROM audio connector | J1       |
| VGA feature connector  | CN3      | IDE interface LED      | J2       |
| VGA port               | CN4      | Chassis fan power      | J4       |
| PS/2 mouse port        | CN5      | Chassis fan power      | J7       |
| SCSI port              | CN6      | Front panel connector  | J8       |
| Parallel port          | CN7      | Configuration lock     | J9       |
| Serial port            | CN8      | Reset switch           | J10      |
| SCSI connector         | CN10     | Speaker                | J11      |
| Floppy drive interface | CN11     | Riser Card             | SL1      |

| USER CONFIGURABLE SETTINGS          |        |                   |
|-------------------------------------|--------|-------------------|
| Function                            | Jumper | Position          |
| í Factory configured - do not alter | CN9    | N/A               |
| í On board VGA enabled              | J3     | Open              |
| On board VGA disabled               | J3     | Closed            |
| í CMOS memory normal operation      | J5     | pins 1 & 2 closed |
| CMOS memory clear                   | J5     | pins 2 & 3 closed |
| í Boot block disabled               | J6     | Open              |
| Boot block enabled                  | J6     | Closed            |

| DRAM CONFIGURATION |             |             |
|--------------------|-------------|-------------|
| Size               | Bank 0      | Bank 1      |
| 8MB                | (2) 1M x 36 | NONE        |
| 16MB               | (2) 1M x 36 | (2) 1M x 36 |
| 16MB               | (2) 2M x 36 | NONE        |
| 24MB               | (2) 1M x 36 | (2) 2M x 36 |
| 32MB               | (2) 2M x 36 | (2) 2M x 36 |
| 32MB               | (2) 4M x 36 | NONE        |
| 40MB               | (2) 1M x 36 | (2) 4M x 36 |
| 48MB               | (2) 2M x 36 | (2) 4M x 36 |
| 64MB               | (2) 4M x 36 | (2) 4M x 36 |
| 64MB               | (2) 8M x 36 | NONE        |
| 72MB               | (2) 1M x 36 | (2) 8M x 36 |
| 80MB               | (2) 2M x 36 | (2) 8M x 36 |
| 96MB               | (2) 4M x 36 | (2) 8M x 36 |
| 128MB              | (2) 8M x 36 | (2) 8M x 36 |

| CACHE CONFIGURATION                                       |              |
|---|--------------|
| Size  | Bank 0       |
| 512KB   | (16) 32K x 8 |
| Note: Cache is factory installed and is not configurable. |              |

Continued on next page. . .

---

ICL  
ERGOPRO D5/60 REV. 1

... continued from previous page

| VRAM CONFIGURATION |               |               |
|--------------------|---------------|---------------|
| Size               | Bank 0        | Bank 1        |
| 1MB                | (2) 256K x 16 | NONE          |
| 2MB                | (2) 256K x 16 | (2) 256K x 16 |