


CALIBER COMPUTER

80386-33A

Configuration

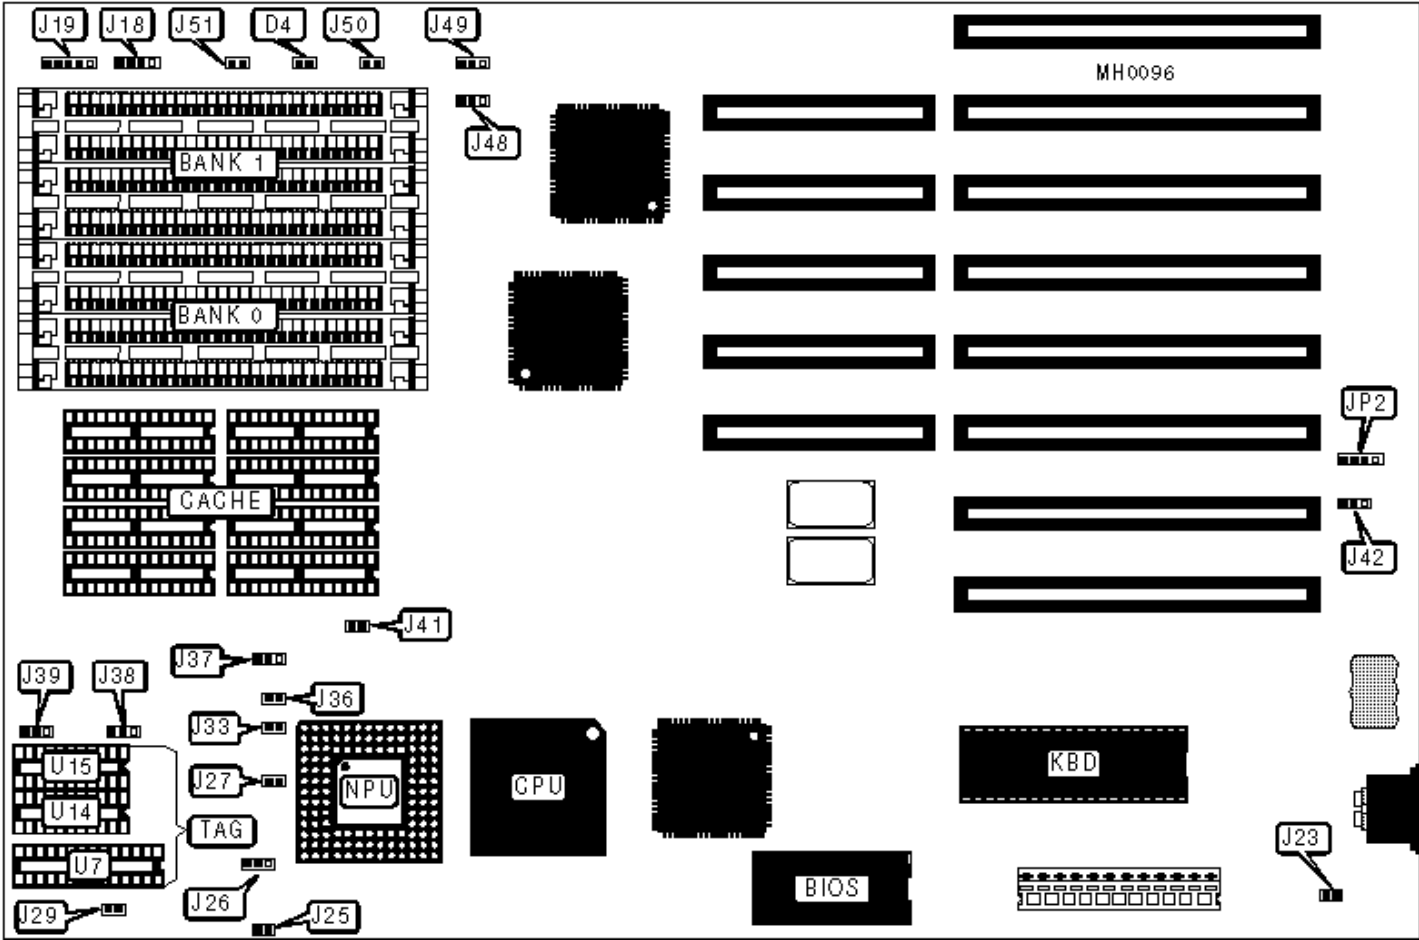

CONNECTIONS

Purpose	Location	Purpose	Location
Turbo LED	D4	Turbo switch	J50
Speaker	J18	Reset switch	J51
Power LED & keylock	J19	External battery	JP2

USER CONFIGURABLE SETTINGS

Function	Jumper	Position
» Monitor type select color	J23	Closed
Monitor type select monochrome	J23	Open
» CMOS memory normal operation	J42	pins 2 & 3 closed
CMOS memory clear	J42	pins 1 & 2 closed

DRAM CONFIGURATION

Size	Bank 0	Bank 1
1MB	(4) 256K x 9	NONE
2MB	(4) 256K x 9	(4) 256K x 9
4MB	(4) 1M x 9	NONE
8MB	(4) 1M x 9	(4) 1M x 9
16MB	(4) 4M x 9	NONE
32MB	(4) 4M x 9	(4) 4M x 9

CACHE CONFIGURATION

Size	Bank 0	Bank 1	TAG (U7)	TAG (U14 & U15)
64KB	(4) 8K x 8	(4) 8K x 8	NONE	(2) 16K x 4
128KB	(4) 32K x 8	NONE	(1) 32K x 8	NONE

CACHE JUMPER CONFIGURATION

Size	J25	J26	J27	J29	J33	J34	J36	J37	J38	J39	J41	J52
64KB	Open	1 & 2	1 & 2	1 & 2	1 & 2	1 & 2	Open	2 & 3	1 & 2	1 & 2	Open	1 & 2
128KB	1 & 2	2 & 3	1 & 2	1 & 2	Open	1 & 2	1 & 2	1 & 2	2 & 3	2 & 3	1 & 2	2 & 3

Note: Pins designated should be in the closed position.