




PERSONAL COMPUTER SYSTEM BOARD

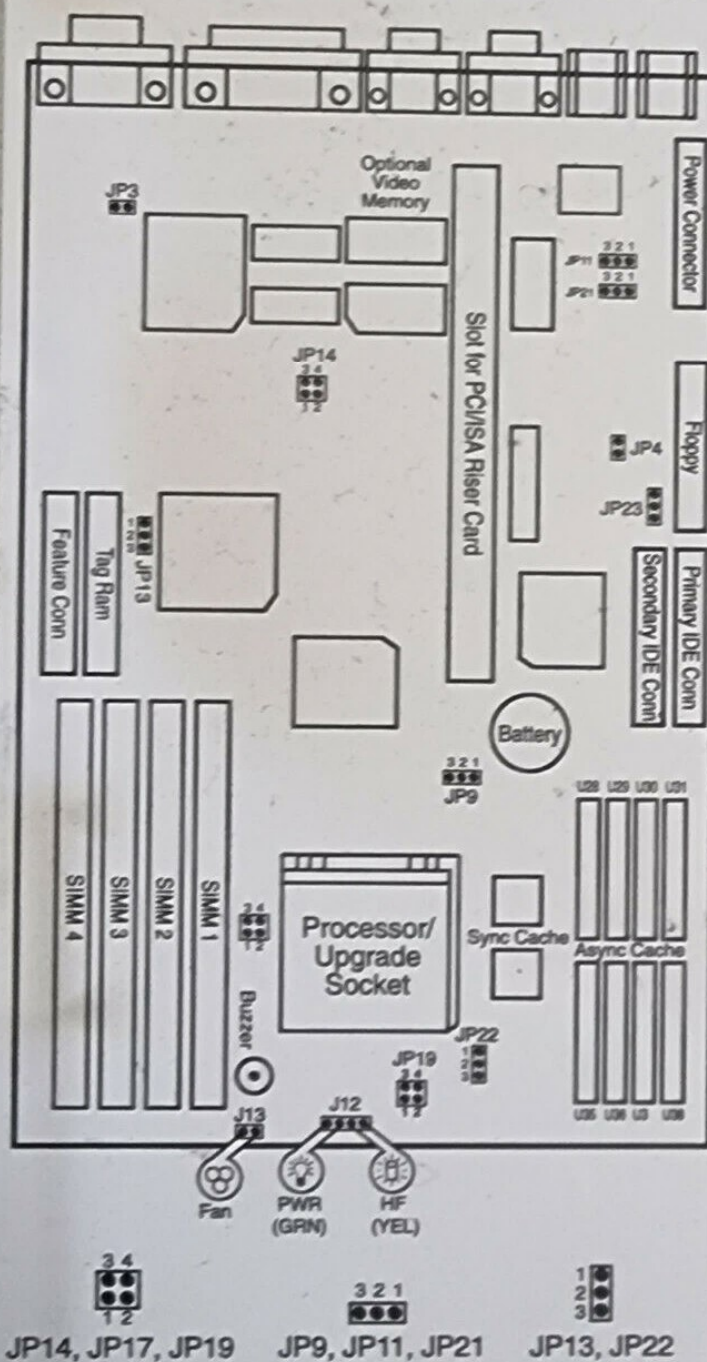

JUMPER TABLE

	JUMPERS	SETTING	
75/50	JP 14	SHORT 1-2, OPEN 3-4	
	JP 17	OPEN 1-2, OPEN 3-4	
90/60	JP 14	OPEN 1-2, SHORT 3-4	
	JP 17	OPEN 1-2, OPEN 3-4	
100/66	JP 14	SHORT 1-2, SHORT 3-4	
	JP 17	OPEN 1-2, OPEN 3-4	
120/60	JP 14	OPEN 1-2, SHORT 3-4	
	JP 17	SHORT 1-2, OPEN 3-4	
133/66	JP 14	SHORT 1-2, SHORT 3-4	
	JP 17	SHORT 1-2, OPEN 3-4	
166/66	JP 14	SHORT 1-2, SHORT 3-4	
	JP 17	SHORT 1-2, SHORT 3-4	
CACHE MEMORY SIZE	JUMPER	SETTING	
NONE OR 256KB	JP 13	SHORT 1 2	
512KB	JP 13	SHORT 2 3	
CLEAR CMOS	JUMPER	SETTING	
NORMAL OPERATION	J9	SHORT 1-2	
CMOS CLEAR	J9	SHORT 2-3	
ON BOARD VIDEO	JUMPER	SETTING	
NORMAL OPERATION	JP 3	SHORT	
DISABLE VIDEO	JP 3	OPEN	
ON BOARD MOUSE	JUMPER	SETTING	
NORMAL OPERATION	JP 4	SHORT	
DISABLE MOUSE	JP 4	OPEN	
FLASH PROGRAM	JUMPER	SETTING	
NORMAL OPERATION	JP 11	SHORT 1-2	
DISABLE PROGRAM	JP 11	SHORT 2-3	
FDD WRITE PROTECT	JUMPER	SETTING	
NORMAL OPERATION	JP 21	SHORT	
DISABLE FDD WRITE	JP 21	OPEN	
CACHE TYPE	JUMPER	SETTING	
ASYNC	JP 22	SHORT 1-2	
SYNC	JP 22	SHORT 2-3	

MEMORY TABLE

Bank 0		Bank 1		TOTAL
SIMM 1	SIMM 2	SIMM 3	SIMM 4	
4MB	—	—	—	4MB
4MB	4MB	—	—	8MB
4MB	4MB	4MB	4MB	16MB
8MB	8MB	—	—	16MB
8MB	8MB	8MB	8MB	32MB
16MB	16MB	—	—	32MB
8MB	8MB	16MB	16MB	48MB
16MB	16MB	16MB	16MB	64MB
32MB	32MB	—	—	64MB
32MB	32MB	4MB	4MB	72MB
32MB	32MB	8MB	8MB	80MB
32MB	32MB	16MB	16MB	96MB
32MB	32MB	32MB	32MB	128MB

PLEASE REFER TO INSTALLING OPTIONS MANUAL FOR DEVICE
INSTALLATION AND ADDITIONAL MEMORY CONFIGURATIONS

